

# \*R9T96 & \*D9T96

## TWO-STAGE GAS FURNACES

(Type FSP CATEGORY IV Direct  
or Non Direct Vent Air Furnace)

(Type FSP CATÉGORIE IV Direct  
ou four à air souffl' non direct)

These furnaces comply with requirements embodied in the American National Standard / National Standard of Canada ANSI Z21.47-CSA-2.3 Gas Fired Central Furnaces.



**INSTALLER: Affix all manuals adjacent to the unit.**

As a professional installer you have an obligation to know the product better than the customer. This includes all safety precautions and related items.

Prior to actual installation, thoroughly familiarize yourself with this Instruction Manual. Pay special attention to all safety warnings. Often during installation or repair it is possible to place yourself in a position which is more hazardous than when the unit is in operation.

Remember, it is your responsibility to install the product safely and to know it well enough to be able to instruct a customer in its safe use.

Safety is a matter of common sense...a matter of thinking before acting. Most dealers have a list of specific good safety practices...follow them.

The precautions listed in this Installation Manual are intended as supplemental to existing practices. However, if there is a direct conflict between existing practices and the content of this manual, the precautions listed here take precedence.



### WARNING

THIS FURNACE MAY BE PAIRED WITH A COOLING UNIT THAT USES R-32 REFRIGERANT. IF THE COOLING UNIT PAIRED WITH THIS FURNACE DOES NOT USE R-32, THE R-32 FUNCTION IN THE FURNACE CONTROL BOARD NEEDS TO BE TURNED OFF. PLEASE SEE THE ELECTRICAL AND THE R-32 SECTIONS FOR MORE DETAILS.

REFRIGERANT SYSTEMS OTHER THAN R-410A OR R32 MAY REQUIRE AN ADDITIONAL MITIGATION CONTROL BOARD. REFER TO THE INSTALLATION MANUAL OF THE INDOOR EVAPORATOR COIL TO DETERMINE INSTALLATION REQUIREMENTS FOR THAT SUPPLIER'S REFRIGERANT DETECTION SYSTEM.



### RECOGNIZE THIS SYMBOL AS A SAFETY PRECAUTION.

\*NOTE: Please contact your distributor or our website for the applicable Specification Sheet referred to in this manual.



### WARNING

ONLY PERSONNEL THAT HAVE BEEN TRAINED TO INSTALL, ADJUST, SERVICE, MAINTENANCE OR REPAIR (HEREINAFTER, "SERVICE") THE EQUIPMENT SPECIFIED IN THIS MANUAL SHOULD SERVICE THE EQUIPMENT.

THIS EQUIPMENT IS NOT INTENDED FOR USE BY PERSONS (INCLUDING CHILDREN) WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES, OR LACK OF EXPERIENCE AND KNOWLEDGE, UNLESS THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE BY A PERSON RESPONSIBLE FOR THEIR SAFETY.

CHILDREN SHOULD BE SUPERVISED TO ENSURE THAT THEY DO NOT PLAY WITH THE EQUIPMENT.


THE MANUFACTURER WILL NOT BE RESPONSIBLE FOR ANY INJURY OR PROPERTY DAMAGE ARISING FROM IMPROPER SUPERVISION, SERVICE OR SERVICE PROCEDURES. IF YOU SERVICE THIS UNIT, YOU ASSUME RESPONSIBILITY FOR ANY INJURY OR PROPERTY DAMAGE WHICH MAY RESULT. IN ADDITION, IN JURISDICTIONS THAT REQUIRE ONE OR MORE LICENSES TO SERVICE THE EQUIPMENT SPECIFIED IN THIS MANUAL, ONLY LICENSED PERSONNEL SHOULD SERVICE THE EQUIPMENT. IMPROPER SUPERVISION, INSTALLATION, ADJUSTMENT, SERVICING, MAINTENANCE OR REPAIR OF THE EQUIPMENT SPECIFIED IN THIS MANUAL, OR ATTEMPTING TO INSTALL, ADJUST, SERVICE OR REPAIR THE EQUIPMENT SPECIFIED IN THIS MANUAL WITHOUT PROPER SUPERVISION OR TRAINING MAY RESULT IN PRODUCT DAMAGE, PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.



### WARNING

DO NOT BYPASS SAFETY DEVICES.

### 90% HEX

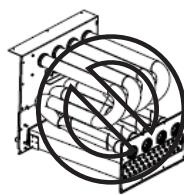

DO NOT LIFT  
PRODUCT USING  
HEAT EXCHANGER



# Table of Contents

|  |           |
|--|-----------|
| <b>SAFETY CONSIDERATIONS .....</b>                       | <b>2</b>  |
| <b>PRODUCT DESCRIPTION .....</b>                         | <b>4</b>  |
| <b>PRODUCT APPLICATION.....</b>                          | <b>4</b>  |
| <b>LOCATION REQUIREMENTS &amp; CONSIDERATIONS .....</b>  | <b>5</b>  |
| <b>COMBUSTION &amp; VENTILATION REQUIREMENTS .....</b>   | <b>9</b>  |
| <b>INSTALLATION POSITIONS .....</b>                      | <b>9</b>  |
| <b>HORIZONTAL APPLICATIONS &amp; CONSIDERATIONS.....</b> | <b>10</b> |
| <b>CONDENSATE DRAIN LINES &amp; DRAIN TRAP .....</b>     | <b>20</b> |
| <b>ELECTRICAL CONNECTIONS.....</b>                       | <b>25</b> |
| <b>GAS SUPPLY AND PIPING .....</b>                       | <b>29</b> |
| <b>PROPANE GAS/HIGH ALTITUDE INSTALLATIONS.....</b>      | <b>29</b> |
| <b>CIRCULATING AIR &amp; FILTERS .....</b>               | <b>32</b> |
| <b>STARTUP PROCEDURE &amp; ADJUSTMENT .....</b>          | <b>34</b> |
| <b>R-32 INFORMATION.....</b>                             | <b>37</b> |
| <b>AIRFLOW TABLES .....</b>                              | <b>38</b> |
| <b>NORMAL SEQUENCE OF OPERATION .....</b>                | <b>42</b> |
| <b>OPERATIONAL CHECKS .....</b>                          | <b>44</b> |
| <b>SAFETY CIRCUIT DESCRIPTION .....</b>                  | <b>44</b> |
| <b>TROUBLESHOOTING .....</b>                             | <b>44</b> |
| <b>MAINTENANCE .....</b>                                 | <b>45</b> |
| <b>BEFORE LEAVING AN INSTALLATION .....</b>              | <b>46</b> |
| <b>STATUS CODES .....</b>                                | <b>47</b> |
| <b>TROUBLESHOOTING CHART.....</b>                        | <b>49</b> |
| <b>WIRING DIAGRAM.....</b>                               | <b>52</b> |
| <b>START UP CHECKLIST.....</b>                           | <b>54</b> |



## WARNING

### FIRE OR EXPLOSION HAZARD

FAILURE TO FOLLOW THE SAFETY WARNINGS EXACTLY COULD RESULT IN SERIOUS INJURY, DEATH OR PROPERTY DAMAGE.

NEVER TEST FOR GAS LEAKS WITH AN OPEN FLAME. USE A COMMERCIAL SOAP SOLUTION MADE SPECIFICALLY FOR THE DETECTION OF LEAKS TO CHECK ALL CONNECTIONS. A FIRE OR EXPLOSION MAY RESULT CAUSING PROPERTY DAMAGE, PERSONAL INJURY OR LOSS OF LIFE.



## AVERTISSEMENT

### RISQUE D'INCENDIE OU D'EXPLOSION

SI LES CONSIGNES DE SÉCURITÉ NE SONT PAS SUIVIES À LA LETTRE, CELA PEUT ENTRAÎNER LA MORT, DE GRAVES BLESSURES OU DES DOMMAGES MATÉRIELS.

NE JAMAIS VÉRIFIER LA PRÉSENCE DE FUITES DE GAZ AU MOYEN D'UNE FLAMME NUE. VÉRIFIER TOUS LES RACCORDS EN UTILISANT UNE SOLUTION SAVONNEUSE COMMERCIALE CONÇUE SPÉCIALEMENT POUR LA DÉTECTION DE FUITES. UN INCENDIE OU UNE EXPLOSION RISQUE DE SE PRODUIRE, CE QUI PEUT ENTRAÎNER LA MORT, DES BLESSURES OU DES DOMMAGES MATÉRIELS.

## SAFETY CONSIDERATIONS

Adhere to the following warnings and cautions when installing, adjusting, altering, servicing, or operating the furnace. To ensure proper installation and operation, thoroughly read this manual for specifics pertaining to the installation and application of this product.

This furnace is manufactured for use with natural gas. It may be field converted to operate on L.P. gas by using the appropriate L.P. conversion kit listed in the **PROPANE GAS/ HIGH ALTITUDE INSTALLATIONS** section of this manual.

Install this furnace only in a location and position as specified in **LOCATION REQUIREMENTS & CONSIDERATIONS** section and **INSTALLATION POSITIONS** section of this manual.

Provide adequate combustion and ventilation air to the furnace as specified in **COMBUSTION & VENTILATION AIR REQUIREMENTS** section of this manual.

Combustion products must be discharged to the outdoors. Connect this furnace to an approved vent system only, as specified in **VENT/FLUE PIPE & COMBUSTION AIR PIPE** section of this manual.

Never test for gas leaks with an open flame. Use a commercially available soap solution made specifically for the detection of leaks to check all connections, as specified in **GAS SUPPLY AND PIPING** section of this manual.

Always install a furnace to operate within the furnace's intended temperature-rise range with a duct system which has external static pressure within the allowable range, as specified on the furnace rating plate and **OPERATIONAL CHECKS** section of these instructions.

When a furnace is installed so that supply ducts carry air circulated by the furnace to areas outside the space containing the furnace, the return air shall also be handled by duct(s) sealed to the furnace casing and terminating outside the space containing the furnace.



## CAUTION

### FROZEN AND BURST WATER PIPE HAZARD

FAILURE TO PROTECT AGAINST THE RISK OF FREEZING MAY RESULT IN PROPERTY DAMAGE. SPECIAL PRECAUTIONS MUST BE MADE IF INSTALLING FURNACE IN AN AREA WHICH MAY DROP BELOW FREEZING. THIS CAN CAUSE IMPROPER OPERATION OR DAMAGE TO EQUIPMENT. IF THE FURNACE ENVIRONMENT HAS THE POTENTIAL OF FREEZING, THE DRAIN TRAP MUST BE PROTECTED. THE USE OF ELECTRIC HEAT TAPE AND/OR PIPE INSULATION IS RECOMMENDED FOR THESE INSTALLATIONS.

A gas-fired furnace for installation in a residential garage must be installed as specified in the **LOCATION REQUIREMENTS AND CONSIDERATIONS** section of this manual.

This furnace may be used as a construction site heater only if certain conditions are met. These conditions are listed in the **PRODUCT APPLICATION** section of this manual.



## WARNING

**TO PREVENT PERSONAL INJURY OR DEATH DUE TO IMPROPER INSTALLATION, ADJUSTMENT, ALTERATION, SERVICE OR MAINTENANCE, REFER TO THIS MANUAL. FOR ADDITIONAL ASSISTANCE OR INFORMATION, CONSULT A QUALIFIED INSTALLER, SERVICER AGENCY OR THE GAS SUPPLIER.**



## WARNING

**IF THE INFORMATION IN THESE INSTRUCTIONS IS NOT FOLLOWED EXACTLY, A FIRE OR EXPLOSION MAY RESULT CAUSING PROPERTY DAMAGE, PERSONAL INJURY OR LOSS OF LIFE.**

**- DO NOT STORE OR USE GASOLINE OR OTHER FLAMMABLE VAPORS AND LIQUIDS IN THE VICINITY OF THIS OR ANY OTHER APPLIANCE.**

**- WHAT TO DO IF YOU SMELL GAS:**

**DO NOT TRY TO LIGHT ANY APPLIANCE.**

**DO NOT TOUCH ANY ELECTRICAL SWITCH; DO NOT USE ANY PHONE IN YOUR BUILDING.**

**IMMEDIATELY CALL YOUR GAS SUPPLIER FROM A NEIGHBOR'S PHONE. FOLLOW THE GAS SUPPLIER'S INSTRUCTIONS. IF YOU CANNOT REACH YOUR GAS SUPPLIER, CALL THE FIRE DEPARTMENT.**

**- INSTALLATION AND SERVICE MUST BE PERFORMED BY A QUALIFIED INSTALLER, SERVICE AGENCY OR THE GAS SUPPLIER.**



## WARNING

**HEATING UNIT SHOULD NOT BE UTILIZED WITHOUT REASONABLE, ROUTINE, INSPECTION, MAINTENANCE AND SUPERVISION. IF THE BUILDING IN WHICH ANY SUCH DEVICE IS LOCATED WILL BE VACANT, CARE SHOULD BE TAKEN THAT SUCH DEVICE IS ROUTINELY INSPECTED, MAINTAINED AND MONITORED. IN THE EVENT THAT THE BUILDING MAY BE EXPOSED TO FREEZING TEMPERATURES AND WILL BE VACANT, ALL WATER-BEARING PIPES SHOULD BE DRAINED, THE BUILDING SHOULD BE PROPERLY WINTERIZED, AND THE WATER SOURCE CLOSED. IN THE EVENT THAT THE BUILDING MAY BE EXPOSED TO FREEZING TEMPERATURES AND WILL BE VACANT, ANY HYDRONIC COIL UNITS SHOULD BE DRAINED AS WELL AND, IN SUCH CASE, ALTERNATIVE HEAT SOURCES SHOULD BE UTILIZED.**



## WARNING

**TO PREVENT POSSIBLE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH DUE TO ELECTRICAL SHOCK, THE FURNACE MUST BE LOCATED TO PROTECT THE ELECTRICAL COMPONENTS FROM WATER.**

In the event of damage the consignee should:

1. Make a notation on delivery receipt of any visible damage to shipment or container.
2. Notify the carrier promptly and request an inspection.
3. With concealed damage, the carrier must be notified as soon as possible - preferably within five days.
4. File the claim with the following support documents within a nine-month statute of limitations.

- Original or certified copy of the Bill of Lading, or indemnity bond.
- Original paid freight bill or indemnity in lieu thereof.
- Original or certified copy of the invoice, showing trade and other discounts or reductions.
- Copy of the inspection report issued by the carrier's representative at the time damage is reported to carrier.

The carrier is responsible for making prompt inspection of damage and for a thorough investigation of each claim. The distributor or manufacturer will not accept claims from dealers for transportation damage.



## WARNING

**SHOULD OVERHEATING OCCUR OR THE GAS SUPPLY FAIL TO SHUT OFF, TURN OFF THE MANUAL GAS SHUTOFF VALVE EXTERNAL TO THE FURNACE BEFORE TURNING OFF THE ELECTRICAL SUPPLY.**



## WARNING

**POSSIBLE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH DUE TO FIRE, EXPLOSION, SMOKE, SOOT, CONDENSATION, ELECTRICAL SHOCK OR CARBON MONOXIDE MAY RESULT FROM IMPROPER INSTALLATION, REPAIR OPERATION, OR MAINTENANCE OF THIS PRODUCT.**

## ELECTROSTATIC DISCHARGE (ESD)

### PRECAUTIONS

**NOTE:** Discharge your body's static electricity before touching unit. An electrostatic discharge can adversely affect electrical components.

Use the following precautions during furnace installation and servicing to protect the integrated control module from damage. By putting the furnace, the control, and the person at the same electrostatic potential, these steps will help avoid exposing the integrated control module to electrostatic discharge. This procedure is applicable to both installed and non-installed (ungrounded) furnaces.

1. Disconnect all power to the furnace. Do not touch the integrated control module or any wire connected to the control prior to discharging your body's electrostatic charge to ground.
2. Firmly touch a clean, unpainted, metal surface of the furnace near the control. Any tools held in a person's hand during grounding will be discharged.
3. Service integrated control module or connecting wiring following the discharge process in step 2. Use caution not to recharge your body with static electricity;

## SHIPPING INSPECTION

All units are securely packed in shipping containers tested according to International Safe Transit Association specifications. The carton must be checked upon arrival for external damage. If damage is found, a request for inspection by the carrier's agent must be made in writing immediately.

The furnace must be carefully inspected on arrival for damage and bolts or screws which may have come loose in transit.

(i.e., do not move or shuffle your feet, do not touch ungrounded objects, etc.). If you come in contact with an ungrounded object, repeat step 2 before touching control or wires.

4. Discharge your body to ground before removing a new control from its container. Follow steps 1 through 3 if installing the control on a furnace. Return any old or new controls to their containers before touching any ungrounded object.

## TO THE INSTALLER

Before installing this unit, please read this manual thoroughly to familiarize yourself with specific items which must be adhered to, including but not limited to: unit maximum external static pressure, gas pressures, BTU input rating, proper electrical connections, circulating air temperature rise, minimum or maximum CFM, and motor speed connections.



### WARNING

**TO PREVENT PROPERTY DAMAGE, PERSONAL INJURY OR DEATH DUE TO FIRE, DO NOT INSTALL THIS FURNACE IN A MOBILE HOME, TRAILER, OR RECREATIONAL VEHICLE.**

**NOTE: THIS UNIT SHOULD BE INSTALLED IN A MANNER SO THAT IT IS NOT ACCESSIBLE TO THE PUBLIC.**

## PRODUCT DESCRIPTION

### FEATURES

The \*R9T96 furnace may be installed upflow or horizontally with left or right side down. The \*D9T96 furnace may be installed downflow or horizontally with left or right side down. \*R9T96 & \*D9T96 two-stage gas furnaces features a multi-speed ECM indoor fan motor, two heating inputs (W1 & W2), two cooling inputs (Y1/Y & Y2) and a two stage gas valve. A single stage heating thermostat may also be used in conjunction with timed transition to high fire by the furnace integrated control board.

## PRODUCT APPLICATION

This furnace is primarily designed for residential home-heating applications. It is NOT designed or certified for use in mobile homes, trailers or recreational vehicles. Neither is it designed or certified for outdoor applications. The furnace **must** be installed indoors (i.e., attic space, crawl space, or garage area provided the garage area is enclosed with an operating door).

This furnace can be used in the following non-industrial commercial applications:

Schools, Office buildings, Churches, Retail stores, Nursing homes, Hotels/motels, Common or office areas

In such applications, the furnace must be installed with the following stipulations:

- It must be installed per the installation instructions

provided and per local and national codes.

- It must be installed indoors in a building constructed on site.
- It must be part of a ducted system and not used in a free air delivery application.
- It must not be used as a "make-up" air unit.
- It must be installed as a two-pipe system for combustion air.
- All other warranty exclusions and restrictions apply. This furnace is an ETL dual-certified appliance and is appropriate for use with natural or propane gas (**NOTE:** If using propane, a propane conversion kit is required).


Dual certification means that the combustion air inlet pipe is optional and the furnace can be vented as a:

Non-direct vent (single pipe) central forced air furnace in which combustion air is taken from the installation area or from air ducted from the outside or,

Direct vent (dual pipe) central forced air furnace in which all combustion air supplied directly to the furnace burners through a special air intake system outlined in these instructions.

This furnace may be used as a construction site heater **ONLY** if all of the following conditions are met:

- The vent system is permanently installed per these installation instructions.
- A room thermostat is used to control the furnace. Fixed jumpers that provide continuous heating CANNOT be used and can cause long term equipment damage. Bi-metal thermostats, or any thermostat affected by vibration must not be used during construction.
- Return air ducts are provided and sealed to the furnace.
- A return air temperature range between 60°F (16°C) and 80°F (27°C) is maintained.
- MERV 11 air filter(s) are installed in the system and inspected daily and replaced as needed during construction and upon completion of construction.
- The input rate and temperature rise are set per the furnace rating plate.
- The furnace must be installed as a two pipe system, using 100% outside air for combustion during construction.
- The furnace heat exchanger, components, duct system, air filters and evaporator coils are thoroughly cleaned following final construction clean up by a qualified person.
- All furnace operating conditions (including ignition, input rate, temperature rise and venting) are verified by a qualified person according to these installation instructions.
- Furnace doors must be in place on the furnace while the furnace is operating in any mode.
- Damage or repairs due to failure to comply with these requirements are not covered under the warranty.

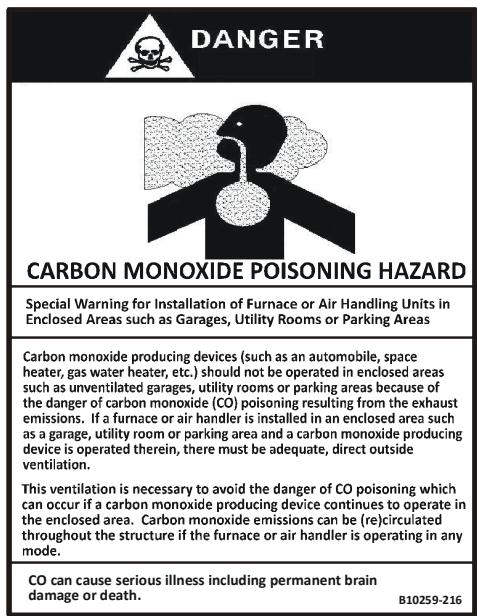

**NOTE:** The Commonwealth of Massachusetts requires that the following additional requirements must also be met:

- Gas furnaces must be installed by a licensed plumber or gas fitter.
- A T-handle gas cock must be used.
- If the unit is to be installed in an attic, the passageway to and the service area around the unit must have flooring.

**To ensure proper furnace operation, install, operate and maintain the furnace in accordance with these installation and operation instructions, all local building codes and ordinances.** In their absence, follow the latest edition of the National Fuel Gas Code (NFPA 54/ANSI Z223.1), and/or CAN/CSA B149.1-15 Installation Codes, local plumbing or wastewater codes, and other applicable codes.

A copy of the National Fuel Gas Code (NFPA 54/ANSI Z223.1) can be obtained from any of the following:

**American National Standards Institute**  
25 West 43rd Street, 4th Floor  
New York, NY 10036

**National Fire Protection Association**  
1 Batterymarch Park  
Quincy, MA 02169-7471

**CSA International**  
8501 East Pleasant Valley  
Independence, OH 44131


The rated heating capacity of the furnace should be greater than or equal to the total heat loss of the area to be heated. The total heat loss should be calculated by an approved method or in accordance with "ASHRAE Guide" or "Manual J-Load Calculations" published by the Air Conditioning Contractors of America.

A copy of the CAN/CSA B149.1-15 Installation Codes can also be obtained from:

**CSA International**  
178 Rexdale Boulevard  
Etobicoke, Ontario, Canada M9W 1R3

## **LOCATION REQUIREMENTS & CONSIDERATIONS**

Follow the instructions listed below and the guidelines provided in the *Combustion and Ventilation Air Requirements* section when selecting a furnace location.

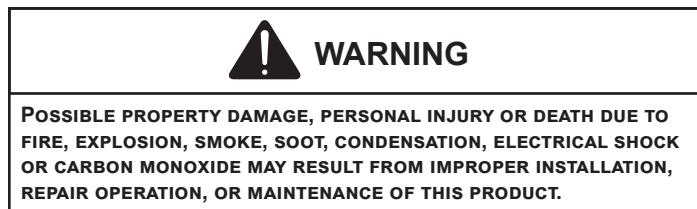

- Centrally locate the furnace with respect to the proposed or existing air distribution system.
- Ensure the temperature of the return air entering the furnace is between 55°F and 100°F when the furnace is heating.
- Provide provisions for venting combustion products outdoors through a proper venting system. Special consideration should be given to vent/flue pipe routing and combustion air intake pipe when applicable. Refer to *Vent/Flue Pipe and Combustion Air Pipe -Termination Locations* for appropriate

termination locations and to determine if the piping system from furnace to termination can be accomplished within the guidelines given. **NOTE:** The length of flue and/or combustion air piping can be a limiting factor in the location of the furnace.

- Locate the furnace so condensate flows downwards to the drain. Do not locate the furnace or its condensate drainage system in any area subject to below freezing temperatures without proper freeze protection. Refer to *Condensate Drain Lines and Trap* for further details.
- Ensure adequate combustion air is available for the furnace. Improper or insufficient combustion air can expose building occupants to gas combustion products that could include carbon monoxide. Refer to *Combustion and Ventilation Air Requirements*.
- Set the furnace on a level floor to enable proper condensate drainage. If the floor becomes wet or damp at times, place the furnace above the floor on a concrete base sized approximately 1-1/2" larger than the base of the furnace. Refer to the *Horizontal Applications and Considerations* for leveling of horizontal furnaces.
- Ensure upflow or horizontal furnaces are not installed directly on carpeting, or any other combustible material. The only combustible material allowed is wood.
- Exposure to contaminated combustion air will result in safety and performance-related problems. Do not install the furnace where the combustion air is exposed to the following substances:
  - permanent wave solutions
  - carbon tetrachloride
  - deicing salts or chemicals
  - cleaning solutions (such as perchloroethylene)
  - paint removers
  - cements and glues
  - chlorinated waxes or cleaners
  - water softening chemicals
  - halogen type refrigerants
  - chlorine-based swimming pool chemicals
  - printing inks
  - varnishes
  - hydrochloric acid
  - antistatic fabric softeners for clothes dryers
- Seal off a *non-direct vent* furnace if it is installed near an area frequently contaminated by any of the above substances. This protects the *non-direct vent* furnace from airborne contaminants. To ensure that the enclosed *non-direct vent* furnace has an adequate supply of combustion air, vent from a nearby uncontaminated room or from outdoors. Refer to the *Combustion and Ventilation Air Requirements* for details.
- If the furnace is used in connection with a cooling coil unit, install the furnace upstream of the cooling coil.

- A coil installed above an upflow furnace or under a counterflow furnace may be the same width as the furnace or may be one size larger than the furnace. *Example: a "C" width coil may be installed with a "B" width furnace.*
- For all applications, the front of the coil and furnace must face the same direction.**
- If the furnace is installed in a residential garage, position the furnace so that the burners and ignition source are located not less than 18 inches (457 mm) above the floor. Protect the furnace from physical damage by vehicles.
- If the furnace is installed horizontally, ensure the access doors are not on the "up/top" or "down/bottom" side of the furnace.
- Do not connect this furnace to a chimney flue that serves a separate appliance designed to burn solid fuel.
- On Counterflow Installations, the air conditioning coil must be downstream on the supply (positive) side of the furnace heat exchanger.
- Counterflow Installation over a noncombustible floor.** Before setting the furnace over the plenum opening, ensure the surface around the opening is smooth and level. A tight seal should be made between the furnace base and floor by using a silicone rubber caulking compound or cement grout.
- Counterflow Installation over a combustible floor.** **If installation over a combustible floor becomes necessary, use an accessory subbase** (see Specification Sheet applicable for your model for details.) **A special accessory subbase must be used for upright counterflow unit installations over any combustible material including wood.** Refer to subbase instructions for installation details. Follow the instructions with the subbase for proper installation. Do not install the furnace directly on carpeting, tile, or other combustible material other than wood flooring.

**NOTE:** The subbase will not be required if an air conditioning coil is installed between the supply air opening on the furnace and the floor.

## CLEARANCES AND ACCESSIBILITY

### NOTES:

- For servicing or cleaning, a 24" front clearance is required.
- Unit connections (electrical, flue and drain) may necessitate greater clearances than the minimum clearances listed above.
- In all cases, accessibility clearance must take precedence over clearances from the enclosure where accessibility clearances are greater.

**NOTES:**

- For servicing or cleaning, a 24" front clearance is required.
- Unit connections (electrical, flue and drain) may necessitate greater clearances than the minimum clearances listed above.
- In all cases, accessibility clearance must take precedence over clearances from the enclosure where accessibility clearances are greater.

Clearance in accordance with local installation codes, the requirements of the gas supplier and the manufacturer's installation instructions.

Dégaagement conforme aux codes d'installation locaux, aux exigences du fournisseur de gaz et aux instructions d'installation du fabricant.

Installations must adhere to the clearances to combustible materials to which this furnace has been certified. The minimum clearance information for this furnace is provided on the unit's clearance label. These clearances must be permanently maintained. Clearances must also accommodate an installation's gas, electrical, and drain trap and drain line connections. If the alternate combustion air intake or vent/flue connections are used additional clearance must be provided to accommodate these connections. Refer to *Vent/Flue Pipe and Combustion Air Pipe* for details.

**NOTE:** In addition to the required clearances to combustible materials, a minimum of 24 inches service clearance must be available in front of the unit.

| *R9T96 MINIMUM CLEARANCES TO COMBUSTIBLE MATERIALS (INCHES) |       |      |       |        |      |     |
|---|-------|------|-------|--------|------|-----|
| POSITION*   | SIDES | REAR | FRONT | BOTTOM | FLUE | TOP |
| Upflow  | 0"    | 0"   | 3"    | C      | 0"   | 1"  |
| Horizontal  | 6"    | 0"   | 3"    | C      | 0"   | 6"  |

C= If placed on combustible floor, floor MUST be wood only.

| *D9T96 MINIMUM CLEARANCES TO COMBUSTIBLE MATERIALS (INCHES) |       |      |       |        |      |     |
|---|-------|------|-------|--------|------|-----|
| POSITION*   | SIDES | REAR | FRONT | BOTTOM | FLUE | TOP |
| Downflow  | 0"    | 0"   | 3"    | NC     | 0"   | 1"  |
| Horizontal  | 6"    | 0"   | 3"    | C      | 0"   | 6"  |

C= If placed on combustible floor, floor MUST be wood only.

NC= For installation on non-combustible floor only. A combustible subbase must be used for installations on combustible flooring.

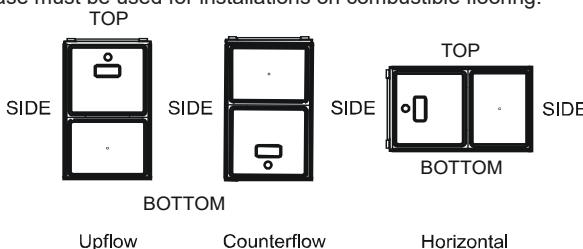


Figure 1

A furnace installed in a confined space (i.e., a closet or utility room) must have two ventilation openings with a total minimum free area of 0.25 square inches per 1,000 BTU/hr of furnace input rating. Refer to Specification Sheet applicable to your model for minimum clearances to combustible surfaces. One of the ventilation openings must be within 12 inches of the top; the other opening must be within 12 inches of the bottom of the confined space. In a typical construction, the clearance between the door and door frame is usually adequate to satisfy this ventilation requirement.



## WARNING

### CARBON MONOXIDE POISONING HAZARD

FAILURE TO FOLLOW THE STEPS OUTLINED BELOW FOR EACH APPLIANCE CONNECTED TO THE VENTING SYSTEM BEING PLACED INTO OPERATION COULD RESULT IN CARBON MONOXIDE POISONING OR DEATH.

THE FOLLOWING STEPS SHALL BE FOLLOWED WITH EACH APPLIANCE CONNECTED TO THE VENTING SYSTEM PLACED IN OPERATION, WHILE ANY OTHER APPLIANCES CONNECTED TO THE VENTING SYSTEM ARE NOT IN OPERATION:

1. SEAL ANY UNUSED OPENINGS IN THE VENTING SYSTEM.
2. INSPECT THE VENTING SYSTEM FOR PROPER SIZE AND HORIZONTAL PITCH, AS REQUIRED BY THE NATIONAL FUEL GAS CODE, ANSI Z223.1 OR THE NATURAL GAS AND PROPANE INSTALLATION CODE, CSA B149.1-15 AND THESE INSTRUCTIONS. DETERMINE THAT THERE IS NO BLOCKAGE OR RESTRICTION, LEAKAGE, CORROSION AND OTHER DEFICIENCIES WHICH COULD CAUSE AN UNSAFE CONDITION.
3. AS FAR AS PRACTICAL, CLOSE ALL BUILDING DOORS AND WINDOWS AND ALL DOORS BETWEEN THE SPACE IN WHICH THE APPLIANCE(S) CONNECTED TO THE VENTING SYSTEM ARE LOCATED AND OTHER SPACES OF THE BUILDING.
4. CLOSE FIREPLACE DAMPERS.
5. TURN ON CLOTHES DRYERS AND ANY APPLIANCE NOT CONNECTED TO THE VENTING SYSTEM. TURN ON ANY EXHAUST FANS, SUCH AS RANGE HOODS AND BATHROOM EXHAUSTS, SO THEY SHALL OPERATE AT MAXIMUM SPEED. DO NOT OPERATE A SUMMER EXHAUST FAN.
6. FOLLOW THE LIGHTING INSTRUCTIONS. PLACE THE APPLIANCE BEING INSPECTED IN OPERATION. ADJUST THERMOSTAT SO APPLIANCE SHALL OPERATE CONTINUOUSLY.
7. TEST FOR SPILLAGE FROM DRAFT HOOD APPLIANCES AT THE DRAFT HOOD RELIEF OPENING AFTER 5 MINUTES OF MAIN BURNER OPERATION. USE THE FLAME OF A MATCH OR CANDLE.
8. IF IMPROPER VENTING IS OBSERVED DURING ANY OF THE ABOVE TESTS, THE VENTING SYSTEM MUST BE CORRECTED IN ACCORDANCE WITH THE NATIONAL FUEL GAS CODE ANSI Z223.1/NFPA 54 AND/OR NATIONAL GAS AND PROPANE INSTALLATION CODE CSA B149.1-15.
9. AFTER IT HAS BEEN DETERMINED THAT EACH APPLIANCE CONNECTED TO THE VENTING SYSTEM PROPERLY VENTS WHEN TESTED AS OUTLINED ABOVE, RETURN DOORS, WINDOWS, EXHAUST FANS, FIREPLACE DAMPERS AND ANY OTHER GAS BURNING APPLIANCE TO THEIR PREVIOUS CONDITIONS OF USE.



## AVERTISSEMENT

### RISQUE D'INTOXICATION AU MONOXYDE DE CARBONE

SI LES ÉTAPES DÉCRITES CI-DESSOUS NE SONT PAS SUIVIES POUR CHACUN DES APPAREILS RACCORDES AU SYSTÈME DE VENTILATION AU MOMENT DE SA MISE EN MARCHE, CELA PEUT ENTRAÎNER UNE INTOXICATION AU MONOXYDE DE CARBONE OU LA MORT.

LES ÉTAPES SUIVANTES DOIVENT ÊTRE SUIVIES POUR CHACUN DES APPAREILS RACCORDES AU SYSTÈME DE VENTILATION AU MOMENT DE SA MISE EN MARCHE, ALORS QUE TOUS LES AUTRES APPAREILS RACCORDES AU SYSTÈME DE VENTILATION NE SONT PAS EN MARCHE:

1. SCELLER TOUTES LES OUVERTURES INUTILISÉES DU SYSTÈME DE VENTILATION.
2. INSPECTER LE SYSTÈME DE VENTILATION AFIN DE VÉRIFIER SI LA TAILLE ET L'INCLINAISON PAR RAPPORT À L'HORIZONTALE SONT CONFORMES AUX EXIGENCES DU NATIONAL FUEL GAS CODE, ANSI Z223.1/NFPA 54 OU DU CODE D'INSTALLATION DU GAZ NATUREL ET DU PROPANE, CSA B149.1 ET À CES INSTRUCTIONS. VÉRIFIER QU'IL N'Y A PAS D'OBSTRUCTION OU DE RESTRICTION, DE FUITE, DE CORROSION ET D'AUTRES PROBLÈMES QUI POURRAIENT ENTRAÎNER UNE SITUATION DANGEREUSE.
3. SI POSSIBLE, FERMER TOUTES LES PORTES ET FENÊTRES DU BÂTIMENT AINSI QUE TOUTES LES PORTES SÉPARANT L'ENDROIT OÙ SE TROUVENT LES APPAREILS RACCORDES AU SYSTÈME DE VENTILATION ET LES AUTRES ZONES DU BÂTIMENT.
4. FERMER LE REGISTRE DES FOYERS.
5. METTRE LES SÉCHEUSES EN MARCHE AINSI QUE TOUS LES AUTRES APPAREILS QUI NE SONT PAS RACCORDES AU SYSTÈME DE VENTILATION. METTRE EN MARCHE TOUS LES VENTILATEURS DE TIRAGE, COMME CELUI DES HOTTES DE CUISINE ET DES SALLES DE BAINS, ET LES RÉGLER À LA PUISSANCE MAXIMALE. NE PAS METTRE EN MARCHE LES VENTILATEURS D'ÉTÉ.
6. SUIVRE LES INSTRUCTIONS D'ALLUMAGE. METTRE EN MARCHE L'APPAREIL SOUMIS À L'INSPECTION. RÉGLER LE THERMOSTAT DE MANIÈRE À CE QUE L'APPAREIL FONCTIONNE EN CONTINU.
7. VÉRIFIER LA PRÉSENCE DE FUITE AU NIVEAU DE L'OUVERTURE DU COUPE-TIRAGE DES APPAREILS QUI EN SONT DOTÉS APRÈS 5 MINUTES DE FONCTIONNEMENT DU BRÛLEUR PRINCIPAL. UTILISER LA FLAMME D'UNE ALLUMETTE OU D'UNE BOUGIE.
8. SI UN PROBLÈME DE VENTILATION EST OBSERVÉ PENDANT L'UN DES ESSAIS DÉCRITS CI-DESSUS, DES CORRECTIFS DOIVENT ÊTRE APPORTÉS AU SYSTÈME DE VENTILATION CONFORMÉMENT AU NATIONAL FUEL GAS CODE, ANSI Z223.1/NFPA 54 ET (OU) AU CODE D'INSTALLATION DU GAZ NATUREL ET DU PROPANE, CSA B149.1.
9. UNE FOIS QU'IL A ÉTÉ DÉTERMINÉ QUE CHAQUE APPAREIL RACCORDE AU SYSTÈME DE VENTILATION FONCTIONNE CORRECTEMENT AU MOYEN DES ESSAIS DÉCRITS CI-DESSUS, LES PORTES, LES FENÊTRES, LES VENTILATEURS, LES REGISTRES DE FOYER ET TOUS LES AUTRES APPAREILS DE COMBUSTION ALIMENTÉS AU GAZ DOIVENT ÊTRE REMIS DANS LEUR ÉTAT INITIAL.

1. Seal any unused openings in the venting system.
2. Inspect the venting system for proper size and horizontal pitch, as required by the National Fuel Gas Code, ANSI Z223.1 or the Natural Gas and Propane Installation Code, CSA B149.1-15 and these instructions. Determine that there is no blockage or restriction, leakage, corrosion and other deficiencies which could cause an unsafe condition.
3. As far as practical, close all building doors and windows and all doors between the space in which the appliance(s) connected to the venting system are located and other spaces of the building.
4. Close fireplace dampers.
5. Turn on clothes dryers and any appliance not connected to the venting system. Turn on any exhaust fans, such as range hoods and bathroom exhausts, so they shall operate at maximum speed. Do not operate a summer exhaust fan.
6. Follow the lighting instructions. Place the appliance being inspected in operation. Adjust thermostat so appliance shall operate continuously.
7. Test for spillage from draft hood appliances at the draft hood relief opening after 5 minutes of main burner operation. Use the flame of a match or candle.
8. If improper venting is observed during any of the above tests, the venting system must be corrected in accordance with the National Fuel Gas Code ANSI Z223.1/ NFPA 54 and/or National Gas and Propane Installation Code CSA B149.1-15.
9. After it has been determined that each appliance connected to the venting system properly vents when tested as outlined above, return doors, windows, exhaust fans, fireplace dampers and any other gas burning appliance to their previous conditions of use.

If resizing is required on any portion of the venting system, use the appropriate table in Appendix G in the latest edition of the National Fuel Gas Code ANSI Z223.1 and/or CSA B149.1-15 Installation Codes.

## THERMOSTAT LOCATION

The thermostat should be placed approximately five feet from the floor on a vibration-free, inside wall in an area having good air circulation. Do not install the thermostat where it may be influenced by any of the following:

- Drafts, or dead spots behind doors, in corners, or under cabinets.
- Hot or cold air from registers.
- Radiant heat from the sun.
- Light fixtures or other appliances.
- Radiant heat from a fireplace.
- Concealed hot or cold water pipes, or chimneys.
- Unconditioned areas behind the thermostat, such as an outside wall.

## EXISTING FURNACE REMOVAL

**NOTE:** When an existing furnace is removed from a venting system serving other appliances, the venting system may be too large to properly vent the remaining attached appliances.

The following vent testing procedure is reproduced from the **American National Standard/National Standard of Canada for Gas-Fired Central Furnaces ANSI Z21.47, CSA-2.3 latest edition Section 1.23.1.**

The following steps shall be followed with each appliance connected to the venting system placed in operation, while any other appliances connected to the venting system are not in operation:

Consult the instructions packaged with the thermostat for mounting instructions and further precautions.

## COMBUSTION & VENTILATION REQUIREMENTS



### WARNING

**TO AVOID PROPERTY DAMAGE, PERSONAL INJURY OR DEATH, SUFFICIENT FRESH AIR FOR PROPER COMBUSTION AND VENTILATION OF FLUE GASES MUST BE SUPPLIED. MOST HOMES REQUIRE OUTSIDE AIR BE SUPPLIED INTO THE FURNACE AREA.**


Improved construction and additional insulation in buildings have reduced heat loss by reducing air infiltration and escape around doors and windows. These changes have helped in reducing heating/cooling costs but have created a problem supplying combustion and ventilation air for gas fired and other fuel burning appliances. Appliances that pull air out of the house (clothes dryers, exhaust fans, fireplaces, etc.) increase the problem by starving appliances for air.

House depressurization can cause back drafting or improper combustion of gas-fired appliances, thereby exposing building occupants to gas combustion products that could include carbon monoxide.

If this furnace is to be installed in the same space with other gas appliances, such as a water heater, ensure there is an adequate supply of combustion and ventilation air for the other appliances. Refer to the latest edition of the National Fuel Gas Code NFPA 54/ANSI Z223.1 or CAN/CSA B149.1-15 Installation Codes or applicable provisions of the local building codes for determining the combustion air requirements for the appliances.

Most homes will require outside air be supplied to the furnace area by means of ventilation grilles or ducts connecting directly to the outdoors or spaces open to the outdoors such as attics or crawl spaces.

## INSTALLATION POSITIONS

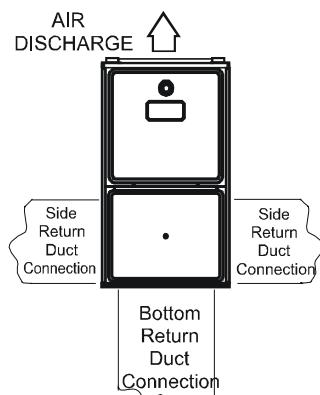

### UPFLOW UPRIGHT

Figure 2A




### UPFLOW HORIZONTAL LEFT AIR DISCHARGE

Figure 2B



### UPFLOW HORIZONTAL RIGHT AIR DISCHARGE

Figure 2C

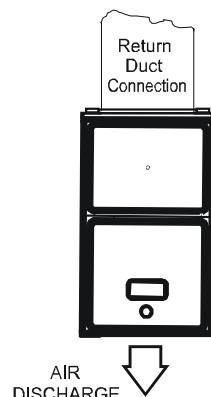

### Counterflow

Figure 2D

## Recommended Installation Positions


\*R9T96 models may be installed upflow or horizontally with left or right side down. \*D9T96 models may be installed down flow or horizontally with left or right side down. Do not install this furnace on its back. For *upright upflow* furnaces, return air ductwork may be attached to the side panel(s) and/or basepan. For *upright counterflow* furnaces, return air ductwork must be attached to the top end of the blower compartment. For any horizontally installed furnaces, return ductwork must be attached to the blower compartment end of the furnace. **NOTE: Ductwork must never be attached to the back of the furnace.** Refer to "Recommended Installation Positions" figure for appropriate installation positions, ductwork connections, and resulting airflow arrangements.

## AUXILIARY DRAIN PAN

An auxiliary/secondary drain pan should be installed under a condensing furnace and/or indoor coil when any potential leakage could cause damage to ceilings, floors or other areas below the installation location. The auxiliary drain pan should be at least 1-1/2 inches deep, 3 inches larger than the unit and constructed of corrosion-resistant material. The drain pan should have a drain line connected to the pan and the drain line should be pitched downward away from the pan a minimum of 1/8" per foot of drain line. The drain line should terminate in a location where the water dripping from the drain line will alert the occupant that a problem exists. The auxiliary drain pan should also be equipped with a water level detection device conforming to UL 508 that will shut off the equipment served prior to overflow of the pan.

For upflow and horizontal installations, the furnace and/or indoor coil should be installed so that the equipment is at least 1-1/2 inches above the drain pan. Do not install the furnace and/or indoor coil directly into the auxiliary/secondary drain pan and do not use any wood product in the drain pan to elevate the furnace. Bricks, 2-inch concrete cap blocks, metal furnace stands, or furnace blocks can be used to elevate the furnace. For an upflow furnace installation, seal the entire bottom of the furnace before setting the furnace at least 1-1/2 inches above the drain pan.

Failure to properly install an auxiliary/secondary drain pan for a furnace and/or indoor coil can result in water damage to components and the furnace's metal cabinet.

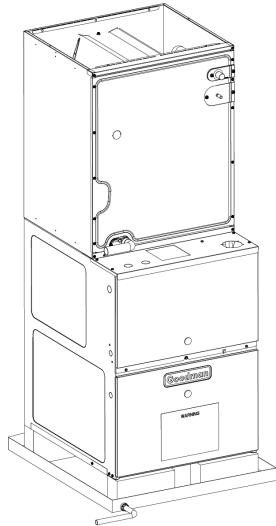

## HORIZONTAL APPLICATIONS


### & CONSIDERATIONS

When installing a furnace horizontally, additional consideration must be given to the following:

### FURNACE SUSPENSION

If suspending the furnace from rafters or joists, use 3/8" threaded rod and 2"x2"x3/8" angle iron as shown in the following diagram. The length of rod will depend on the application and the clearances necessary.

If the furnace is installed in a crawl space it must be suspended from the floor joist or supported by a concrete pad. Never install the furnace on the ground or allow it to be exposed to water.

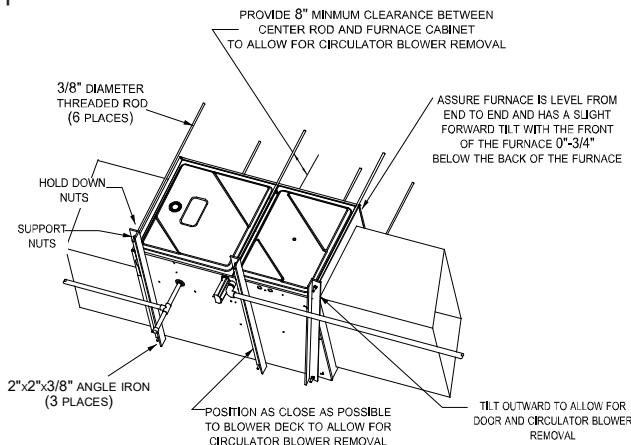

**Figure 3**  
**FRONT COVER PRESSURE SWITCH TUBE LOCATION**

When a furnace is installed horizontally with left side down, the front cover pressure switch tube must be re-located to the lower port of the collector box cover.

1. Remove tube from front cover pressure switch and collector box cover.
2. Remove rubber plug from bottom collector box port and install on top of collector box port.
3. Locate 24" x 1/4" tube in bag assembly.
4. Install one end on front cover pressure switch.
5. Route tube to lower port on collector box cover and cut off excess tubing.


### DRAIN TRAP AND LINES

In horizontal applications the condensate drain trap is secured to the furnace side panel, suspending it below the furnace. A minimum clearance of 5.5" below the furnace must be provided for the drain trap. Additionally, the appropriate downward piping slope must be maintained from the drain trap to the drain location. Refer to *Condensate Drain Trap and Lines* for further details. If the drain trap and drain line will be exposed to temperatures near or below freezing, adequate measures must be taken to prevent condensate from freezing.

### HORIZONTAL FURNACE LEVELING

Leveling ensures proper condensate drainage from the heat exchanger. For proper flue pipe drainage, the furnace must be level lengthwise from end to end. The furnace should have a slight tilt from back to front with the access doors downhill from the back panel approximately 1/2 to 3/4 inches. The slight tilt allows the heat exchanger condensate, generated in the secondary heat exchanger, to flow forward to the secondary heat exchanger front cover.

EQUIPMENT SETTING  
UNIT MUST BE LEVELLED SIDE-TO-SIDE.  
UNIT MAY BE POSITIONED FROM LEVEL TO 1/2" TOWARD THE FRONT TO AID IN DRAINING

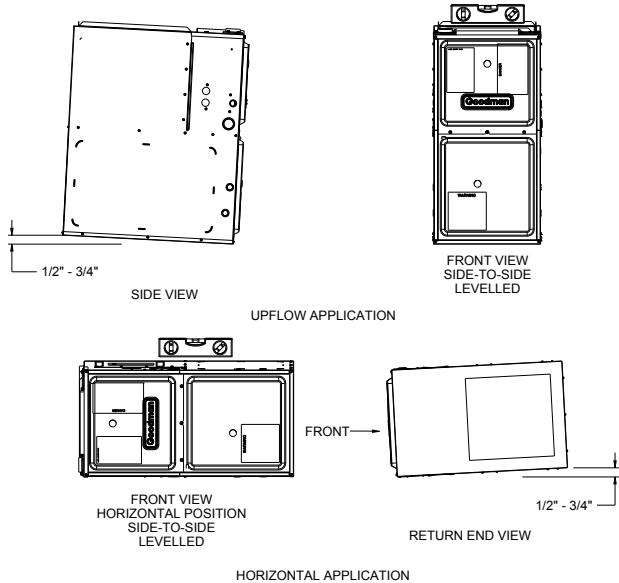

## ALTERNATE ELECTRICAL AND GAS LINE CONNECTIONS

This furnace has provisions allowing for electrical and gas line connections through either side panel. In horizontal applications the connections can be made either through the "top" or "bottom" of the furnace.

## FREEZE PROTECTION

Refer to *Horizontal Applications and Conditions - Drain Trap and Lines*.

## VENT PIPE & COMBUSTION AIR



### WARNING

FAILURE TO FOLLOW THESE INSTRUCTIONS CAN RESULT IN BODILY INJURY OR DEATH. CAREFULLY READ AND FOLLOW ALL INSTRUCTIONS GIVEN IN THIS SECTION.



### WARNING

UPON COMPLETION OF THE FURNACE INSTALLATION, CAREFULLY INSPECT THE ENTIRE FLUE SYSTEM BOTH INSIDE AND OUTSIDE OF THE FURNACE TO ASSURE IT IS PROPERLY SEALED. LEAKS IN THE FLUE SYSTEM CAN RESULT IN SERIOUS PERSONAL INJURY OR DEATH DUE TO EXPOSURE TO FLUE PRODUCTS, INCLUDING CARBON MONOXIDE.

This manual will refer to the pipe that discharges products of combustion to the outdoors as the "vent" pipe or "flue" pipe. The pipe that supplies air for combustion to the furnace will be referred to as the "intake" pipe or "combustion air" pipe.

This furnace is dual certified and may be installed as a non-direct vent (single pipe) or direct vent (dual pipe) appliance. ABS and PVC Cellular/Foam Core products can no longer be used for flue vent piping.

**NOTE: THESE MATERIALS CAN BE USED FOR COMBUSTION AIR ONLY.**

## MATERIALS - INSTALLATIONS IN THE U.S.A

PVC, CPVC, or ABS pipe & fittings are typically used as venting and intake pipe materials. All 90° elbows must be medium or long radius types. A medium radius elbow should measure ~3-1/16" minimum from the plane of one opening to the center line of the other opening for 2" diameter pipe, and ~4-9/16" minimum for 3" pipe.

In addition to these materials, Innoflue® by Centrotherm Eco Systems is also an approved vent and combustion air materials for installations in the U.S.A. Manufacturers Installation instructions for these products must be followed. These products have specific instructions for installing, joining and terminating. Do not mix materials or components of one manufacturer with materials or components of another manufacturer. Refer to the following chart for plastic pipe & fittings specifications.

## MATERIALS - INSTALLATIONS IN CANADA

All installations in Canada must conform to the requirements of CAN/CSA B149.1-15 code. All vent components, including primer and cement, must be listed to ULC S636. The certified pipe and fittings should be clearly marked with the ULC standard "S636". The primer and cement used must be of the same manufacturer as the vent system. For Royal Pipe System 636; use GVS-65 Primer (Purple) and GVS-65 PVC Solvent Cement. For IPEX System 636, use PVC/CPVC Primer, Purple or clear. Use PVC Solvent cement (Gray). For Canadian installations, ABS may be used as a combustion air pipe only. ABS is not an approved vent material in Canada. If ABS is used as a combustion air pipe, it must be CSA certified. Always follow the manufacturer's instructions in the use of primer and cement. Do not use primer and cement around potential sources of ignition. Do not use primer or cement beyond its expiration date.

## MATERIALS AND JOINING METHODS



### WARNING

TO AVOID BODILY INJURY, FIRE OR EXPLOSION, SOLVENT CEMENTS MUST BE KEPT AWAY FROM ALL IGNITION SOURCES (I.E., SPARKS, OPEN FLAMES, AND EXCESSIVE HEAT) AS THEY ARE COMBUSTIBLE LIQUIDS. AVOID BREATHING CEMENT VAPORS OR CONTACT WITH SKIN AND/OR EYES.

| VENTING MATERIAL REQUIREMENTS  |                    |
|--|--------------------|
| PVC  | ASTM STANDARD      |
| SCHEDULE 40 PIPE   | D1785              |
| SDR 21 or 26 PIPE  | D2241              |
| SYSTEM 1738® (IPEX)  | D1784, UL 1738     |
| SCHEDULE 40 FITTINGS   | D2466              |
| SYSTEM 1738® FITTINGS  | D1784, UL 1738     |
| <u>ABS</u>   |                    |
| SCHEDULE 40 PIPE   | D1527              |
| SCHEDULE 40 FITTINGS   | D2468              |
| <u>CPVC</u>  |                    |
| SCHEDULE 40 PIPE   | F441               |
| SDR 21 or 26 PIPE  | F442               |
| FITTINGS   | F438               |
| <u>POLYPROPYLENE</u>   |                    |
| INNOFLUE® (CENTROTHERM)  | UL 1738            |
| POLYPRO® (DURAVENT)  | ULC S636           |
| <u>PRIMER &amp; SOLVENT CEMENT</u>   |                    |
| PVC PRIMER   | F656               |
| CPVC PRIMER  | F656               |
| PVC SOLVENT CEMENT   | D2564              |
| CPVC SOLVENT CEMENT  | F493               |
| ABS SOLVENT CEMENT   | D2235              |
| ABS / PVC / CPVC ALL PURPOSE CEMENT (FOR PIPE & FITTINGS OF THE SAME MATERIAL) | D2564, D2235, F493 |
| TRANSITION CEMENT FOR ABS to PVC or CPVC                                       | D3188              |
| <u>INSTALLATIONS IN CANADA</u>   |                    |
| PVC & CPVC PIPE & FITTINGS   | ULC S636           |
| PVC & CPVC SOLVENT CEMENT  |                    |
| TRANSITION CEMENT  |                    |
| INNOFLUE® (CENTROTHERM)  |                    |
| POLYPRO® (DURAVENT)  |                    |
| SYSTEM 636® (IPEX)   |                    |

Precautions should be taken to prevent condensate from freezing inside the flue/vent pipe, combustion air intake pipe and/or at the pipe terminations. All flue/vent and/or combustion air piping exposed to temperatures below 35°F for extended periods of time should be insulated with 1/2" thick closed cell foam. All vent/flue piping exposed to outdoors in excess of the terminations permitted as described in the provided installation manual should be insulated with 1/2" thick closed cell foam. Inspect piping for leaks prior to installing insulation. If the combustion air intake or flue vent pipe is to be installed above a finished ceiling or other area where dripping of condensate will be objectionable, insulating the combustion air pipe may be necessary. Use 1/2" thick closed cell foam insulation where required. Refer to vent & intake options for using the RF000142 kit and managing condensation.



#### WARNING

**FAILURE TO FOLLOW THESE INSTRUCTIONS CAN RESULT IN BODILY INJURY OR DEATH. CAREFULLY READ AND FOLLOW ALL INSTRUCTIONS GIVEN IN THIS SECTION.**



#### WARNING

**UPON COMPLETION OF THE FURNACE INSTALLATION, CAREFULLY INSPECT THE ENTIRE FLUE SYSTEM BOTH INSIDE AND OUTSIDE OF THE FURNACE TO ASSURE IT IS PROPERLY SEALED. LEAKS IN THE FLUE SYSTEM CAN RESULT IN SERIOUS PERSONAL INJURY OR DEATH DUE TO EXPOSURE TO FLUE PRODUCTS, INCLUDING CARBON MONOXIDE.**



#### WARNING

**TO AVOID BODILY INJURY, FIRE OR EXPLOSION, SOLVENT CEMENTS MUST BE KEPT AWAY FROM ALL IGNITION SOURCES (I.E., SPARKS, OPEN FLAMES, AND EXCESSIVE HEAT) AS THEY ARE COMBUSTIBLE LIQUIDS. AVOID BREATHING CEMENT VAPORS OR CONTACT WITH SKIN AND/OR EYES.**

## PIPE INSTALLATION

This furnace is manufactured with 2" CPVC vent & intake couplings. Use transition cement to connect PVC or ABS pipe to these fittings. For furnaces requiring installation of 3" pipe, the transition from 2" to 3" should be done as close to the furnace as possible, and only when the piping is sloped enough to prevent condensation from collecting. This furnace must not be connected to Type B, BW, or L vent or vent connector, and must not be vented into masonry chimney. A masonry chimney may be used as a chase or passageway for approved venting materials providing the masonry chimney is not also being used to vent products of combustion. Never common vent this appliance with another appliance. Never use a vent which is used by a solid fuel appliance.

Piping may run vertically or horizontally and must be adequately supported to prevent strain on joints, sagging, separation, and detachment from the furnace. Horizontal runs of piping must be supported every three to five feet. Condensation within the furnace secondary heat exchanger and in the vent pipe is a normal occurrence. Vent pipe must be installed to maintain a minimum inch per foot downward slope toward the furnace to return condensate to the furnace's drain system. Condensation may also occur in the intake pipe. This commonly takes place during the summer months when humid air enters an intake pipe that runs through a cool basement or other conditioned space.

PREFERRED  
TRANSITION MADE IN VERTICAL SECTION OF PIPE

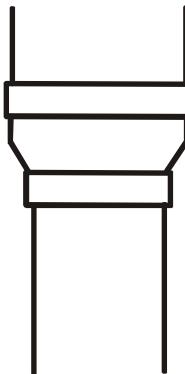


Figure 4

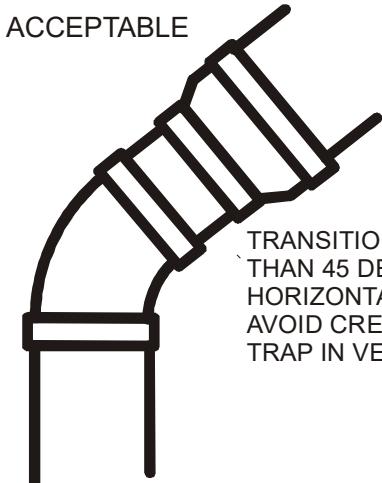


Figure 5



Figure 6

## VENT PIPE CONNECTION

The vent pipe outlet is sized to accept 2" pipe. Secure vent pipe directly into the furnace fitting with the appropriate glue. Alternately, a small section of 2" pipe may be glued in the furnace socket and a rubber coupling installed to allow removal for future service. Piping should be routed in a manner to avoid contact with refrigerant lines, metering devices, condensate drain lines, etc. If necessary, clearances may be increased by creating an offset using two 45° elbows (Figure 7).

## COMBUSTION AIR PIPE CONNECTION

If the furnace is being installed without a combustion air pipe, a 90° elbow should be used on the combustion air intake to guard against blockage.

On up flow / horizontal models, secure the combustion air intake pipe to the air intake coupling using a rubber coupling supplied with the furnace. The rubber coupling may be omitted by inverting the intake coupling and gluing pipe directly to it. Piping may also be glued to the intake coupling in its original position by using a plastic coupling. On counterflow units secure the combustion air intake pipe to the air intake coupling using the rubber coupling and worm gear hose clamps provided with the unit. The counterflow rubber coupling allows service removal of air intake piping internal to the furnace blower compartment.

The combustion air intake pipe can also be secured directly to the counterflow unit air intake pipe coupling.

## TERMINATION LOCATIONS



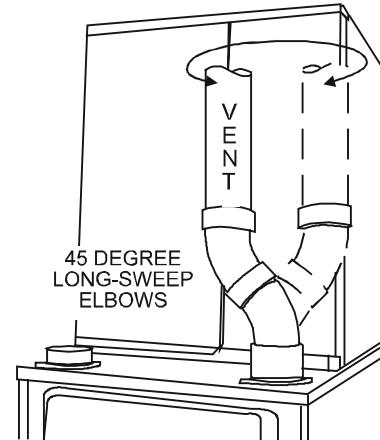


Figure 7

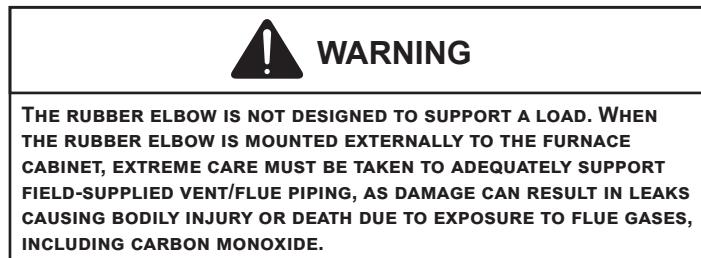


## VENT & INTAKE PIPE OPTIONS FOR CONDENSATE MANAGEMENT

The RF000142 coupling (Figure 10) can be secured directly to the furnace intake and/or vent if condensation is a concern. If the RF000142 is used on the combustion air inlet, it must be installed with the arrow pointing up. It should be noted, the combustion air will actually be moving in a direction opposite of the arrow on the RF000142 coupling. It must have a field supplied, trapped drain tube free-draining to proper condensate disposal location. A loop in the drain tube can serve as a trap. The unused RF000142 drain fitting should be capped. A field supplied tee installed in the intake and/or vent pipe is also an acceptable method of catching condensation. For vertical vent piping, a PVC wye can be used for catching condensation (see Figure 9). Any of these options must have a field supplied trapped drain tube or pipe, free-draining to proper condensate disposal location. A loop in the drain tube can serve as a trap.

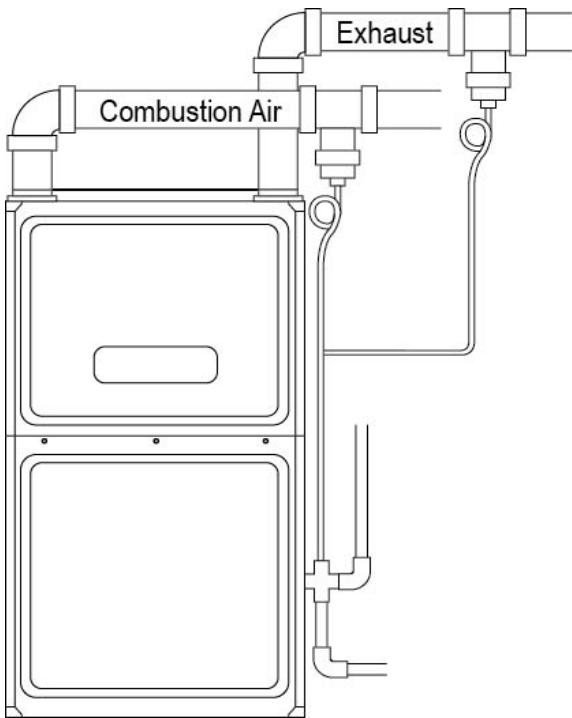

**COMBUSTION AIR INTAKE OPTIONS**  
Figure 8

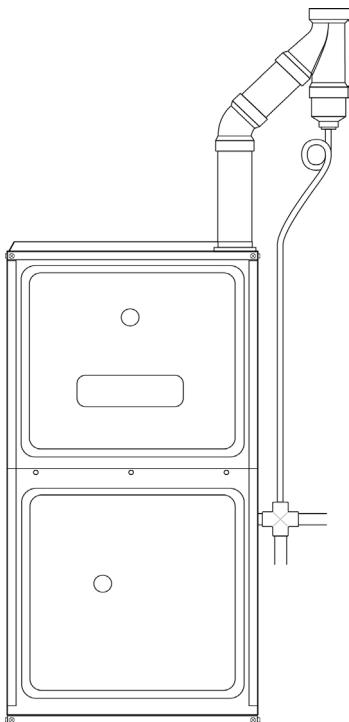

**Vent Piping with PVC WYE**  
Figure 9

## ALTERNATE VENT & INTAKE PIPE CONNECTIONS

When installing a furnace horizontally with the left side down, alternate flue and combustion air pipe connections may be used. This method allows the flue and combustion air piping to be run vertically through the side of the furnace (facing up in horizontal left). The alternate vent location is the 3" hole directly in line with the induced draft blower outlet.

When using the horizontal alternate vent configuration, you must use the RF000142 vent drain kit. For Upflow models, see Figures 10, 11, and 12 & follow steps below.

**NOTE: IN THE HORIZONTAL LEFT INSTALLATION POSITION, A MEANS OF CONDENSATE COLLECTION MUST BE PROVIDED TO KEEP VENT PIPE CONDENSATE FROM ENTERING THE DRAFT INDUCER HOUSING. IF THE VENT DRAIN ELBOW IS ELIMINATED FROM THE INSTALLATION, THE RF000142 KIT MUST BE USED.**

1. Remove the four screws from the vent pipe flange on top the furnace.
2. Remove the internal elbow, vent pipe & gasket.
3. Cut the internal vent pipe 2 1/2" from the flange. Discard the un-flanged section.
4. Remove the 3" plastic plug (in line with the inducer outlet) and insert it in the space vacated by removal of the internal vent pipe.
5. Install the RF000142 drain coupling with arrow facing up, on the draft inducer outlet.
6. Insert the 2 1/2" flanged section of pipe with gasket through the 3" hole and connect to RF000142 drain coupling. Secure it with gear clamp provided.
7. Use the four self-tapping screws removed in step 1 to secure flange to cabinet.
8. Connect drain hose to the uncapped port on the RF000142 coupling, refer to page 25, section entitled "Horizontal Installation with Left Side Down – Alternate" for drain connection details.

When using the alternate venting location, either in a horizontal left side down installation or a vertical installation using down – venting, the alternate combustion air opening can be used. A locating dimple is located on the right side of the furnace cabinet. The locating dimple is 1-7/8" measured from the front edge of the cabinet in line with the knock out. To use the alternate combustion air location:

1. Remove screws and combustion air flange and gasket from cabinet.
2. Insert the 3" cabinet plug from the drain bag assembly in the unused combustion air hole.
3. Drill a pilot hole at the cabinet dimple (size dictated by knockout tool used).
4. Use a knockout tool to create a 3" diameter hole.
5. Secure the combustion air flange & gasket to the furnace cabinet using the self-tapping screws removed in step 1.



### CAUTION

**BE SURE NOT TO DAMAGE INTERNAL WIRING OR OTHER COMPONENTS WHEN REINSTALLING COUPLING AND SCREWS.**

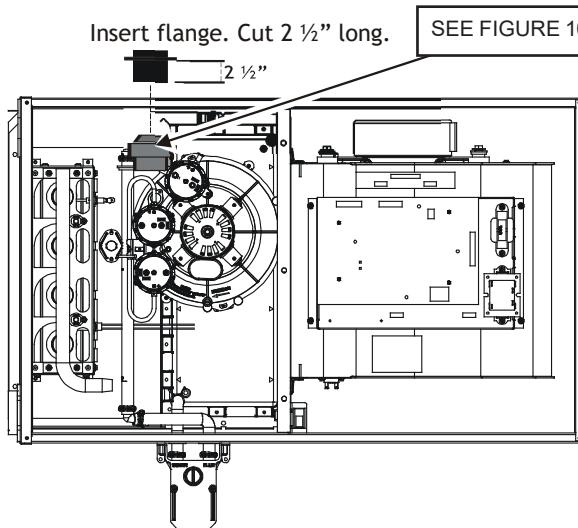
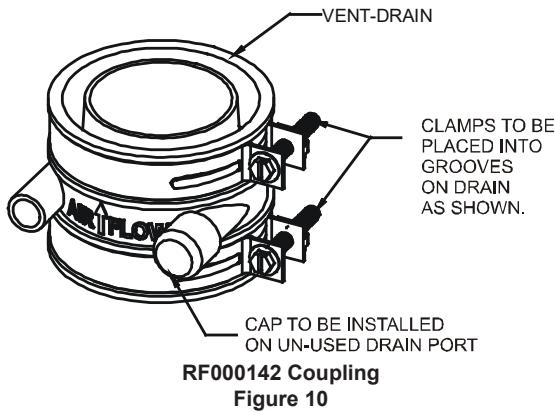


Figure 11

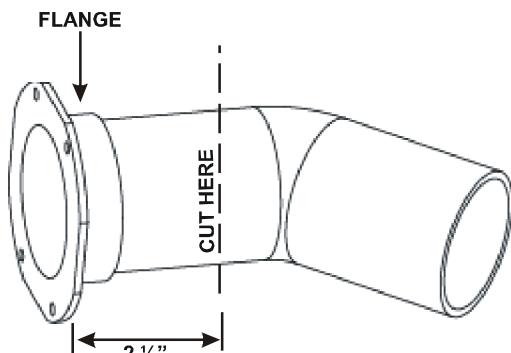


Figure 12

#### DOWN VENTING UPFLOW MODEL FURNACES ONLY

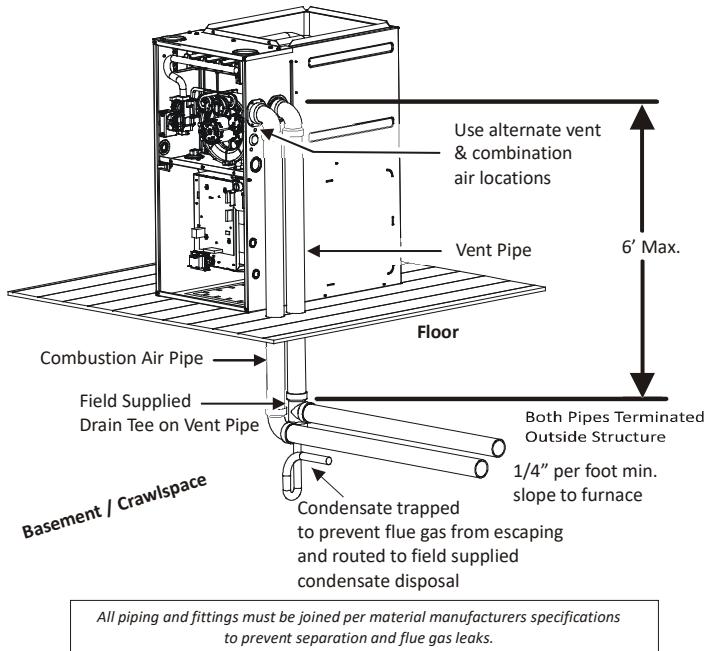


Figure 13

For Downflow models, see Figures 10, 14-15 & follow the steps below for using the alternate vent location.

1. Remove the four screws from the vent pipe flange on top of the furnace.
2. Remove the two screws from the blower deck holding the flue elbow as well as the clamp hose holding it to the internal vent pipe.
3. Remove the internal elbow, and internal vent pipe with gasket.
4. Remove the 3" plastic plug from the furnace wrapper (in line with the inducer outlet).
5. Seal up the unused vent hole on the top panel and the unused vent hole on the blower deck from the burner cabinet side. These holes should be sealed up using sheet metal squares and then metallic tape. Please make sure to seal up the openings really well.
6. Install the RF000142 drain coupling on the draft inducer outlet with the arrow facing away from the inducer outlet. Secure it with the gear clamp provided.
7. Measure and cut the internal vent pipe so that the gasket and flange side of the pipe are flush with the furnace side wrapper when the pipe is inserted into the RF000142 drain coupling. Discard the un-flanged cut section.
  - a. B Cabinet: Pipe would need to be about 3.75" long from the flange.
  - b. C Cabinet: Pipe would need to be about 7" long from the flange.
  - c. D Cabinet: Pipe would need to be about 11" long from the flange.
8. Insert the flanged section of pipe with gasket through the 3" hole and connect to RF000142 drain coupling. Secure it with gear clamp provided.
9. Use the four self-tapping screws removed in step 1 to secure flange to cabinet.

10. Connect drain hose to the uncapped port on the RF000142 coupling, refer to page 25, section entitled "CounterFlow Models Installed Horizontally with Left Side Down – Alternate" for drain connection details.

The alternate vent location may also be used when installing the downflow furnace in the vertical orientation using either vertical venting or down venting. When using the alternate vent location, you must use the RF000142 vent drain kit. When installing in this configuration, please follow the steps from the paragraph above to remove the internal vent pipe in order to utilize the alternate vent location.

When using the alternate venting location, either in a horizontal left side down installation or a vertical installation, an alternate combustion air opening can be used. The flat area located underneath the alternate vent hole on the right side of the furnace wrapper may be used as an alternate combustion air opening.

To use the alternate combustion air location:

1. Remove the 4 screws holding the internal combustion air pipe from the cabinet. Remove the internal combustion air pipe.
2. Remove the 4 screws holding the combustion air flange & gasket from the blower deck.
3. Insert the 3" cabinet plug that was removed from the alternate vent hole into the blower deck hole from the burner cabinet side. Seal up the rest of the unused combustion air holes using sheet metal squares and then metallic tape. Please make sure to seal up the openings really well.
4. Drill a pilot hole in the area below the vent hole (size dictated by knockout tool used).
5. Use a knockout tool to create a 3" diameter hole.
6. Secure the combustion air flange & gasket to the outside of the furnace cabinet using the self-tapping screws removed in step 1.

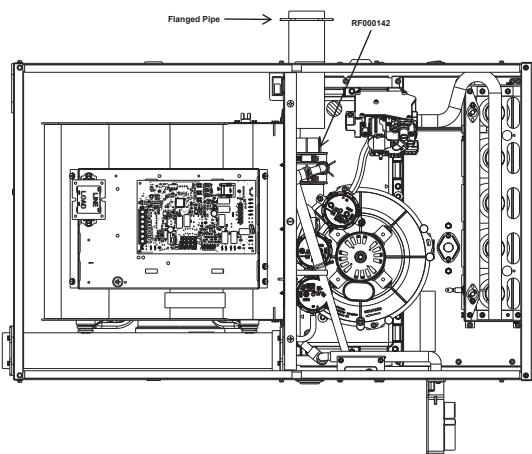


Figure 14

DOWN VENTING DOWNFLOW MODEL FURNACES

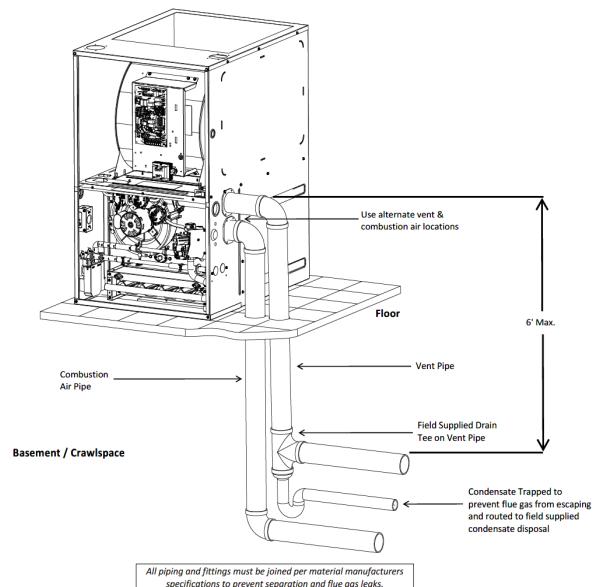


Figure 15

## VENT/FLUE PIPE TERMINATIONS

Products of combustion must always be vented outside. A vent pipe must never terminate in an attic, crawl space, or any other part of a dwelling. Follow the vent pipe & intake pipe termination requirements listed below as well as all applicable local, State and National codes.

All terminations (vent and/or intake) must be located at least 12" above ground level or the anticipated snow level. All vent terminations (non-direct and direct vent) must terminate at least 3 feet above any forced air inlet located within 10 feet.

The vent termination of a non-direct vent application must terminate at least 4 feet below, 4 feet horizontally from, or 1 foot above any door, window, or gravity air inlet into any building.

The vent termination of a direct vent application must terminate at least 12" from any opening through which flue gases may enter a building (door, window, or gravity air inlet).

The vent termination of vent pipe run vertically through a roof must terminate at least 12" above the roof line (or the anticipated snow level) and be at least 12" from any vertical wall (including any anticipated snow build up).

A vent termination shall not terminate over public walkways or over an area where condensate or vapor could create a nuisance or hazard or could be detrimental to the operation of regulators, relief valves, or other equipment. The combustion air intake termination of a direct vent application should not terminate in an area which is frequently dusty or dirty.

Vent & combustion air pipes may terminate vertically through a roof, or horizontally through an outside wall. The combustion air intake and vent pipe can be terminated in two different pressure zones. The intake vent can terminate on one side of the building, while the flue vent can be terminated on another side of the building or through the roof. In addition, the combustion air intake can be terminated in a sufficiently ventilated attic. Vertical vent pipe terminations should be as shown in figure 21. The penetration of pipes through the roof must be sealed water tight with proper flashing such as is used with a plastic plumbing vent.


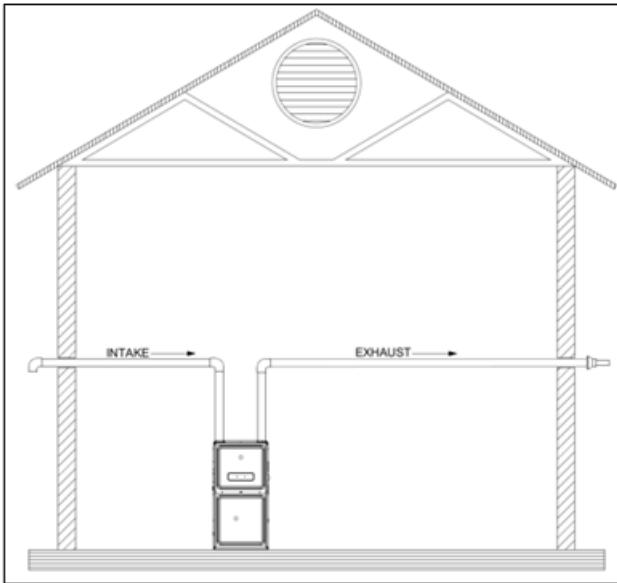


Figure 16

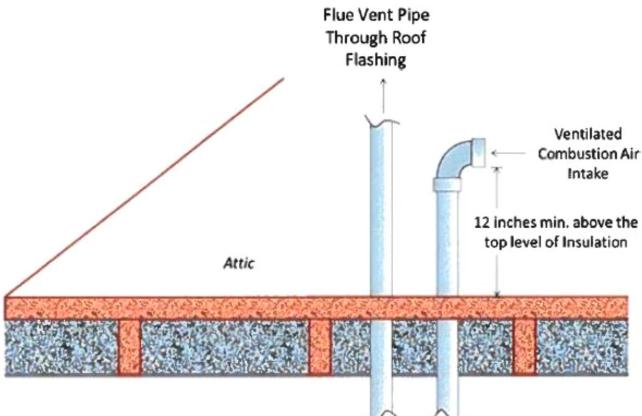

Exhaust Flue and Ventilated Combustion Air Vent Terminations

Figure 17

Horizontal vent pipe terminations should be as shown in the following figures. To secure the pipe passing through the wall and prohibit damage to piping connections, a coupling should be installed on either side of the wall and solvent cemented to a length of pipe connecting the two couplings. The length of pipe should be the wall thickness plus the depth of the socket fittings to be installed on the inside and outside of the wall. The wall penetration should be sealed with silicone caulking material.



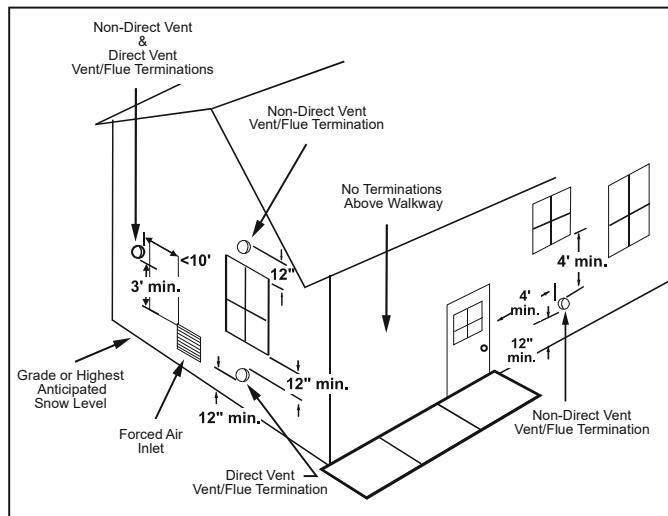


Figure 18

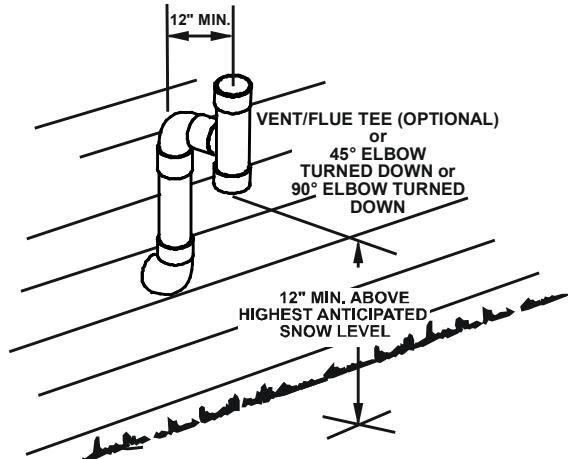

Horizontal Termination (Single Pipe)  
Above Highest Anticipated Snow Level

Figure 19

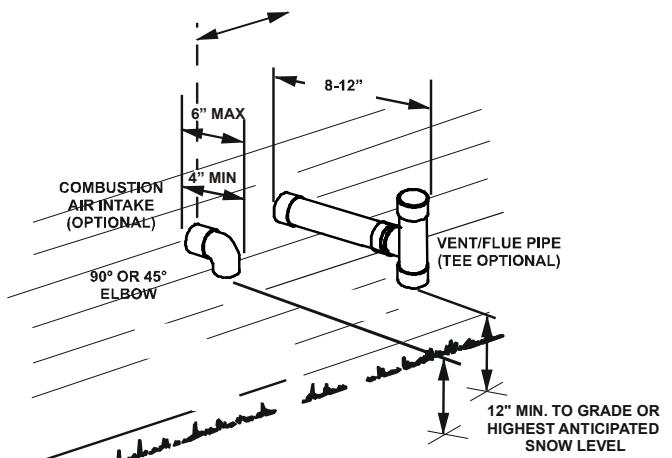

Standard Horizontal Terminations (Dual Pipe)

Figure 20


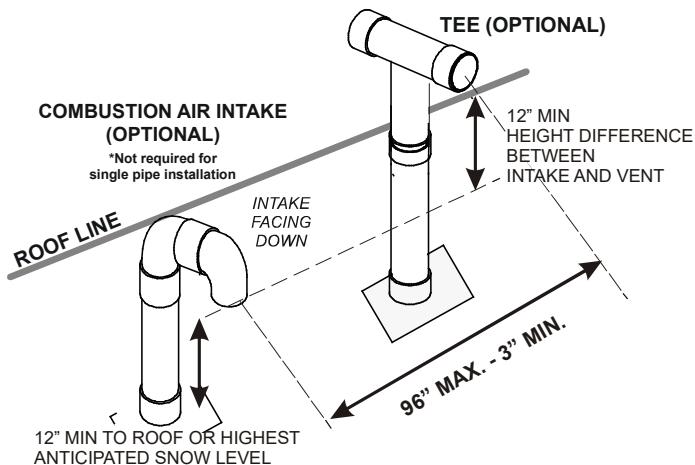


Figure 21

## VENT PIPE TERMINATION OPTIONS

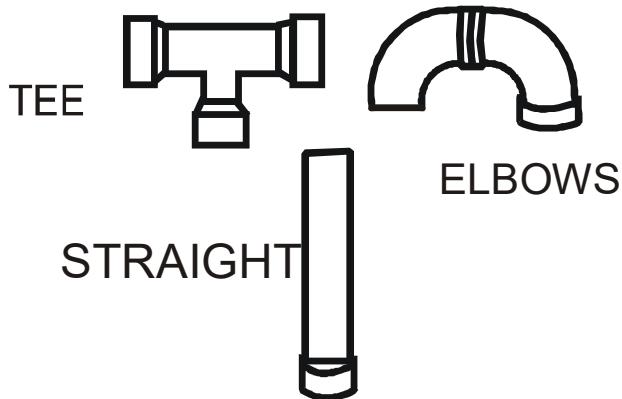


Direct Vent (Dual Pipe) Piping  
Figure 22

| *R 9T96/*D9T96 Direct Vent (2 - Pipe) and Non-Direct Vent (1- Pipe) |                    |                  |     |     |     |     |     |     |     |
|---|--------------------|------------------|-----|-----|-----|-----|-----|-----|-----|
| Maximum Allowable Length of Vent/Flue Pipe                          |                    |                  |     |     |     |     |     |     |     |
| MODEL   | Pipe Size<br>(in.) | Number of Elbows |     |     |     |     |     |     |     |
|   |                    | 1                | 2   | 3   | 4   | 5   | 6   | 7   | 8   |
| *R9T960303AN<br>&<br>*R9T960403AN                                   | 2                  | 75               | 70  | 65  | 60  | 55  | 50  | 45  | 40  |
|   | 3                  | 114              | 107 | 100 | 93  | 86  | 79  | 72  | 65  |
| *R9T960603AN  | 2                  | 75               | 70  | 65  | 60  | 55  | 50  | 45  | 40  |
|   | 3                  | 114              | 107 | 100 | 93  | 86  | 79  | 72  | 65  |
| *R9T960603BN <sup>^</sup>   | 2                  | 50               | 45  | 40  | 35  | 30  | 25  | 20  | 15  |
|   | 3                  | 143              | 136 | 129 | 122 | 115 | 108 | 101 | 94  |
| *R9T960803BN  | 2                  | 60               | 55  | 50  | 45  | 40  | 35  | 30  | 25  |
|   | 3                  | 113              | 106 | 99  | 92  | 85  | 78  | 71  | 64  |
| *R9T960804CN  | 2                  | 60               | 55  | 50  | 45  | 40  | 35  | 30  | 25  |
|   | 3                  | 120              | 113 | 106 | 99  | 92  | 85  | 78  | 71  |
| *R9T961004CN  | 2                  | 45               | 40  | 35  | 30  | 25  | 20  | 15  | 10  |
|   | 3                  | 103              | 96  | 89  | 82  | 75  | 68  | 61  | 54  |
| *R9T961005CN  | 2                  | 45               | 40  | 35  | 30  | 25  | 20  | 15  | 10  |
|   | 3                  | 151              | 144 | 137 | 130 | 123 | 116 | 109 | 102 |
| *R9T961205DN  | 3                  | 185              | 178 | 171 | 164 | 157 | 150 | 143 | 136 |
| *D9T960403BN  | 2                  | 100              | 95  | 90  | 85  | 80  | 75  | 70  | 65  |
|   | 3                  | 110              | 103 | 96  | 89  | 82  | 75  | 68  | 61  |
| *D9T960603BN  | 2                  | 45               | 40  | 35  | 30  | 25  | 20  | 15  | 10  |
|   | 3                  | 110              | 103 | 96  | 89  | 82  | 75  | 68  | 61  |
| *D9T960803BN  | 2                  | 35               | 30  | 25  | 20  | 15  | 10  | 5   | NA  |
|   | 3                  | 103              | 96  | 89  | 82  | 75  | 68  | 61  | 54  |
| *D9T961005CN  | 2                  | 45               | 40  | 35  | 30  | 25  | 20  | 15  | 10  |
|   | 3                  | 110              | 103 | 96  | 89  | 82  | 75  | 68  | 61  |

<sup>^</sup> \*R9T960603BN-add 45' of 2" pipe for upflow.

NOTE: FOR INSTALLATIONS AT OR ABOVE 5,000 FEET ALTITUDE, USE 3" PIPE.

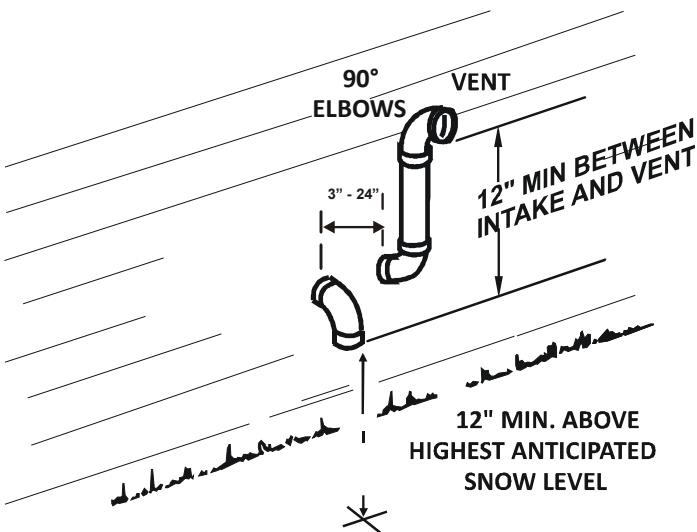

Alternate Horizontal Vent Termination (Dual Pipe)  
Figure 23


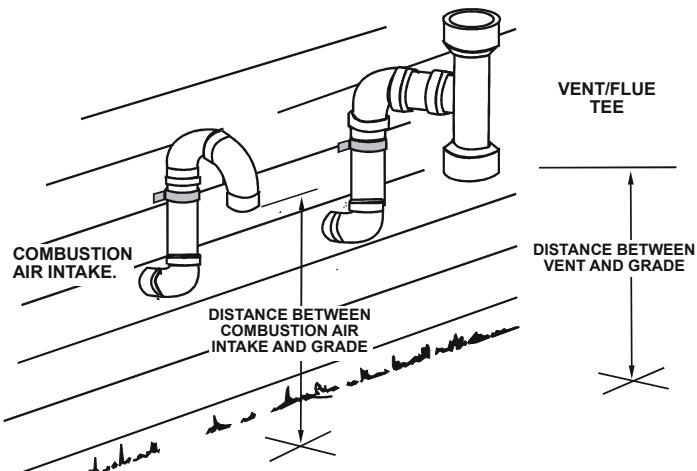


Figure 24

## VENT/FLUE AND COMBUSTION AIR PIPE TERMINATIONS

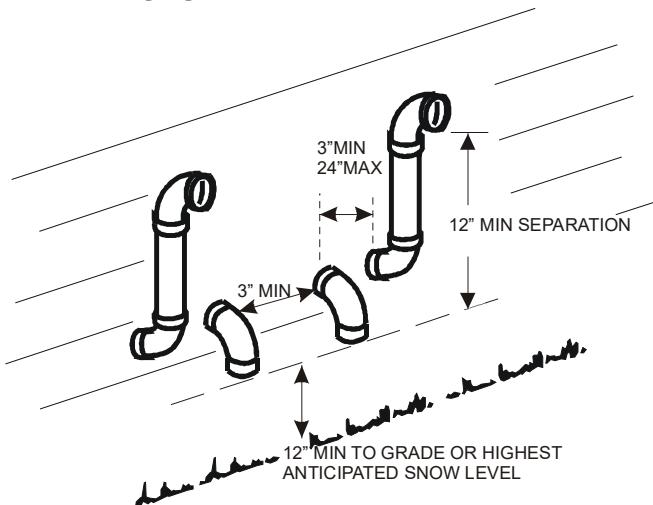

Termination of Multiple Direct Vent Furnaces  
Figure 26

## VENT/INTAKE TERMINATIONS FOR INSTALLATION OF MULTIPLE DIRECT VENT FURNACES

If more than one direct vent furnace is to be installed vertically through a common roof top, maintain the same minimum clearances between the exhaust vent and air intake terminations of adjacent units as with the exhaust vent and air intake terminations of a single unit.

If more than one direct vent furnace is to be installed horizontally through a common side wall, maintain the clearances as in the following figure. Always terminate all exhaust vent outlets at the same elevation and always terminate all air intakes at the same elevation.


### CONCENTRIC VENT TERMINATION

Refer to the directions provided with the Concentric Vent Kit or IO-619 for installation specifications.

### SIDE WALL VENT KIT


This kit is to be used with 2" or 3" direct vent systems. The vent kit must terminate outside the structure and may be installed with the intake and exhaust pipes located side-by-side or with one pipe above the other. These kits are **NOT** intended for use with single pipe (non-direct vent) installations.

Refer to the directions furnished with the Side Wall Vent Kit (p/n 0170K00000S or 0170K00001S) for installation specifications.

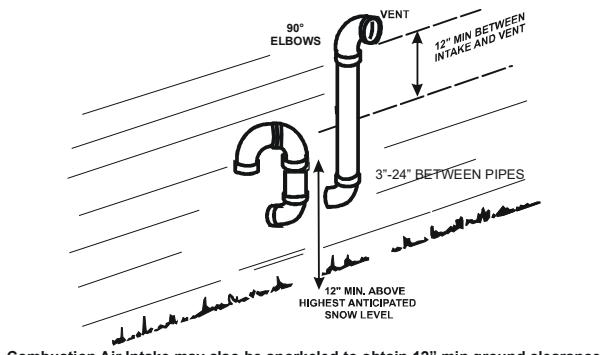

Combustion Air Intake may also be snorkeled to obtain 12" min ground clearance.

Alternate vent termination above anticipated snow level (dual pipe)  
Figure 25

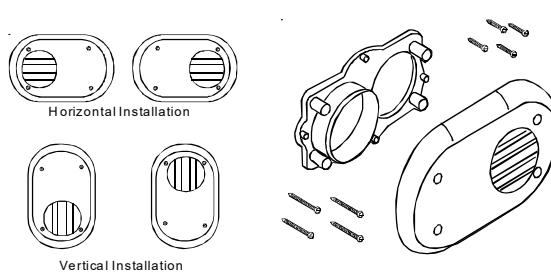

Side Wall Vent Kit  
Figure 27

## CONDENSATE DRAIN LINES & DRAIN TRAP

A condensing gas furnace achieves its high level of efficiency by extracting heat from the products of combustion to the point where condensation takes place. The condensate must be collected in the furnace drain trap and routed to an appropriate drain location in compliance with local and national codes.

Follow the bullets listed below when installing the drain system. Refer to the following sections for specific details concerning furnace drain trap installation and drain hose hook ups.

- The drain trap supplied with the furnace must be used.
- The drain trap must be primed at time of installation.
- The drain line between furnace and drain location must meet local and national codes.
- The drain line between furnace and drain location must maintain a 1/4 inch per foot downward slope toward the drain.
- Do not trap the drain line in any other location than at the drain trap supplied with the furnace.
- If the drain line is routed through an area which may see temperatures near or below freezing, precautions must be taken to prevent condensate from freezing within the drain line.
- If an air conditioning coil is installed with the furnace, a common drain may be used. An open tee must be installed in the drain line, to relieve positive air pressure from the coil's plenum. This is necessary to prohibit any interference with the function of the furnace's drain trap.

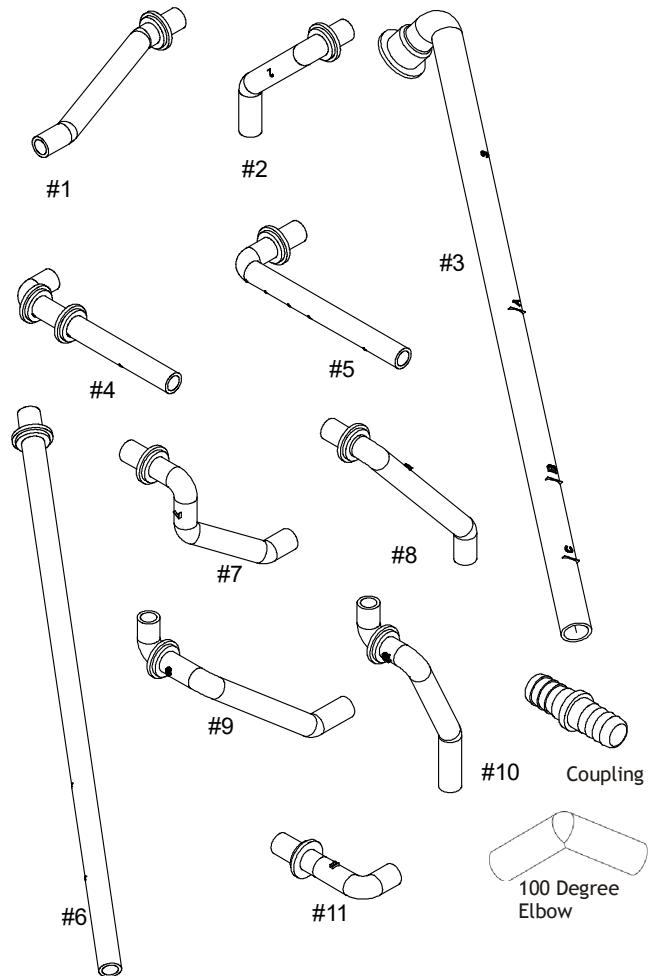


Figure 28

**NOTE:** Drain components shown for information purposes only. For horizontal installations, a Horizontal Drain Kit may be needed. Refer to the Specifications Sheet for kit part number.


## GENERAL DRAIN INFORMATION

All furnace models come with a factory installed drain trap. For vertical installations, the trap will remain in the factory position. All furnace models installed horizontally require the trap to be relocated. Many drain hoses have a built-in grommet which will provide a cabinet seal when installed. See instructions below for your model and installation position.

**NOTE: Both sides of the drain trap must be primed prior to initial furnace start up.**

## FIELD SUPPLIED DRAIN

Drain the furnace and air conditioning coil if applicable, in compliance with code requirements. In horizontal installations, a field installed rubber coupling will allow the drain trap to be removed for cleaning. The drain trap must be primed before initial furnace start up. When an air conditioning coil drain is connected to the field supplied furnace drain, it must be vented with an open tee installed at a height no higher than the bottom of the furnace collector box to prevent air conditioning condensate from backing up into the furnace if the common drain became blocked.

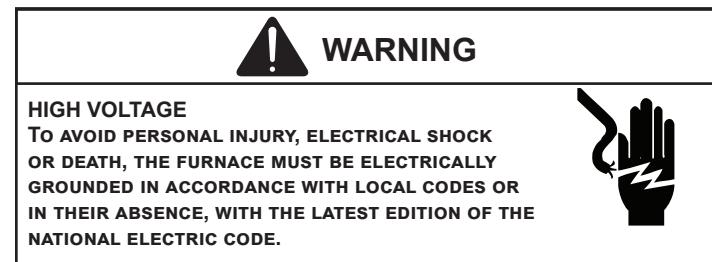

## UPFLOW MODEL INSTALLED VERTICALLY

The trap and factory installed hoses remain as shipped. The furnace drain may exit either the right or left side of the furnace cabinet. Both sides of the cabinet have two .875" diameter holes which can be used interchangeably for drain and low voltage wiring purposes. If a higher drain exit is needed, a .875" diameter hole may be added in the area shown in Figure 30. Any unused cabinet opening must be sealed. Do not allow drain hose to sag or trap water.

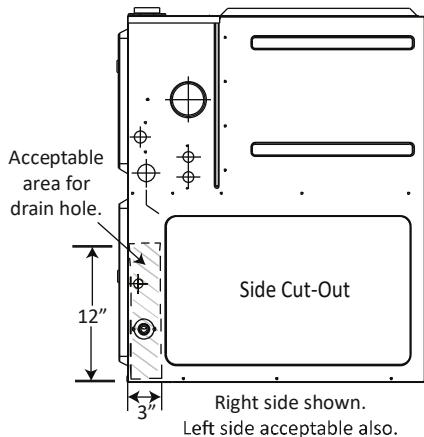


Figure 29

### DRAIN EXITING RIGHT SIDE

1. Locate and Install the 45° pipe / hose drain coupling from the outside of the cabinet (barbed end goes in the cabinet) through hole in the right side of the cabinet and secure with two field supplied #8 self-tapping screws (see Figure 31).
2. Locate the long drain hose #3 and cut at line "A".
3. Install large end of hose #3 to trap outlet and secure with 1.25" clamp.
4. Install smaller end of hose #3 on 45° elbow and secure with 1" clamp.
5. Refer to Field Supplied Drain section for instructions on field supplied / installed drain on outlet of furnace trap.

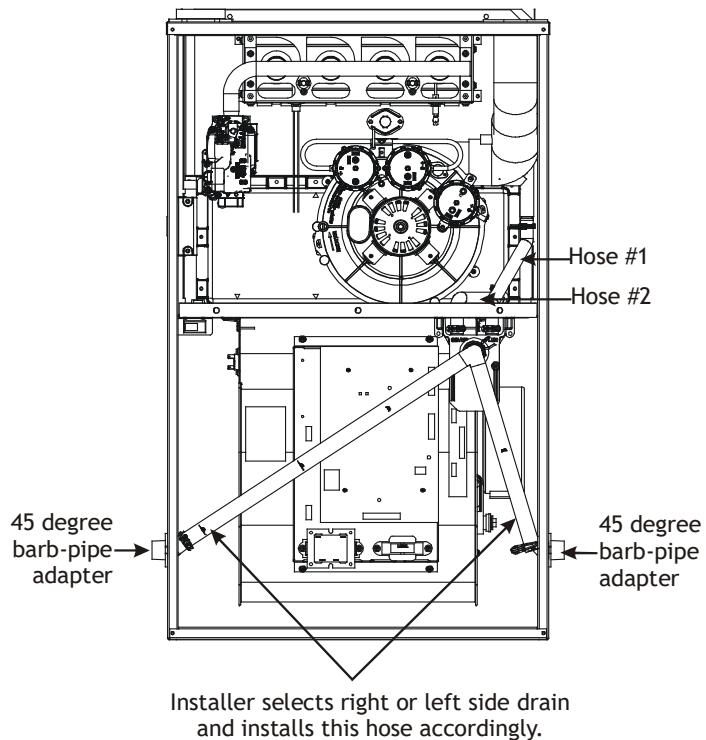


Figure 30

### DRAIN EXITING LEFT SIDE

1. Install the 45 degree pipe / hose drain coupling from the outside of the cabinet (barbed end goes in the cabinet) through the hole in the left side of the cabinet and secure with two field supplied #8 self-tapping screws (see Figure 31).
2. Locate the long drain hose #3 and cut at "B" line for a 17.5" cabinet; cut at line "C" for a 21" cabinet; do not cut for a "D" width cabinet.
3. Install large end of hose #3 to trap outlet and secure with 1.25" clamp.
4. Install smaller end of hose #3 on 45° elbow and secure with 1" clamp.
5. Refer to Field Supplied Drain section for instructions on field supplied / installed drain on outlet of furnace trap.

### UPFLOW MODEL INSTALLED HORIZONTALLY WITH RIGHT SIDE DOWN (SEE FIGURE 31)

*Minimum 5 1/2" clearance is required for the drain trap beneath the furnace.*

1. Remove the clamps from both ends of the drain hoses.
2. Remove the two screws holding the drain trap to the blower deck.
3. Remove the trap and two hoses from the blower deck
4. Remove the two plugs from the right side of the cabinet and install them in the blower deck.
5. (Draining the Vent Elbow) Locate hose #2 (factory installed) and cut 1" away from the 45 degree bend, discard the 45 degree section. Insert hose #2 from outside the cabinet through the cabinet drain hole nearest the top. Secure it to the barbed fitting in the elbow with a red clamp.

6. For models DM96VE0303AN, DM96VE0403AN and DM96VE0603AN; locate the hose #2 (factory installed) and cut 1.5" length from the end of the hose. Insert hose #2 from outside the cabinet through the cabinet drain's hole nearest to the top. Secure it to the barbed fitting in the elbow with a red clamp.
7. (Draining the Collector Box) Install the non-grommet end of hose #11 from outside the cabinet in the bottom drain hole. Install on collector box and secure with a silver clamp.
8. Use two silver clamps and secure the hoses to drain trap. The trap outlet faces the front of the furnace. Secure the trap to the cabinet using two screws removed in step 2 by inserting the two screws through the large set of holes in the top mounting tabs of the trap into the two predrilled holes in the side of the cabinet.
9. Refer to Field Supplied Drain section for instructions on field supplied / installed drain on outlet of furnace trap.

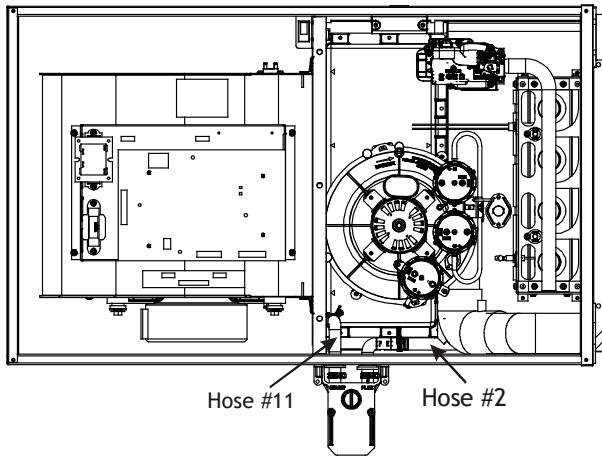


Figure 31

### UPFLOW MODEL INSTALLED HORIZONTALLY WITH LEFT SIDE DOWN (SEE FIGURE 32)

*Minimum 5 1/2" clearance is required for the drain trap beneath the furnace.*

*\*Also see Front Cover Pressure Switch Tube Location on page 11*

1. Remove the clamps from the two drain tubes on the trap.
2. Remove the two screws holding the drain trap to the blower deck.
3. Remove the trap and hoses from the blower deck.
4. Remove the two plugs from the left side of the cabinet and install them in the blower deck.
5. (Draining the Vent Elbow) Locate hose #6. Measuring from the non-grommet end; cut off and discard 1 1/2" for a "D" width cabinet, 5" for a "C" width cabinet, 8 1/2" for a "B" width cabinet.
6. Remove the rubber plug from vent – drain elbow side port. Place hose #6 on the vent – drain elbow side port and secure with a silver clamp.

7. **Unused vent-drain elbow drip leg port must be sealed to prevent flue gases from escaping. Insert the rubber plug removed in Step 6 into the unused elbow drain port; Inserting a blunt tool such as a 3/16" Allen wrench into the center of the rubber plug will stretch the plug and allow complete insertion.**
8. Locate hose #5 and cut 3" from the non-grommet end. Discard the section without the grommet.
9. Insert the cut end of tube #5 through the lower cabinet drain hole.
10. Connect hose #6 & hose #5 using 100° elbow and secure with two red clamps.
11. (Draining the Collector Box) Remove cap from left side collector box drain port (bottom in horizontal left position) and install it on the right side (top) collector box drain port.
12. Install the non-grommet end of hose #11 from outside the cabinet in the upper drain hole. Install on collector box and secure with a silver clamp.
13. Use two silver clamps and secure the hoses to drain trap. The trap outlet faces the front of the furnace. Secure the trap to the cabinet using two screws removed in step 2 by inserting the two screws through the large set of holes in the top mounting tabs of the trap into the two predrilled holes in the side of the cabinet.
14. Refer to Field Supplied Drain section for instructions on field supplied / installed drain on outlet of furnace trap.

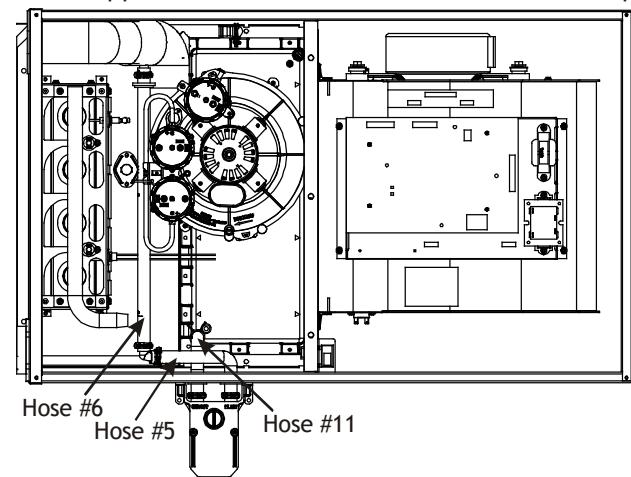


Figure 32

### UPFLOW MODEL INSTALLED HORIZONTALLY WITH LEFT SIDE DOWN-ALTERNATE (SEE FIGURE 33)

*\*Also see Front Cover Pressure Switch Tube Location on page 11*

1. (Draining the RF000142 Coupling) Locate hose #2 (factory installed). Cut off and discard the 45°radius end.
2. Install 90°radius end of hose #2 on RF000142 drain outlet and secure with a red clamp.
3. Insert coupling in hose #2 and secure with a red clamp.
4. Locate hose #5 and cut 3" from the non-grommet end. Discard the section without the grommet.

5. Insert the cut end of tube #5 through the lower cabinet drain hole.
6. Insert 100 degree elbow in the cut end of hose #5.
7. Locate hose #6. Using red clamps, connect between the coupling and 100 degree elbow, cutting off excess tubing.
8. (Draining the Collector Box) Remove cap from left side collector box drain port (bottom in horizontal left position) and install it on right side (top) collector box drain port.
9. Install the non-grommet end of hose #11 from outside the cabinet in the upper drain hole. Install on collector box and secure with a silver clamp.
10. Use two silver clamps and secure the hoses to drain trap. The trap outlet faces the front of the furnace. Secure the trap to the cabinet using two screws removed in step 2 by inserting the two screws through the large set of holes in the top mounting tabs of the trap into the two predrilled holes in the side of the cabinet.

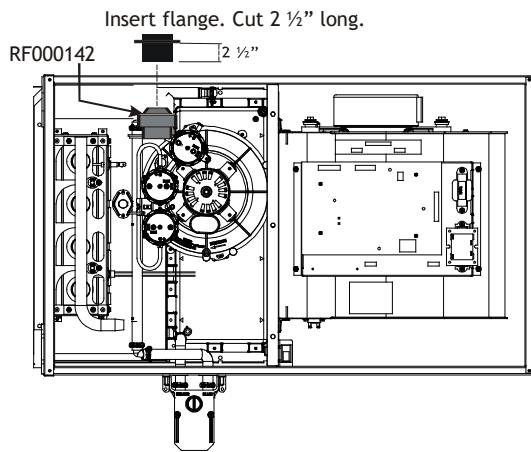


Figure 33

## COUNTERFLOW MODEL INSTALLED VERTICALLY

The furnace drain may exit the right or left side of the furnace cabinet (left side preferred) Trap and factory installed hoses remain as shipped if the drain will exit the left side of the cabinet. Draining from the right side requires relocation of the trap to outside the cabinet.

## DRAIN EXITING LEFT SIDE (SEE FIGURE 34)

1. Install a field supplied rubber coupling secured with a 1 1/4" clamp to enable removing the trap for future cleaning. Alternately, a PVC fitting may be glued on the trap outlet.
2. Install drain per local and National codes.

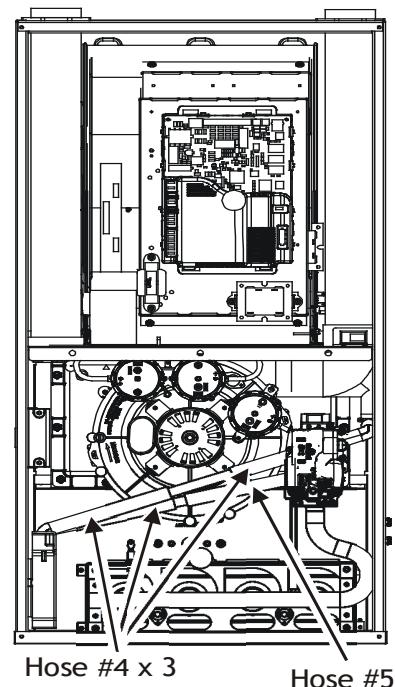


Figure 34

## DRAIN EXITING RIGHT SIDE (SEE FIGURE 35)

1. Remove hose clamps and hoses from trap.
2. Remove trap and factory installed drain tube assemblies.
3. (Draining the Vent Elbow) Insert the non-grommet end hose #10 into the cabinet back drain hole. Insert a coupling into the drip leg of the vent-drain elbow and secure with a silver clamp. Secure hose #10 on vent - drain elbow barb fitting with a silver clamp.
4. (Draining the Collector Box) Insert non-grommet end of hose #9 into the cabinet front drain hole and secure on collector box drain port with a silver clamp.
5. Mate the drain trap inlets to the hoses and secure with silver clamps.
6. Line up the trap mounting holes with the pre-drilled holes in the furnace and secure with 2 screws removed in step 2.
7. Refer to Field Supplied Drain section for instructions on field supplied / installed drain on outlet of furnace trap.

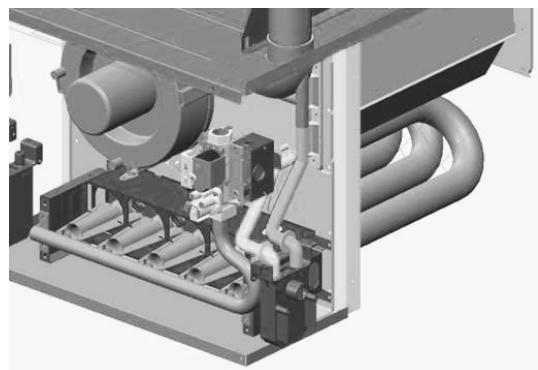


Figure 35

## COUNTERFLOW MODEL INSTALLED HORIZONTAL-LY WITH RIGHT SIDE DOWN (SEE FIGURE 36)

Minimum 5 1/2" clearance is required for the drain trap beneath the furnace.

**NOTE:** For horizontal installations, some of the required hoses are found in the factory-installed hose assemblies. Remove the hose clamps to obtain the respective hoses needed for installation, and install per the following directions.

1. Remove the drain trap and factory installed drain tube assemblies.
2. Remove two 1" plugs from right side of cabinet.
3. (Draining the Collector Box) From outside the cabinet, insert the non-grommet end hose #7 into the back drain hole and secure to collector box drain port using a silver clamp.
4. (Draining the Vent Elbow) Insert the straight barbed coupling into the vent - drain elbow drip leg and secure with a red clamp.
5. From outside the cabinet, insert the non-grommet end of hose #8 into the front cabinet drain hole and secure on the vent - drain elbow barb fitting using a red clamp.
6. Place the drain hoses on the trap inlets and secure with silver clamps. The outlet of the trap must face the original bottom of furnace.
7. Using the two sheet metal screws provided in the cabinet, secure the trap to the furnace.
8. Refer to Field Supplied Drain section for instructions on field supplied/installed drain on outlet of furnace trap.

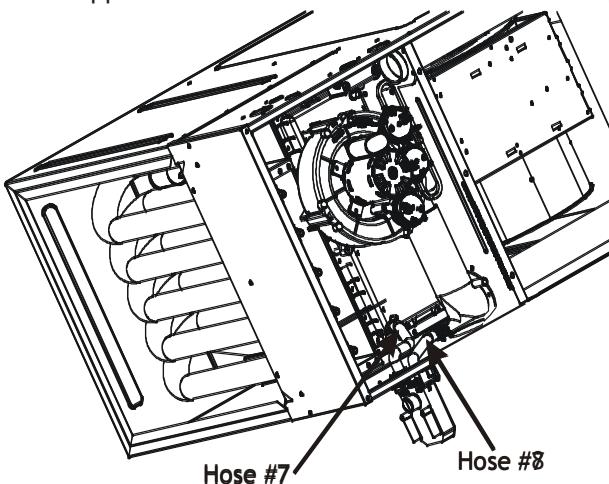


Figure 36

## COUNTERFLOW MODEL INSTALLED HORIZONTAL-LY WITH LEFT SIDE DOWN (SEE FIGURE 37)

\*Also see Front Cover Pressure Switch Tube Location on page 11.

Minimum 5 1/2" clearance is required for the drain trap beneath the furnace.

**NOTE:** For horizontal installations, some of the required hoses are found in the factory-installed hose assemblies. Remove the hose clamps to obtain the respective hoses needed for installation, and install per the following directions.

1. Remove the factory installed drain trap and hose assemblies. Leave the 100° elbow inserted and clamped in the vent-drain elbow.
2. Remove two 1"plugs from left side of cabinet
3. (Draining the Collector Box) Remove the cap from the left side of the collector box drain port (bottom in horizontal left position) and install it on right side drain port.
4. Place radius end of hose #4 (factory installed) on the collector box drain port and secure with a silver clamp.
5. Insert hose #2 from outside the cabinet in the front drain hole.
6. Connect hose #4 & hose #2 together using a straight barbed coupling and two gold clamps (factory installed).
7. (Draining the Vent Elbow) Remove rubber plug from vent – drain elbow side port.
8. **The unused vent-drain elbow drip leg port must be plugged to prevent flue gases from escaping.** Insert rubber plug removed in step 7 into the 100°elbow. (Inserting a blunt tool such as a 3/16" Allen wrench into the center of the rubber plug will stretch the plug and allow complete insertion)
9. Place radius end of hose #4 on the side port of vent – drain elbow and secure with a gold clamp.
10. Insert a 1/2" diameter PVC pipe (factory installed) into hose #4 and secure with a gold clamp.
11. Insert the non-grommet end of hose #5 (factory installed) from outside the cabinet in the back drain hole.
12. Insert 100° elbow in hose #5 and secure with a red clamp.
13. Locate hose #4 and cut a cut off a 4" straight section and discard the radius end.
14. Connect the 4" straight section of hose #4 to the 100° elbow and the PVC pipe and secure with red clamps.
15. Connect the hoses to the trap inlets and secure with silver clamps, drain trap outlet must point to the original bottom of the furnace.
- 16.Using the two sheet metal screws provided in the cabinet, secure the trap to the furnace.
17. Refer to Field Supplied Drain section for instructions on field supplied / installed drain on outlet of furnace trap.

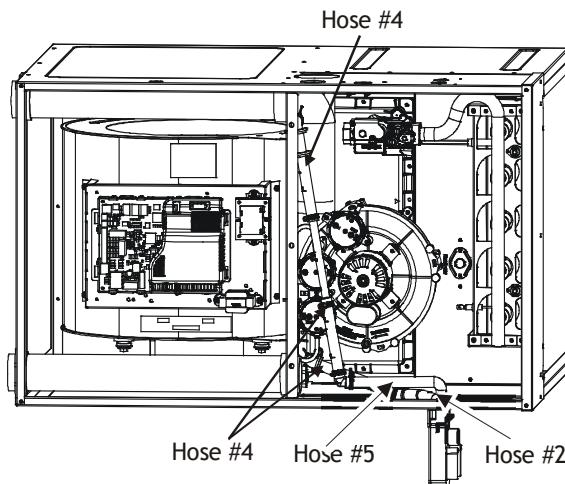


Figure 37

## COUNTERFLOW MODEL INSTALLED HORIZONTAL-LY WITH LEFT SIDE DOWN - ALTERNATE


Minimum 5 1/2" clearance is required for the drain trap beneath the furnace

\*Also see Front Cover Pressure Switch Tube Location on page 10 and the alternate vent connections on page 15.

1. Remove the factory installed drain trap and hose assemblies.
2. Remove two 1"plugs from left side of cabinet.
3. (Draining the Collector Box) Remove the cap from the left side of the collector box drain port (bottom in horizontal left position) and install it on right side drain port.
4. Place radius end of hose #4 (factory installed) on the collector box drain port and secure with a silver clamp.
5. Insert hose #2 from outside the cabinet in the front drain hole.
6. Connect hose #4 & hose #2 together using a straight barbed coupling and two gold clamps (factory installed).
7. (Draining the RF000142 Coupling) Place radius end of hose #4 on the uncapped port of the coupling and secure with a gold clamp.
8. Insert a 1/2" diameter PVC pipe (factory installed) into hose #4 and secure with a gold clamp.
9. Insert the non-grommet end of hose #5 (factory installed) from outside the cabinet in the back drain hole.
10. Insert 100° elbow in hose #5 and secure with a red clamp.
11. Locate hose #4 and cut a cut off a 4" straight section and discard the radius end.
12. Connect the 4" straight section of hose #4 to the 100° elbow and the PVC pipe and secure with red clamps.
13. Connect the hoses to the trap inlets and secure with silver clamps, drain trap outlet must point to the original bottom of the furnace.

14. Using the two sheet metal screws provided in the cabinet, secure the trap to the furnace.


15. Refer to Field Supplied Drain section for instructions on field supplied / installed drain on outlet of furnace trap.

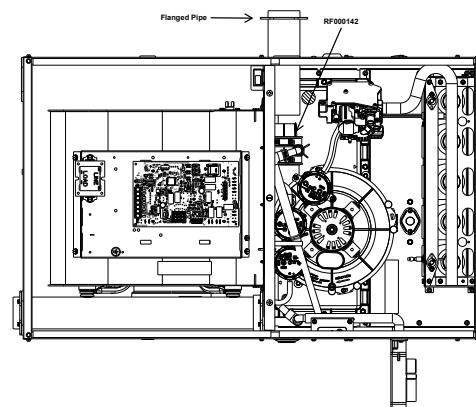

## ELECTRICAL CONNECTIONS

### WIRING HARNESS

The wiring harness is an integral part of this furnace. Wires are color coded for identification purposes. Refer to the wiring diagram for wire routings. If any of the original wire as supplied with the furnace must be replaced, it must be replaced with wiring material having a temperature rating of at least 105° C. Any replacement wiring must be a copper conductor.

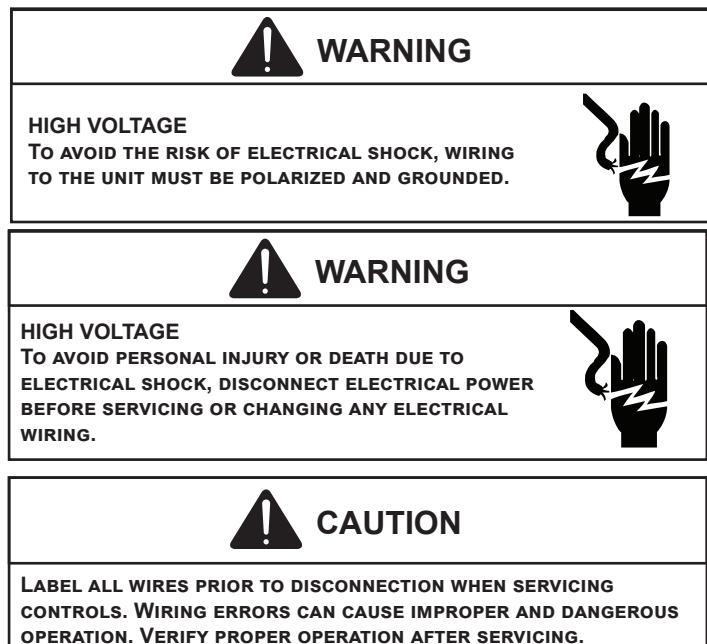

## 115 VOLT LINE CONNECTIONS

Before proceeding with electrical connections, ensure that the supply voltage, frequency, and phase correspond to that specified on the unit rating plate. Power supply to the furnace must be NEC Class 1, and must comply with all applicable codes. The furnace must be electrically grounded in accordance with local codes or, in their absence, with the latest edition of The National Electric Code, ANSI NFPA 70 and / or The Canadian Electric Code CSA C22.1.

Use a separate fused branch electrical circuit containing properly sized wire, and fuse or circuit breaker. The fuse or circuit breaker must be sized in accordance with the maximum overcurrent protection specified on the unit rating plate. An electrical disconnect must be provided at the furnace location.

Connect hot, neutral, and ground wires as shown in the wiring diagram located on the unit's blower door. Metal conduit is not considered a substitute for an actual ground wire to the unit. For direct vent applications, the cabinet opening to the junction box must be sealed air tight using either a UL approved bushing such as Heyco Liquid Tight or by applying non-reactive UL approved sealant to bushing.

Line polarity must be observed when making field connections. Line voltage connections can be made through either the right or left side panel. The furnace is shipped configured for a left side electrical connection with the junction box located inside the burner compartment. To make electrical connections through the opposite side of the furnace, the junction box must be relocated to the other side of the burner compartment prior to making electrical connections. To relocate the junction box, follow the steps shown below.

**NOTE:** Wire routing must not interfere with circulator blower operation, filter removal, or routine maintenance.

### JUNCTION BOX RELOCATION



#### WARNING

EDGES OF SHEET METAL HOLES MAY BE SHARP. USE GLOVES AS A PRECAUTION WHEN REMOVING HOLE PLUGS.



#### WARNING

##### HIGH VOLTAGE

TO AVOID THE RISK OF INJURY, ELECTRICAL SHOCK OR DEATH, THE FURNACE MUST BE ELECTRICALLY GROUNDED IN ACCORDANCE WITH LOCAL CODES OR IN THEIR ABSENCE, WITH THE LATEST EDITION OF THE NATIONAL ELECTRICAL CODE.



Line voltage connections can be made through either the right or left side panel. The furnace is shipped configured for a left side electrical connection. To make electrical connections through the opposite side of the furnace, the junction box must be relocated to the left side prior to making electrical connections. To relocate the junction box, perform the following steps.

1. Remove the burner compartment door.

2. Remove and save the two screws securing the junction box to the side panel.
3. Relocate junction box and associated plugs and grommets to opposite side panel. Secure with screws removed in step 2.

To ensure proper unit grounding, the ground wire should run from the furnace ground screw located inside the furnace junction box all the way back to the electrical panel. **NOTE:** Do not use gas piping as an electrical ground. To confirm proper unit grounding, turn off the electrical power and perform the following check.

1. Measure resistance between the neutral (white) connection and one of the burners.
2. Resistance should measure 10 ohms or less.

This furnace is equipped with a blower door interlock switch which interrupts unit voltage when the blower door is opened for servicing. Do not defeat this switch.


### 24 VOLT THERMOSTAT WIRING

#### IMPORTANT NOTE

WIRE ROUTING MUST NOT INTERFERE WITH CIRCULATOR BLOWER OPERATION, FILTER REMOVAL OR ROUTINE MAINTENANCE.

Low voltage connections can be made through either the right or left side panel. Thermostat wiring entrance holes are located in the blower compartment. The following figure shows connections for a "heat/cool system".

This furnace is equipped with a 40 VA transformer to facilitate use with most cooling equipment. Consult the wiring diagram, located on the blower compartment door, for further details of 115 Volt and 24 Volt wiring.

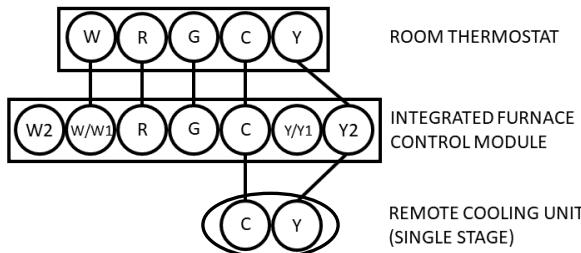

*Thermostat - Single -Stage Heating with Single-Stage Cooling*


**NOTE:** To apply a single-stage Heating Thermostat, the thermostat selector switch on the Integrated Control Module *must* be set on single-stage.

**Figure 38**




#### WARNING

TO PREVENT PERSONAL INJURY OR DEATH DUE TO ELECTRIC SHOCK, DISCONNECT ELECTRICAL POWER BEFORE INSTALLING OR SERVICING THIS UNIT.

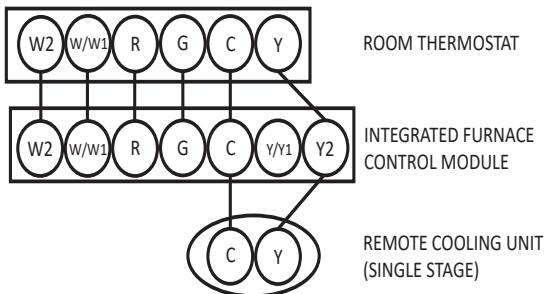

**Thermostat - Two-Stage Heating with Single-Stage Cooling**

Figure 39

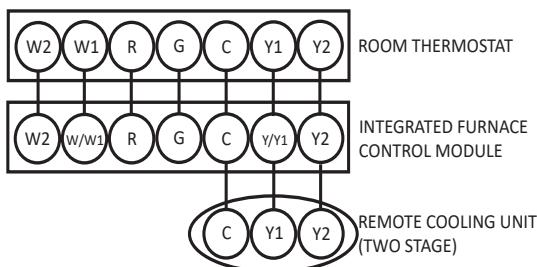

**Thermostat - Two-Stage Heating with Two-Stage Cooling**  
Thermostat Wiring Diagrams

Figure 40

## SINGLE-STAGE HEATING THERMOSTAT

### APPLICATION

A single-stage heating thermostat may be used to control this furnace, however the furnace is setup by default to use a two-stage heating thermostat. To use a single stage heating thermostat the installer must make the desired selections in the user menus using the push button switches on the control board.

When a single stage heating thermostat is used there are two options for controlling the timed transition from low to high fire: 1) Auto 2) Fixed Time

- Press the Left or Right menu switch to get to the A H S menu.
- The menu will display these options; **no 10 20 30 60 AUt**
- Fixed time options are expressed in minutes on the display as;**10 20 30 60**.
- If **AUt** (Automatic) is selected, the actual timing for the transition to 2nd stage heat will be calculated by the control board based on length of run time of previous heating cycles (duty cycle).
- Press the center switch to save the selection.

In Auto mode, the transition to 2nd stage heat will vary between 1 to 12 minutes

| <u>Duty Cycle %</u> | <u>Timing to 2nd Stage Gas Heat</u> | <u>Demand</u>           |
|---------------------|-------------------------------------|-------------------------|
| 0-38                | 12 minutes                          | <u>Light</u>            |
| 39-50               | 10 minutes                          | <u>Light to Average</u> |
| 51-62               | 7 minutes                           | <u>Average</u>          |
| 63-75               | 5 minutes                           | <u>Average to Heavy</u> |
| 76-88               | 3 minutes                           | <u>Heavy</u>            |
| 89-100              | 1 minutes                           | <u>Heavy</u>            |

## FOSSIL FUEL APPLICATIONS

This furnace can be used in conjunction with a heat pump in a fossil fuel application. A fossil fuel application refers to a combined gas furnace and heat pump installation which uses an outdoor temperature sensor to determine the most cost efficient means of heating (heat pump or gas furnace).

A heat pump thermostat with *three stages of heat* is required to properly use a two-stage furnace in conjunction with a heat pump. Refer to the fossil fuel kit installation instructions for additional thermostat requirements.

Strictly follow the wiring guidelines in the fossil fuel kit installation instructions. All furnace connections must be made to the furnace two-stage integrated control module and the "FURNACE" terminal strip on the fossil fuel control board.

## TWINNING

For Furnace Twinning information, please refer to the Furnace Twinning installation manual IO-2001. Please scan the QR code below to open the document.



### WARNING

**ALL ACCESSORIES THAT MAY BECOME A POTENTIAL IGNITION SOURCE IF INSTALLED, SUCH AS ELECTRONIC AIR CLEANERS, MUST ONLY BE POWERED THROUGH A DAIKIN ACCESSORY CONTROL BOARD KIT. IF AN ELECTRONIC AIR CLEANER IS ALREADY INSTALLED IN THE DUCT WORK AND NOT CONNECTED TO THE ACCESSORY CONTROL BOARD, IT WILL HAVE TO BE DISABLED OR REMOVED. ENSURE THAT ANY ADDITIONAL WIRING FROM THE INDOOR UNIT TO THE ACCESSORY CONTROL BOARD IS ROUTED AND PROTECTED FROM DAMAGE AND WEAR, AVOIDING THE FLUE PIPE AND ANY JOINTS THAT MAY NEED BRAZED OR DISCONNECTED FOR SERVICE. REFER TO THE PRODUCT SPECIFICATION SHEET FOR THE ACCESSORY CONTROL BOARD KIT PART NUMBER.**

## 115 VOLT LINE CONNECTION OF ACCESSORIES (HUMIDIFIER AND ELECTRONIC AIR CLEANER)

The furnace integrated control module is equipped with line voltage accessory terminals for controlling power to an optional field-supplied humidifier and/or electronic air cleaner.


The accessory load specifications are noted in the chart below:

|                        |                            |
|------------------------|----------------------------|
| Humidifier             | 1.0 Amp maximum at 120 VAC |
| Electronic Air Cleaner | 1.0 Amp maximum at 120 VAC |

Turn OFF power to the furnace before installing any accessories. Follow the humidifier or air cleaner manufacturers' instructions for locating, mounting, grounding, and controlling these accessories. Accessory wiring connections are to be made through the 1/4" quick connect terminals provided on the furnace integrated control module. The humidifier and electronic air cleaner hot terminals are identified as HUM H and EAC H. The humidifier and electronic air cleaner neutral terminals are identified as NEUTRAL. All field wiring must conform to applicable codes. Connections should be made as shown.

If it is necessary for the installer to supply additional line voltage wiring to the inside of the furnace, the wiring must conform to all local codes, and have a minimum temperature rating of 105°C. All line voltage wire splices must be made inside the furnace junction box.

The integrated control module humidifier terminal (HUM H) is energized with 115 volts whenever the induced draft blower is energized. The integrated control module electronic air cleaner terminal (EAC H) is energized with 115 volts whenever the circulator blower is energized. This terminal can also be used to provide 115 volt power to a humidifier transformer. The remaining primary transformer wire would be connected to the Line N on the control board.

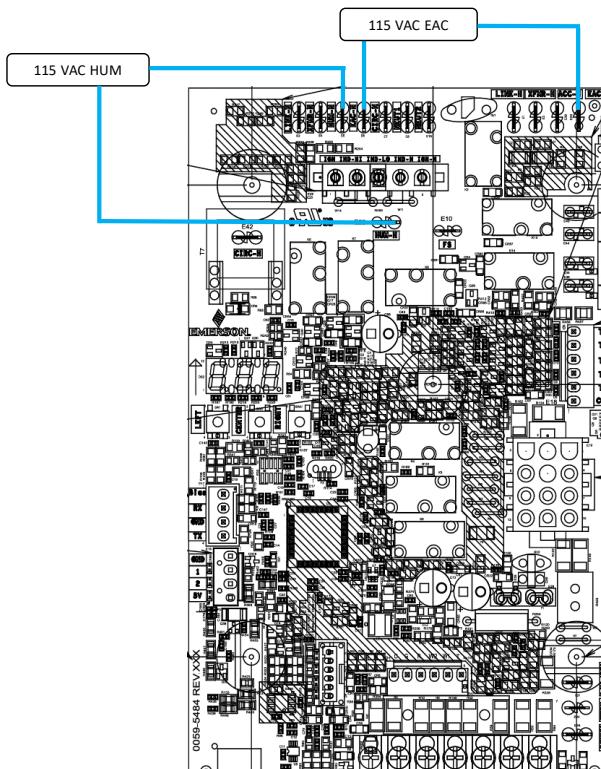

**115 VAC Accessories - Accessories Wiring**  
**Figure 41**

### 24 VOLT HUMIDIFIER CONNECTION

The furnace integrated control module is equipped with a low voltage terminal for providing power to an optional field-supplied 24 volt humidifier. The 24V HUM terminal is energized any time the draft inducer is powered. See connection diagram below.

Note: This is a 24 volt circuit only, the common connection must be on C terminal of the low voltage terminal strip (where thermostat wires are connected). Wiring for this circuit must NOT be connected to the line N location where line voltage neutral wires are connected.

### LOW VOLTAGE VENTILATION


The Ventilation connections provide a dry contact for field ventilator wiring connections. These connections are normally open and energize during the R-32 fault/alarm condition. VT IN and a VT OUT connections are provided on the control board and are shown in the image below.

### LOW VOLTAGE A2L ALARM

The A2L alarm connection provides 24VAC for field alarm wiring connections. These connections are normally open and energize during the R-32 fault/alarm condition. An A2L Alarm connection is provided on the control board and is shown in the image below.

### FIELD INSTALLED ACCESSORIES

Additional accessories that do not have dedicated terminals on the furnace control board may require an additional daughter board to be installed. Please refer to service manual on your product for more information.

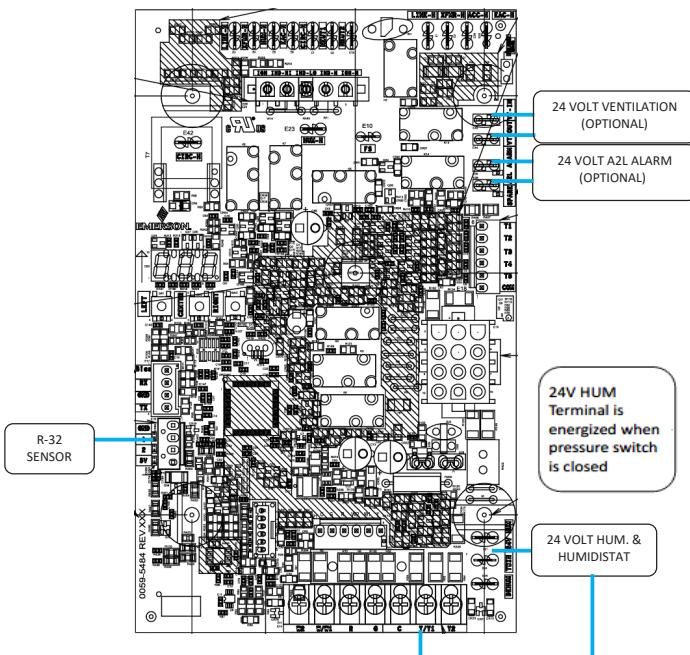

**Accessories - Accessories Wiring**  
Figure 42

## GAS SUPPLY AND PIPING

| <b>WARNING</b>  |                     |                     |
|---|---------------------|---------------------|
| TO AVOID POSSIBLE UNSATISFACTORY OPERATION OF EQUIPMENT OR DAMAGE DUE TO UNDERFIRING OF EQUIPMENT, USE THE PROPER SIZE OF NATURAL/PROPANE GAS PIPING NEEDED WHEN RUNNING PIPE FROM THE METER/TANK TO THE FURNACE. |                     |                     |
| <b>INLET GAS SUPPLY PRESSURE</b>  |                     |                     |
| Natural Gas   | Minimum: 4.5" w.c.  | Maximum: 10.0" w.c. |
| Propane Gas   | Minimum: 11.0" w.c. | Maximum: 13.0" w.c. |

The furnace rating plate includes the approved furnace gas input rating and gas types. The furnace must be equipped to operate on the type of gas applied. This includes any conversion kits required for alternate fuels and/or high altitude.

Inlet gas supply pressures must be maintained within the ranges specified in the adjacent table. The supply pressure must be constant and available with all other household gas fired appliances operating. The minimum gas supply pressure must be maintained to prevent unreliable ignition. The maximum must not be exceeded to prevent unit overfiring.

### PROPANE GAS/HIGH ALTITUDE

#### INSTALLATIONS

| <b>WARNING</b>   |  |  |
|--|--|--|
| POSSIBLE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH MAY OCCUR IF THE CORRECT CONVERSION KITS ARE NOT INSTALLED. THE APPROPRIATE KITS MUST BE APPLIED TO ENSURE SAFE AND PROPER FURNACE OPERATION. ALL CONVERSIONS MUST BE PERFORMED BY A QUALIFIED INSTALLER OR SERVICE AGENCY. |  |  |

This furnace is shipped from the factory configured for natural gas at standard altitude. Propane gas installations require an orifice and spring change to compensate for the energy content difference between natural and propane gas.

High altitude installations may require both a pressure switch and an orifice/spring change. These changes are necessary to compensate for the natural reduction in the density of both the gas fuel and the combustion air at higher altitude.

If converting to LP gas, a low pressure switch should be installed per the LP kit. This low pressure switch will prevent the furnace from firing when the LP gas supply pressure is too low to support proper combustion.

Installation of this furnace at altitudes above 7000 ft (2134 m) shall be made in accordance with the Listed High Altitude Conversion Kit available with this furnace."

L'installation de ce générateur de chaleur à des altitudes supérieures à 7000 pi (2134 m) doit être effectuée conformément aux instructions accompagnant la trousse de conversion pour haute altitude fournie avec cet appareil.

For installations above 7000 feet, please refer to the furnace Specification Sheets for required kit(s).

Contact the distributor for a tabular listing of appropriate manufacturer's kits for propane gas and/or high altitude installations. The indicated kits must be used to insure safe and proper furnace operation. All conversions must be performed by a qualified installer, or service agency.

| GAS     | ALTITUDE | KIT        | ORIFICE     | MANIFOLD PRESSURE |           | PRESSURE SWITCH |
|---------|----------|------------|-------------|-------------------|-----------|-----------------|
|         |          |            |             | HIGH STAGE        | LOW STAGE |                 |
| NATURAL | 0 - 7000 | NONE       | #45 (1)     | 3.5" w.c.         | 1.9" w.c. | NONE            |
|         |          |            | #50 (2)     |                   |           |                 |
| PROPANE |          | LPM-34 (1) | 1.25MM (1)  | 10.0" w.c.        | 6.0" w.c. | NONE            |
|         |          |            | LPM-30* (2) |                   |           |                 |
|         |          |            | #57 (2)     |                   |           |                 |

(1) FOR USE WITH ALL MODELS EXCEPT \*R9T960303AN

(2) FOR USE WITH ONLY \*R9T960303AN

### HIGH ALTITUDE DERATE

When this furnace is installed at high altitude, the appropriate High Altitude orifice kit must be applied. This is required due to the natural reduction in the density of both the gas fuel and combustion air as altitude increases. The kit will provide the proper design certified input rate within the specified altitude range.

High altitude kits are purchased according to the installation altitude and usage of either natural or propane gas. Consult the furnace Specification Sheet for appropriate kits.

Do **not** derate the furnace by adjusting the manifold pressure to a lower pressure than specified on the furnace rating plate. The combination of the lower air density and a lower manifold pressure will prohibit the burner orifice from drawing the proper amount of air into the burner. This may cause incomplete combustion, flashback, and possible yellow tipping.

In some areas the gas supplier may artificially derate the gas in an effort to compensate for the effects of altitude. If the gas is artificially derated, the appropriate orifice size must be determined based upon the BTU/ft<sup>3</sup> content of the derated gas and the altitude. Refer to the National Fuel Gas Code, NFPA 54/ANSI Z223.1, and information provided by the gas supplier to determine the proper orifice size.

A different pressure switch may be required at high altitude regardless of the BTU/ft<sup>3</sup> content of the fuel used. Consult the furnace Specification Sheet for pressure switch.

## GAS VALVE

This unit is equipped with a 24 volt gas valve controlled during furnace operation by the integrated control module. As shipped, the valve is configured for natural gas. The valve is field convertible for use with propane gas by replacing the regulator spring with a propane gas spring from an appropriate manufacturer's propane gas conversion kit. Taps for measuring the gas supply pressure and manifold pressure are provided on the valve.

The gas valve has a manual ON/OFF control located on the valve itself. This control may be set only to the "ON" or "OFF" position. Refer to the lighting instructions label or *Startup Procedure & Adjustment* for use of this control during start up and shut down periods.

## GAS PIPING CONNECTIONS

The gas piping supplying the furnace must be properly sized based on the gas flow required, specific gravity of the gas, and length of the run. The gas line installation must comply with local codes, or in their absence, with the latest edition of the National Fuel Gas Code, NFPA 54/ANSI Z223.1.

To connect the furnace to the building's gas piping, the installer must supply a ground joint union, drip leg, manual shutoff valve, and line and fittings to connect to gas valve. In some cases, the installer may also need to supply a transition piece from 1/2" pipe to a larger pipe size.

The following stipulations apply when connecting gas piping. Refer to *Gas Piping Connections* figure for typical gas line connections to the furnace.

- Gas piping must be supported external to the furnace cabinet so that the weight of the gas line does not distort the burner rack, manifold or gas valve.
- Use black iron or steel pipe and fittings for building piping. Where possible, use new pipe that is properly chamfered, reamed, and free of burrs and chips. If old pipe is used, be sure it is clean and free of rust, scale, burrs, chips, and old pipe joint compound.
- Use pipe joint compound on male threads ONLY. Always use pipe joint compound (pipe dope) that is APPROVED FOR ALL GASES. DO NOT apply compound to the first two threads.
- Use ground joint unions.
- Install a drip leg to trap dirt and moisture before it can enter the gas valve. The drip leg must be a minimum of three inches long.



## WARNING

**POSSIBLE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH MAY OCCUR IF THE CORRECT CONVERSION KITS ARE NOT INSTALLED. THE APPROPRIATE KITS MUST BE APPLIED TO ENSURE SAFE AND PROPER FURNACE OPERATION. ALL CONVERSIONS MUST BE PERFORMED BY A QUALIFIED INSTALLER OR SERVICE AGENCY.**

Natural Gas Capacity of Pipe  
In Cubic Feet of Gas Per Hour (CFH)

| Length of Pipe in Feet | Nominal Black Pipe Size |      |     |        |        |
|------------------------|-------------------------|------|-----|--------|--------|
|                        | 1/2"                    | 3/4" | 1"  | 1 1/4" | 1 1/2" |
| 10                     | 132                     | 278  | 520 | 1050   | 1600   |
| 20                     | 92                      | 190  | 350 | 730    | 1100   |
| 30                     | 73                      | 152  | 285 | 590    | 980    |
| 40                     | 63                      | 130  | 245 | 500    | 760    |
| 50                     | 56                      | 115  | 215 | 440    | 670    |
| 60                     | 50                      | 105  | 195 | 400    | 610    |
| 70                     | 46                      | 96   | 180 | 370    | 560    |
| 80                     | 43                      | 90   | 170 | 350    | 530    |
| 90                     | 40                      | 84   | 160 | 320    | 490    |
| 100                    | 38                      | 79   | 150 | 305    | 460    |


(Pressure 0.5 psig or less and pressure drop of 0.3" W.C.; Based on 0.60 Specific Gravity Gas)

$$CFH = \frac{BTUH \text{ Furnace Input}}{\text{Heating Value of Gas (BTU/Cubic Foot)}}$$

- Install a 1/8" NPT pipe plug fitting, accessible for test gage connection, immediately upstream of the gas supply connection to the furnace.
- Always use a back-up wrench when making the connection to the gas valve to keep it from turning. The orientation of the gas valve on the manifold must be maintained as shipped from the factory. Maximum torque for the gas valve connection is 375 in-lbs; excessive over-tightening may damage the gas valve.
- Install a manual shutoff valve between the gas meter and unit within six feet of the unit. If a union is installed, the union must be downstream of the manual shutoff valve, between the shutoff valve and the furnace.
- Tighten all joints securely.
- Connect the furnace to the building piping by one of the following methods:
  - Rigid metallic pipe and fittings.
  - Semi-rigid metallic tubing and metallic fittings. Aluminum alloy tubing must not be used in exterior locations. In order to seal the grommet cabinet penetration, rigid pipe must be used to reach the outside of the cabinet. A semi-rigid connector to the gas piping may be used from there.
  - Use listed gas appliance connectors in accordance with their instructions. Connectors must be fully in the same room as the furnace.
  - Protect connectors and semirigid tubing against physical and thermal damage when installed. Ensure aluminum-alloy tubing and connectors are coated to protect against external corrosion when in contact with masonry, plaster, or insulation, or subjected to repeated wetting by liquids such as water (except rain water), detergents, or sewage.

The gas piping may enter the left or right side of the furnace cabinet. The installer must supply rigid pipe long enough to reach the outside of the cabinet to seal the grommet cabinet penetration. A semi-rigid connector to the gas piping can be used outside the cabinet per local codes. 1/2" NPT pipe and fittings are required. For models with an "L" shaped manifold, a 4 1/2" long nipple is required. For models with a hook shaped manifold, a 2" long nipple is required.

A semi-rigid connector to the gas piping can be used outside the cabinet per local codes. From the elbow, the length of pipe and the fittings required will vary by the side chosen, location of union and cabinet width. The union may be placed inside or outside of the cabinet.

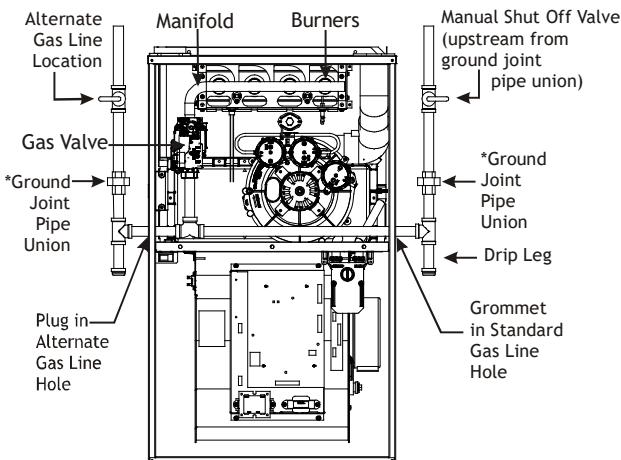

**UPFLOW**  
Figure 43

#### Gas Connections



#### WARNING

TO AVOID THE POSSIBILITY OF EXPLOSION OR FIRE, NEVER USE A MATCH OR OPEN FLAME TO TEST FOR LEAKS.

#### GAS PIPING CHECKS

Before placing unit in operation, leak test the unit and gas connections.

Check for leaks using an approved chloride-free soap and water solution, an electronic combustible gas detector, or other approved testing methods.

**NOTE:** Never exceed specified pressures for testing. Higher pressure may damage the gas valve and cause subsequent overfiring, resulting in heat exchanger failure.

Disconnect this unit and shutoff valve from the gas supply piping system before pressure testing the supply piping system with pressures in excess of 1/2 psig (3.48 kPa).

Isolate this unit from the gas supply piping system by closing its external manual gas shutoff valve before pressure testing supply piping system with test pressures equal to or less than 1/2 psig (3.48 kPa).

#### PROPANE GAS TANKS AND PIPING



#### WARNING

IF THE GAS FURNACE IS INSTALLED IN A BASEMENT, AN EXCAVATED AREA OR CONFINED SPACE, IT IS STRONGLY RECOMMENDED TO CONTACT A PROPANE SUPPLIER TO INSTALL A GAS DETECTING WARNING DEVICE IN CASE OF A GAS LEAK.

- SINCE PROPANE GAS IS HEAVIER THAN AIR, ANY LEAKING GAS CAN SETTLE IN ANY LOW AREAS OR CONFINED SPACES.
- PROPANE GAS ODORANT MAY FADE, MAKING THE GAS UNDETECTABLE EXCEPT WITH A WARNING DEVICE.

A gas detecting warning system is the only reliable way to detect a propane gas leak. Rust can reduce the level of odorant in propane gas. Do not rely on your sense of smell. Contact a local propane gas supplier about installing a gas detecting warning system. If the presence of gas is suspected, follow the instructions listed in the *Safety Considerations* section of this manual.

All propane gas equipment must conform to the safety standards of the National Fire Protection Association, NFPA 58.


For satisfactory operation, propane gas pressure must be 10" WC at the furnace manifold with all gas appliances in operation. Maintaining proper gas pressure depends on three main factors:

1. Vaporization rate, depending on temperature of the liquid, and "wetted surface" area of the container or containers.
2. Proper pressure regulation. (Two-stage regulation is recommended for both cost and efficiency).
3. Pressure drop in lines between regulators, and between second stage regulator and the appliance. Pipe size will depend on length of pipe run and total load of all appliances.

Complete information regarding tank sizing for vaporization, recommended regulator settings, and pipe sizing is available from most regulator manufacturers and propane gas suppliers.

Since propane gas will quickly dissolve white lead and most standard commercial compounds, special pipe dope must be used. Always use a pipe thread sealant approved for all gases.

Refer to the illustration for typical propane gas installations and piping.

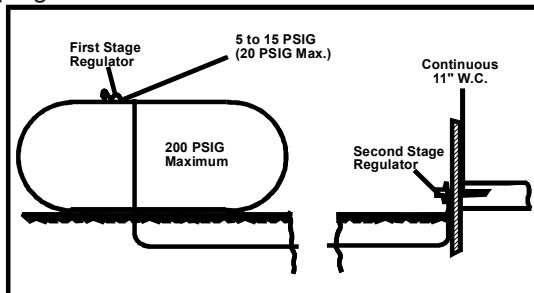

**Propane Gas Installation (Typ.)**  
Figure 44


## CIRCULATING AIR & FILTERS

### DUCT WORK - AIR FLOW

Duct systems and register sizes must be properly designed for the CFM and external static pressure rating of the furnace. Design the ductwork in accordance with the recommended methods of "Air Conditioning Contractors of America" Manual D.

Install the duct system in accordance with Standards of the National Fire Protection Association, NFPA 90A and 90B.

A closed return duct system must be used, with the return duct connected to the furnace. **NOTE:** Ductwork must never be attached to the back of the furnace. For upflow installations requiring 1600 CFM or more, use either two side returns or bottom return or a combination of side /bottom to help reduce noise and provide smoother airflow for heating. Flexible joints may be used for supply and return connections to reduce noise transmission. To prevent the blower from interfering with combustion air or draft when a central return is used, a connecting duct must be installed between the unit and the utility room wall. Never use a room, closet, or alcove as a return air chamber.

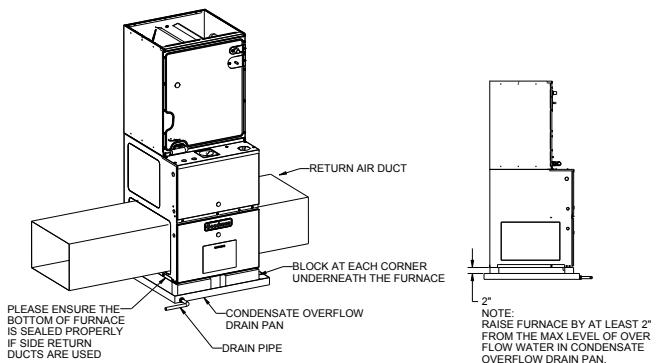

### CHECKING DUCT STATIC

Refer to your furnace rating plate for the maximum ESP (external duct static) rating.



#### WARNING

NEVER ALLOW THE PRODUCTS OF COMBUSTION, INCLUDING CARBON MONOXIDE, TO ENTER THE RETURN DUCTWORK OR CIRCULATION AIR SUPPLY.

Total external static refers to everything external to the furnace cabinet. Cooling coils, filters, ducts, grilles, registers must all be considered when reading your total external static pressure. The supply duct pressure must be read between the furnace and the cooling coil.

This reading is usually taken by removing the "A" shaped block off plate from the end on the coil; drilling a test hole in it and reinstalling the block off plate. Take a duct static reading at the test hole. Tape up the test hole after your test is complete. The negative pressure must be read between the filter and the furnace blower.

Too much external static pressure will result in insufficient air that can cause excessive temperature rise. This can cause limit switch tripping and heat exchanger failure.

To determine total external duct static pressure, proceed as follows;

1. With clean filters in the furnace, use a manometer to measure the static pressure of the return duct at the inlet of the furnace. (Negative Pressure)
2. Measure the static pressure of the supply duct. (Positive Pressure)
3. The difference between the two numbers is the total external static pressure.

Example:

static reading from return duct = -.1" w.c.

static reading from supply duct = .3" w.c.


total external static pressure on this system = .4" w.c.

**NOTE:** Both readings may be taken simultaneously and read directly on the manometer if so desired. If an air conditioner coil or Electronic Air Cleaner is used in conjunction with the furnace, the readings must also include these components, as shown in the following drawing.

4. Consult proper tables for the quantity of air.

If the total external static pressure exceeds the maximum listed on the furnace rating plate, check for closed dampers, registers, undersized and/or oversized poorly laid out duct work.

The temperature rise of the furnace must be within the temperature rise range listed on the furnace rating plate.

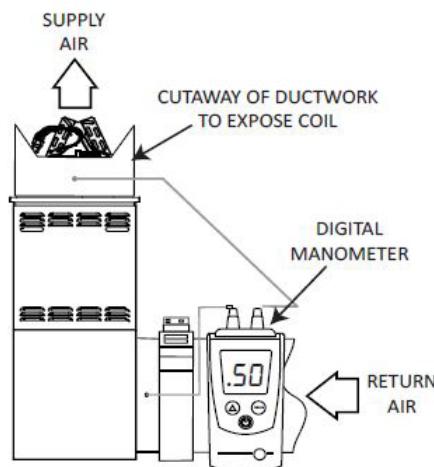

Checking Static Pressure  
Figure 45



#### WARNING

EDGES OF SHEET METAL HOLES MAY BE SHARP. USE GLOVES AS A PRECAUTION WHEN REMOVING SHEET METAL FROM RETURN AIR OPENINGS.

## BOTTOM RETURN AIR OPENING [UPFLOW MODELS]


The bottom return air opening on upflow models utilizes a "lance and cut" method to remove sheet metal from the duct opening in the base pan. To remove, simply press out the lanced sections by hand to expose the metal strips retaining the sheet metal over the duct opening. Using tin snips, cut the metal strips and remove the sheet metal covering the duct opening. In the corners of the opening, cut the sheet metal along the scribe lines to free the duct flanges. Using the scribe line along the duct flange as a guide, unfold the duct flanges around the perimeter of the opening using a pair of seamer pliers or seamer tongs.

**NOTE:** Airflow area will be reduced by approximately 18% if duct flanges are not unfolded. This could cause performance issues and noise issues.

When the furnace is used in connection with a cooling unit, the furnace should be installed upstream of the cooling coil.

When the furnace is installed without a cooling coil, it is recommended that a removable access panel be provided in the outlet air duct. This opening shall be accessible when the furnace is installed and shall be of such a size that the heat exchanger can be viewed for visual light inspection or such that a sampling probe can be inserted into the airstream. The access panel must be made to prevent air leaks when the furnace is in operation.

When the furnace is heating, the temperature of the return air entering the furnace must be between 55°F and 100°F.

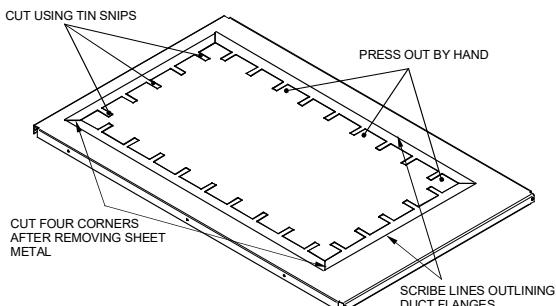

**Duct Flange Cut Outs**

Figure 46

## FILTERS - READ THIS SECTION BEFORE INSTALLING THE RETURN AIR DUCT WORK

Filters must be used with this furnace. Discuss filter maintenance with the building owner. Filters do not ship with this furnace, but must be provided, sized and installed externally by the installer. Filters must comply with UL900 or CAN/ULCS111 standards. Damage or repairs due to the installation of the furnace without filters is not covered under the warranty.

On upflow units, guide dimples locate the side return cutout locations. Use a straight edge to scribe lines connecting the dimples. Cut out the opening on these lines. **NOTE:** An undersized opening will cause reduced airflow.

Refer to the following table to determine filter area requirements.

| Upflow Models          | Minimum Recommended Filter Size               |
|------------------------|---|
| *R9T960303AN           | 1 - 16 X 25 Side or 1 - 14 X 24 Bottom Return |
| *R9T960403AN           | 1 - 16 X 25 Side or 1 - 14 X 24 Bottom Return |
| *R9T960603AN           | 1 - 16 X 25 Side or 14 X 24 Bottom Return     |
| *R9T960603BN           | 1 - 16 X 25 Side or Bottom Return             |
| *R9T960803BN           | 1 - 16 X 25 Side or Bottom Return             |
| *R9T960804CN           | 1 - 16 X 25 Side or Bottom Return             |
| *R9T961004CN           | 2 - 16 X 25 Side or 1 - 20 X 25 Bottom Return |
| *R9T961005CN           | 2 - 16 X 25 Side or 1 - 20 X 25 Bottom Return |
| *R9T961205DN           | 2 - 16 X 25 Side or 1 - 24 X 24 Bottom Return |
| <b>Downflow Models</b> |   |
| *D9T960403BN           | 2 - 10 X 20 or 1 - 14 X 25 Top Return         |
| *D9T960603BN           | 2 - 10 X 20 or 1 - 14 X 25 Top Return         |
| *D9T960803BN           | 2 - 14 X 20 or 1 - 16 X 25 Top Return         |
| *D9T961005CN           | 2 - 14 X 20 or 1 - 20 X 25 Top Return         |

Larger filters may be used, filters may also be centrally located

<sup>1</sup> = Use 2 - 16 X 25 filters and two side returns or 20 X 25 filter on bottom return if furnace is connected to a cooling unit over 4 tons nominal capacity

A combination of one side & bottom may be used instead of both sides

**Change filters before occupants take ownership of a new home!**

## UPRIGHT INSTALLATIONS

Depending on the installation and/or customer preference, differing filter arrangements can be applied. Filters can be installed in the central return register or a side panel external filter rack kit (upflows). As an alternative a media air filter or electronic air cleaner can be used as the requested filter. Consider installing an air cleaner with deep-pleated media filter at the time of furnace installation. A deep-pleated filter with a MERV rating of 8 (minimum) will often provide better filtration to protect equipment and the air distribution system than a standard 1" filter and often has lower static pressure loss than a 1" filter. Also a deep-pleated filter will typically require less frequent replacement intervals. Avoid using highly restrictive 1" filters which produce static pressure loss greater than .25" W.C. In some installations the minimum filter size required will not lend itself to a filter installation on the side of the furnace. The installation of a centrally installed air cleaner cabinet or a return duct filter installation may offer more practicality.

Clean Comfort™ brand MERV 11 air cleaners have 5 1/4" media filters and are available in the following configurations. Consult your distributor for information on our complete line of IAQ Clean Comfort™ products.

The figure below shows possible filter locations.

## HORIZONTAL INSTALLATIONS

Filters must be installed in either the central return register or in the return air duct work.

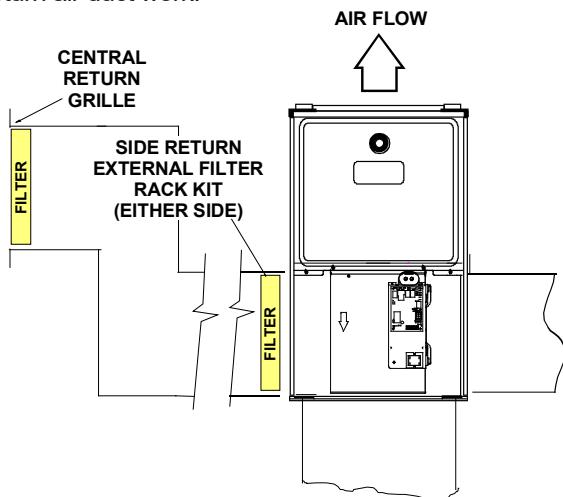


Figure 47

## STARTUP PROCEDURE & ADJUSTMENT

Furnace must have a 115 VAC power supply properly connected and grounded. Proper polarity must be maintained for correct operation. In addition to the following start-up and adjustment items, refer to further information in *Operational Checks* section.

### FURNACE CABINET

Check that all furnace cabinet sealing components are in place (plugs, grommets, gaskets).

NOTE: If the furnace bottom panel has not been removed for a return duct connection, all perforations must be sealed with duct sealant compound or other suitable method to prevent air leakage. For optimal performance verify that all door gaskets are properly in place and replace as needed to prevent air leakage.

### DRAIN TRAP PRIMING

The drain trap MUST be primed prior to furnace startup. To prime, fill both sides of the drain trap with water. This ensures proper furnace drainage upon startup and prohibits the possibility of flue gases escaping through the drain system.

### FURNACE OPERATION

Purge gas lines of air prior to startup. Be sure not to purge lines into an enclosed burner compartment.

Check for leaks using an approved chloride-free soap and water solution, an electronic combustible gas detector, or other approved method. Verify that all required kits (propane gas, high altitude, etc.) have been appropriately installed.

**NOTE: This furnace is equipped with a control board that is capable of monitoring for R-32 refrigerant leaks in the indoor evaporator coil. Please verify that the R-32 sensor wire is plugged in to the furnace control board before startup, if applicable. If furnace is not paired with an R-32 Refrigeration system, the default settings in the furnace control board will need to be changed. Please see the R-32 section for additional information.**

## FURNACE STARTUP

1. Close the manual gas shutoff valve external to the furnace.
2. Turn off the electrical power to the furnace.
3. Set the room thermostat to the lowest possible setting.
4. Remove the burner compartment door.

**NOTE:** This furnace is equipped with an ignition device which automatically lights the burner. Do not try to light the burner by hand.

5. Move the furnace gas valve manual control to the OFF position.
6. Wait five minutes then smell for gas. Be sure to check near the floor as some types of gas are heavier than air.
7. If you smell gas after five minutes, immediately follow the *Safety Considerations* on page 2 of this manual. If you do not smell gas after five minutes, move the furnace gas valve manual control to the ON position.
8. Replace the burner compartment door.
9. Open the manual gas shutoff valve external to the furnace.
10. Turn on the electrical power to the furnace.
11. Adjust the thermostat to a setting above room temperature.
12. After the burners are lit, set the thermostat to desired temperature.

## FURNACE SHUTDOWN

1. Set the thermostat to the lowest setting. The integrated control will close the gas valve and extinguish flame. Following a 15 second delay, the induced draft blower will be de-energized. The circulator blower will shut off after the time delay expires (selectable 90, 120, 150, 180 seconds).
2. Remove the burner compartment door and move the furnace gas valve manual control to the OFF position.
3. Close the manual gas shutoff valve external to the furnace.
4. Replace the burner compartment door.

## GAS SUPPLY PRESSURE MEASUREMENT

### GAS PRESSURE TEST

The line pressure supplied to the gas valve must be within the range specified below. The supply pressure can be measured at the gas valve inlet pressure tap or at a hose fitting installed in the gas piping drip leg. The supply pressure must be measured with the burners operating. To measure the gas supply pressure, use the following procedure.

1. Turn OFF gas to furnace at the manual gas shutoff valve external to the furnace.
2. Connect a calibrated manometer (or appropriate gas pressure gauge) at either the gas valve inlet pressure tap or the gas piping drip leg. See White-Rodgers 36J54 gas valve figure for location of inlet pressure tap.

**NOTE:** If measuring gas pressure at the drip leg, a field-supplied hose barb fitting must be installed prior to making the hose connection. If using the inlet pressure tap on the White-Rodgers 36J54 gas valve, then use the 36G/J Valve Pressure Check Kit, Part No. 0151K00000S.


3. Turn ON the gas supply and operate the furnace and all other gas consuming appliances on the same gas supply line.
4. Measure furnace gas supply pressure with burners firing. Supply pressure must be within the range specified in the *Inlet Gas Supply Pressure* table.

If supply pressure differs from table, make the necessary adjustments to pressure regulator, gas piping size, etc., and/or consult with local gas utility.

5. Turn OFF gas to furnace at the manual shutoff valve and disconnect manometer. Reinstall plug before turning on gas to furnace.
6. Turn OFF any unnecessary gas appliances stated in step 3.

#### INLET GAS SUPPLY PRESSURE

|             |                     |                     |
|-------------|---------------------|---------------------|
| NATURAL GAS | Minimum: 4.5" w.c.  | Maximum: 10.0" w.c. |
| PROPANE GAS | Minimum: 11.0" w.c. | Maximum: 13.0" w.c. |

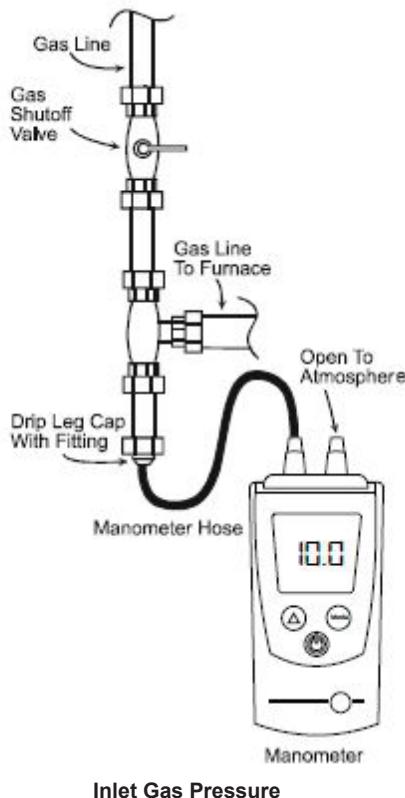

Inlet Gas Pressure

#### GAS MANIFOLD PRESSURE MEASUREMENT AND ADJUSTMENT



#### CAUTION

**TO PREVENT UNRELIABLE OPERATION OR EQUIPMENT DAMAGE, THE GAS MANIFOLD PRESSURE MUST BE AS SPECIFIED ON THE UNIT RATING PLATE. ONLY MINOR ADJUSTMENTS SHOULD BE MADE BY ADJUSTING THE GAS VALVE PRESSURE REGULATOR.**

Only small variations in gas pressure should be made by adjusting the gas valve pressure regulator. The manifold pressure must be measured with the burners operating. To measure and adjust the manifold pressure, use the following procedure.

1. Turn OFF gas to furnace at the manual gas shutoff valve external to the furnace.
2. Turn off all electrical power to the system.
3. Outlet pressure tap connections:  
White-Rodgers 36J54 valve: Back outlet pressure test screw (inlet/outlet pressure tap) out one turn (counterclockwise, not more than one turn).
4. Attach a hose and manometer to the outlet pressure tap (White-Rodgers valve).
5. Turn ON the gas supply.
6. Turn on power and close thermostat "R" and "W1" contacts to provide a call for low stage heat.
7. Measure the gas manifold pressure with burners firing. Adjust manifold pressure using the *Manifold Gas Pressure* table shown below.


#### Manifold Gas Pressure

| Gas     | Range            | Nominal    |
|---------|------------------|------------|
| Natural | 3.2 - 3.8" w.c.  | 3.5" w.c.  |
| Propane | 9.7 - 10.3" w.c. | 10.0" w.c. |

8. Remove regulator cover screw from the low (LO) outlet pressure regulator adjust tower and turn screw clockwise to increase pressure or counterclockwise to decrease pressure. Replace regulator cover screw.
9. Close thermostat "R", "W1" and "W2" contacts to provide a call for high stage heat.
10. Remove regulator cover screw from the high (HI) outlet pressure regulator adjust tower and turn screw clockwise to increase pressure or counterclockwise to decrease pressure. Replace regulator cover screw.
11. Turn off all electrical power and gas supply to the system.
12. Remove the manometer hose from the hose barb fitting or outlet pressure tap.
13. Replace outlet pressure tap:  
White-Rodgers 36J54 valve: Turn outlet pressure test screw in to seal pressure port (clockwise, 7 in-lb minimum).
14. Turn on electrical power and gas supply to the system.
15. Close thermostat contacts "R" and "W1/W2" to energize the valve.

Using a leak detection solution or soap suds, check for leaks at outlet pressure tap plug (Honeywell valve) or screw (White-Rodgers valve). Bubbles forming indicate a leak. **SHUT OFF GAS AND REPAIR ALL LEAKS IMMEDIATELY!**

**NOTE:** For natural gas to LP gas conversion, consult your dealer for appropriate conversion.

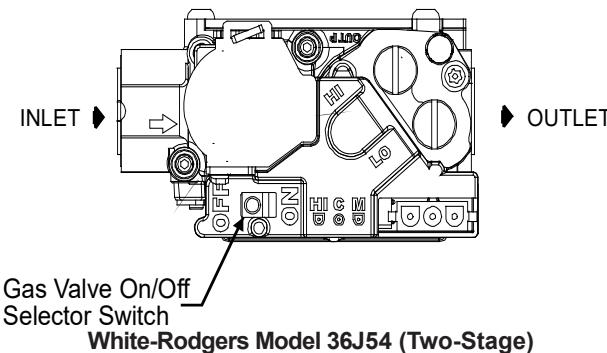

## TEMPERATURE RISE

Temperature rise must be within the range specified on the unit rating plate. An incorrect temperature rise may result in condensing in or overheating of the heat exchanger. An airflow and temperature rise table is provided in the Specification Sheet applicable to your model. Determine and adjust temperature rise as follows:

1. Operate furnace with burners firing for approximately ten minutes. Ensure all registers are open and all duct dampers are in their final (fully or partially open) position.
2. Place thermometers in the return and supply ducts as close to the furnace as possible. Thermometers must not be influenced by radiant heat by being able to "see" the heat exchanger.
3. Subtract the return air temperature from the supply air temperature to determine the air temperature rise. Allow adequate time for thermometer readings to stabilize.
4. Adjust temperature rise by adjusting the circulator blower speed. Increase blower speed to reduce temperature rise. Decrease blower speed to increase temperature rise. Refer to *Startup Procedure and Adjustment - Circulator Blower Speeds* for speed changing details.

## **GAS INPUT RATE MEASUREMENT (NATURAL GAS ONLY)**

The actual gas input rate to the furnace must never be greater than that specified on the unit rating plate. To measure natural gas input using the gas meter, use the following procedure.

1. Turn OFF the gas supply to all other gas-burning appliances except the furnace.
2. While the furnace is operating at high fire rate, time and record one complete revolution of the gas meter dial measuring the smallest quantity, usually the dial that indicates 1/2 cu. ft. per revolution. You will use this number to calculate the quantity of gas in cubic ft. if the furnace would consume if it ran steadily for one hour (3600 seconds).
3. If the 1/2 cu. ft. dial was used, multiply your number x 2.

EXAMPLE: If it took 23 seconds to complete one revolution of the 1/2 ft. dial ( $23 \times 2 = 46$ ).


This tells us that at this rate, it would take 46 seconds to consume one cu. ft. of gas.  $3600 / 46 = 78$ .

This tells us that in one hour, the furnace would consume 78 cu. ft. of gas.

The typical value range for 1 cu. ft. of natural gas is around 1000 BTU. Check with your gas utility, if possible. In this example, the furnace is consuming 78,000 BTUH.

**NOTE:** The final manifold pressure cannot vary by more than  $\pm 0.3$ " w.c. for Natural and  $\pm 0.5$ " for LP from the specified setting. Consult your local gas supplier if additional input rate adjustment is required.

4. Turn ON gas to and relight all other appliances turned off in step 1. Be certain that all appliances are functioning properly and that all pilot burners are operating.

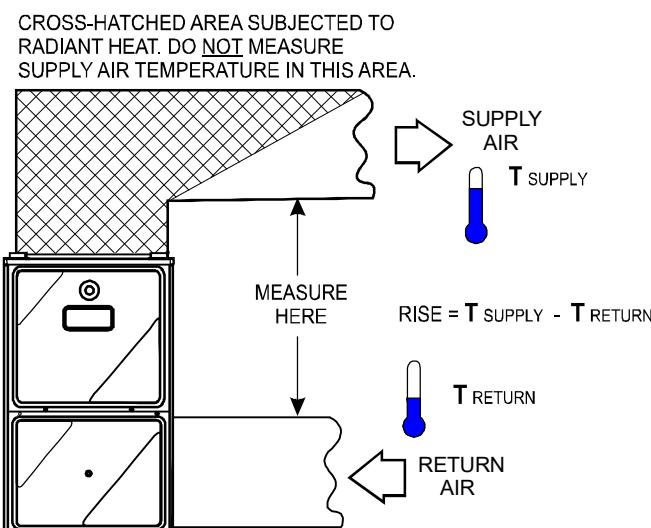

## Temperature Rise Measurement Figure 48



## WARNING

**TO AVOID PERSONAL INJURY OR DEATH DUE TO ELECTRICAL SHOCK, TURN OFF POWER TO THE FURNACE BEFORE CHANGING SPEED TAPS.**

## BLOWER HEAT OFF DELAY TIMINGS

The integrated control module provides a selectable heat off delay function. The heat off delay period may be set to 90, 120, 150, 180 seconds. The delay is factory shipped at 150 seconds but may be changed to suit the installation requirements and/or homeowner preference.

## R-32 INFORMATION

### R-32 FUNCTION

This furnace is equipped with a control board that is capable of shutting off the gas heat and turning on the blower fan in case of an R-32 refrigerant leak in the indoor evaporator coil. If the cooling unit that is paired with this furnace does not utilize R-32 as the refrigerant, the R-32 functionalities in the furnace control board will need to be turned off for the furnace to run properly.

R-32 function on the control board is ON by default. The R-32 function can be disabled through the furnace control by entering the A2L Function Enabled menu and selecting "no". If A2L function is disabled, the furnace control will ignore all A2L functions. If A2L function is enabled, the control will monitor the R-32 sensor information.

To enter the A2L Function Enabled menu, press the left or right button until LED displays "A2E". Press the center button and the LED will display the selected option (yes or no). Press the left or right button to select one of the two options and press the center button twice to confirm the option.

### R-32 SENSOR WIRE ROUTING

**IMPORTANT NOTE:** **Wiring routing must not interfere with circulator blower operation, filter removal or routine maintenance. Wire should not be routed near hot surfaces and should be protected from sharp edges.**

The R-32 Sensor wire coming from the indoor evaporator coil will need to be routed into the furnace and connected to the connection point on the furnace control board. This wire should be routed alongside the thermostat wires through the low voltage openings in the left or right side of the furnace blower compartment. Please see the electrical section for the location of the R-32 Sensor connection on the control board.

The R-32 function on the furnace control board may need to be enabled or disabled if any element of the installation changes from the original setup. The specific scenario will depend on each installation, so please refer to the evaporator coil's installation manual to verify what is required for your setup. For example, if the furnace was initially installed with an evaporator coil that utilized R-410A refrigerant, and the coil is later replaced with one that uses R-32 refrigerant, then R-32 function mode on the furnace control board must be enabled, and the R-32 sensor wire must be connected to the furnace control board.

### FURNACE START-UP

During furnace start up, the furnace control will identify the connected R-32 sensor and will start monitoring the sensor communication. A green LED located next to the sensor connection will indicate if there is communication between the furnace control and the R-32 sensor. The LED will be ON during the duration of the startup and then will either start blinking or turn OFF. The blinking LED signifies that communication with the R-32 sensor is present. The LED OFF signifies that there is no signal with the sensor.

If there are no alarms or faults, the furnace will go into regular run mode after a warm up period. The furnace control monitors the R-32 sensor once per second.

### R-32 REFRIGERANT LEAK

If the R-32 sensor on the indoor evaporator coil detects a specified concentration of R-32 refrigerant, the furnace will enter Mitigation Mode to dilute the refrigerant concentrations in case of a leak. In Mitigation Mode, the furnace will do the following:

1. Display the A2L Refrigerant Leakage error code (EAL)
2. Shut down the gas operation
3. Energize the optional ventilation and alarm outputs.
4. Run the fan at max CFM airflow

Once the R-32 sensor stops detecting a leak, the fan will continue to run for 5 minutes. After the 5 minutes, if there are no other alarms or faults, the control will de-energize the optional ventilation and alarm outputs and then go back to the original operating mode per the thermostat.

### A2L VERIFICATION

The A2L Function Verification menu allows the installer to verify if the R-32 function operates properly. This menu simulates the refrigerant leak process and is only able to be used when there are no active alarms or faults. To verify the R-32 functions, enter the A2L Function Verification menu and select "YES". To enter the A2L Function Verification menu, press the left or right button until LED displays "A2u". Press the center button and the LED will display the selected option (yes or no). Press the left or right button to select one of the two options and press the center button twice to confirm the option. Once "YES" is selected, the furnace will do the following:

1. Display the A2L Refrigerant Leakage code (EAL)
2. Shut down the gas operation
3. Energize the optional ventilation and alarm outputs.
4. Run the fan at max CFM airflow

The control will exit the verification function if:

1. The 5 minute timeout expires or
2. An alarm or fault is detected or
3. The user turns OFF the A2L Function Verification.

**NOTE: To verify gas heating operation shuts down, give furnace a call for heat before entering into A2L Function Verification.**

## AIRFLOW TABLE \*R9T96

| MODEL        | THERMOSTAT CALL | RECOMMENDED LO & HI FIRE SPEEDS | TAP # | HEATING AIFLOW                                  |      |      |      |      |      |      |      |                               |      |      |      |      |      |     |     |
|--------------|-----------------|---------------------------------|-------|---|------|------|------|------|------|------|------|-------------------------------|------|------|------|------|------|-----|-----|
|              |                 |                                 |       | EXTERNAL STATIC PRESSURE, (INCHES WATER COLUMN) |      |      |      |      |      |      |      |                               |      |      |      |      |      |     |     |
|              |                 |                                 |       | 0.10  | 0.20 | 0.30 | 0.40 | 0.50 | 0.60 | 0.70 | 0.80 | CFM                           | RISE | CFM  | RISE | CFM  | RISE | CFM | CFM |
| *R9T960303AN | W/W1 (LO FIRE)  | F01                             | F01   | 753   | 25   | 708  | 26   | 663  | 28   | 616  | 30   | 568                           | 33   | 513  | 470  | 423  |      |     |     |
|              |                 |                                 | F03   |   |      |      |      |      |      |      |      | NOT RECOMMENDED HEATING SPEED |      |      |      |      |      |     |     |
|              |                 |                                 | F04   | 880   | 21   | 843  | 22   | 807  | 23   | 768  | 24   | 723                           | 26   | 683  | 643  | 590  |      |     |     |
|              | W2 (HI FIRE)    | F04                             | F02   | 915   | 29   | 883  | 30   | 845  | 32   | 809  | 33   | 773                           | 34   | 730  | 690  | 650  |      |     |     |
|              |                 |                                 | F04   | 880   | 30   | 843  | 32   | 807  | 33   | 768  | 35   | 723                           | 37   | 683  | 643  | 590  |      |     |     |
|              |                 |                                 | F05   | 1055  | 25   | 1022 | 26   | 990  | 27   | 959  | 28   | 930                           | 29   | 891  | 858  | 825  |      |     |     |
| *R9T960403AN | W/W1 (LO FIRE)  | F01                             | F01   | 733   | 34   | 691  | 36   | 650  | 38   | 602  | 41   | 553                           | 45   | 498  | 448  | 402  |      |     |     |
|              |                 |                                 | F03   |   |      |      |      |      |      |      |      | NOT RECOMMENDED HEATING SPEED |      |      |      |      |      |     |     |
|              |                 |                                 | F04   | 915   | 27   | 881  | 28   | 846  | 29   | 814  | 31   | 780                           | 32   | 737  | 695  | 652  |      |     |     |
|              | W2 (HI FIRE)    | F02                             | F02   | 1051  | 34   | 1024 | 35   | 996  | 36   | 966  | 37   | 935                           | 38   | 907  | 868  | 836  |      |     |     |
|              |                 |                                 | F04   | 915   | 39   | 881  | 40   | 846  | 42   | 814  | 44   | 780                           | 46   | 737  | 695  | 652  |      |     |     |
|              |                 |                                 | F05   | 1138  | 31   | 1114 | 32   | 1092 | 33   | 1064 | 33   | 1035                          | 34   | 1006 | 977  | 947  |      |     |     |
| *R9T960603AN | W/W1 (LO FIRE)  | F01                             | F01   | 900   | 40   | 867  | 42   | 830  | 44   | 798  | 46   | 758                           | 48   | 718  | 682  | 645  |      |     |     |
|              |                 |                                 | F03   |   |      |      |      |      |      |      |      | NOT RECOMMENDED HEATING SPEED |      |      |      |      |      |     |     |
|              |                 |                                 | F04   | 866   | 42   | 830  | 44   | 797  | 46   | 759  | 48   | 717                           | 50   | 675  | 634  | 591  |      |     |     |
|              | W2 (HI FIRE)    | F02                             | F02   | 1292  | 41   | 1272 | 42   | 1248 | 43   | 1227 | 43   | 1206                          | 44   | 1184 | 1162 | 1137 |      |     |     |
|              |                 |                                 | F04   |   |      |      |      |      |      |      |      | NOT RECOMMENDED HEATING SPEED |      |      |      |      |      |     |     |
|              |                 |                                 | F05   | 1223  | 44   | 1195 | 45   | 1176 | 45   | 1149 | 46   | 1124                          | 47   | 1101 | 1074 | 1047 |      |     |     |
| *R9T960603BN | W/W1 (LO FIRE)  | F01                             | F01   | 914   | 41   | 864  | 43   | 815  | 46   | 762  | 49   | 704                           | 53   | 654  | 604  | 560  |      |     |     |
|              |                 |                                 | F03   |   |      |      |      |      |      |      |      | NOT RECOMMENDED HEATING SPEED |      |      |      |      |      |     |     |
|              |                 |                                 | F04   | 960   | 39   | 917  | 41   | 864  | 43   | 812  | 46   | 764                           | 49   | 708  | 661  | 614  |      |     |     |
|              | W2 (HI FIRE)    | F02                             | F02   | 1121  | 48   | 1083 | 49   | 1041 | 51   | 996  | 54   | 953                           | 56   | 906  | 861  | 818  |      |     |     |
|              |                 |                                 | F04   |   |      |      |      |      |      |      |      | NOT RECOMMENDED HEATING SPEED |      |      |      |      |      |     |     |
|              |                 |                                 | F05   | 1164  | 46   | 1123 | 47   | 1084 | 49   | 1042 | 51   | 1003                          | 53   | 960  | 920  | 871  |      |     |     |
| *R9T960803BN | W/W1 (LO FIRE)  | F01                             | F01   | 1205  | 41   | 1169 | 43   | 1131 | 44   | 1091 | 46   | 1053                          | 47   | 1014 | 974  | 934  |      |     |     |
|              |                 |                                 | F03   |   |      |      |      |      |      |      |      | NOT RECOMMENDED HEATING SPEED |      |      |      |      |      |     |     |
|              |                 |                                 | F04   | 1152  | 43   | 1112 | 45   | 1076 | 46   | 1035 | 48   | 996                           | 50   | 954  | 916  | 868  |      |     |     |
|              | W2 (HI FIRE)    | F02                             | F02   | 1415  | 50   | 1385 | 51   | 1355 | 52   | 1322 | 54   | 1291                          | 55   | 1255 | 1219 | 1186 |      |     |     |
|              |                 |                                 | F04   |   |      |      |      |      |      |      |      | NOT RECOMMENDED HEATING SPEED |      |      |      |      |      |     |     |
|              |                 |                                 | F05   | 1321  | 54   | 1287 | 55   | 1251 | 57   | 1217 | 58   | 1181                          | 60   | 1146 | 1112 | 1072 |      |     |     |
| *R9T960804CN | W/W1 (LO FIRE)  | F01                             | F01   | 1289  | 39   | 1234 | 40   | 1180 | 42   | 1122 | 44   | 1058                          | 47   | 991  | 917  | 840  |      |     |     |
|              |                 |                                 | F03   | 1297  | 38   | 1246 | 40   | 1199 | 42   | 1142 | 44   | 1083                          | 46   | 1020 | 949  | 872  |      |     |     |
|              |                 |                                 | F04   | 1194  | 42   | 1137 | 44   | 1079 | 46   | 1014 | 49   | 948                           | 52   | 873  | 792  | 712  |      |     |     |
|              | W2 (HI FIRE)    | F02                             | F02   | 1836  | 39   | 1784 | 40   | 1741 | 41   | 1703 | 42   | 1664                          | 43   | 1628 | 1585 | 1537 |      |     |     |
|              |                 |                                 | F04   |   |      |      |      |      |      |      |      | NOT RECOMMENDED HEATING SPEED |      |      |      |      |      |     |     |
|              |                 |                                 | F05   | 1748  | 41   | 1696 | 42   | 1650 | 43   | 1612 | 44   | 1574                          | 45   | 1526 | 1478 | 1428 |      |     |     |
| *R9T961004CN | W/W1 (LO FIRE)  | F01                             | F01   | 1475  | 42   | 1421 | 44   | 1369 | 45   | 1314 | 47   | 1260                          | 49   | 1207 | 1152 | 1097 |      |     |     |
|              |                 |                                 | F03   |   |      |      |      |      |      |      |      | NOT RECOMMENDED HEATING SPEED |      |      |      |      |      |     |     |
|              |                 |                                 | F04   | 1259  | 49   | 1197 | 52   | 1138 | 55   | 1074 | 58   | 1015                          | 60   | 947  | 885  | 821  |      |     |     |
|              | W2 (HI FIRE)    | F02                             | F02   | 1791  | 50   | 1741 | 51   | 1699 | 52   | 1652 | 54   | 1609                          | 55   | 1561 | 1513 | 1465 |      |     |     |
|              |                 |                                 | F04   |   |      |      |      |      |      |      |      | NOT RECOMMENDED HEATING SPEED |      |      |      |      |      |     |     |
|              |                 |                                 | F05   | 1710  | 52   | 1660 | 54   | 1613 | 55   | 1583 | 56   | 1517                          | 59   | 1470 | 1421 | 1374 |      |     |     |
| *R9T961005CN | W/W1 (LO FIRE)  | F04                             | F01   | 1259  | 49   | 1197 | 52   | 1138 | 55   | 1074 | 58   | 1015                          | 60   | 947  | 885  | 821  |      |     |     |
|              |                 |                                 | F03   |   |      |      |      |      |      |      |      | NOT RECOMMENDED HEATING SPEED |      |      |      |      |      |     |     |
|              |                 |                                 | F04   | 1347  | 46   | 1286 | 48   | 1231 | 51   | 1172 | 53   | 1115                          | 56   | 1055 | 995  | 933  |      |     |     |
|              | W2 (HI FIRE)    | F02                             | F02   | 1791  | 50   | 1741 | 51   | 1699 | 52   | 1652 | 54   | 1609                          | 55   | 1561 | 1513 | 1465 |      |     |     |
|              |                 |                                 | F04   |   |      |      |      |      |      |      |      | NOT RECOMMENDED HEATING SPEED |      |      |      |      |      |     |     |
|              |                 |                                 | F05   | 1921  | 46   | 1879 | 47   | 1840 | 48   | 1791 | 50   | 1751                          | 51   | 1705 | 1656 | 1610 |      |     |     |
| *R9T961205DN | W/W1 (LO FIRE)  | F04                             | F01   | 1766  | 42   | 1712 | 44   | 1666 | 45   | 1612 | 46   | 1558                          | 48   | 1506 | 1450 | 1395 |      |     |     |
|              |                 |                                 | F03   |   |      |      |      |      |      |      |      | NOT RECOMMENDED HEATING SPEED |      |      |      |      |      |     |     |
|              |                 |                                 | F04   | 1684  | 44   | 1620 | 46   | 1561 | 48   | 1499 | 50   | 1438                          | 52   | 1378 | 1318 | 1259 |      |     |     |
|              | W2 (HI FIRE)    | F02                             | F02   | 2205  | 48   | 2157 | 49   | 2110 | 51   | 2064 | 52   | 2021                          | 53   | 1974 | 1925 | 1879 |      |     |     |
|              |                 |                                 | F04   |   |      |      |      |      |      |      |      | NOT RECOMMENDED HEATING SPEED |      |      |      |      |      |     |     |
|              |                 |                                 | F05   | 2031  | 53   | 1981 | 54   | 1933 | 55   | 1901 | 56   | 1850                          | 58   | 1799 | 1750 | 1702 |      |     |     |

### NOTE:

1. DEFAULT LOW FIRE HEATING SPEED IS F01

2. DEFAULT HIGH FIRE HEATING SPEED IS F02

3. DUCT WORK MUST BE SIZED FOR HIGHEST AIRFLOW.

IF FURNACE IS PAIRED TO LOW TON OUTDOOR, THE  
DUCTWORK SHOULD BE SIZED FOR HIGHER HEATING  
AIRFLOW.

## AIRFLOW TABLE \*R9T96

|              |                   |     |     |                               |    |      |    |      |    |      |    |      |    |      |      |      |  |  |
|--------------|-------------------|-----|-----|-------------------------------|----|------|----|------|----|------|----|------|----|------|------|------|--|--|
| *D9T960403BN | W/W1<br>(LO FIRE) | F01 | F01 | 727                           | 34 | 677  | 37 | 623  | 40 | 565  | 44 | 510  | 49 | 455  | 403  | 351  |  |  |
|              |                   |     | F03 | NOT RECOMMENDED HEATING SPEED |    |      |    |      |    |      |    |      |    |      |      |      |  |  |
|              |                   |     | F04 | 878                           | 28 | 839  | 30 | 797  | 31 | 751  | 33 | 701  | 36 | 653  | 607  | 561  |  |  |
|              | W2<br>(HI FIRE)   | F02 | F02 | 923                           | 39 | 882  | 40 | 841  | 42 | 798  | 45 | 752  | 47 | 704  | 660  | 614  |  |  |
|              |                   |     | F04 | 878                           | 41 | 839  | 42 | 797  | 45 | 751  | 47 | 701  | 51 | 653  | 607  | 561  |  |  |
|              |                   |     | F05 | 1106                          | 32 | 1076 | 33 | 1044 | 34 | 1010 | 35 | 974  | 37 | 939  | 899  | 860  |  |  |
| *D9T960603BN | W/W1<br>(LO FIRE) | F01 | F01 | 1167                          | 32 | 1118 | 33 | 1069 | 35 | 1022 | 37 | 974  | 38 | 928  | 877  | 833  |  |  |
|              |                   |     | F03 | NOT RECOMMENDED HEATING SPEED |    |      |    |      |    |      |    |      |    |      |      |      |  |  |
|              |                   |     | F04 | NOT RECOMMENDED HEATING SPEED |    |      |    |      |    |      |    |      |    |      |      |      |  |  |
|              | W2<br>(HI FIRE)   | F02 | F02 | 1332                          | 40 | 1289 | 41 | 1245 | 43 | 1200 | 44 | 1160 | 46 | 1120 | 1081 | 1036 |  |  |
|              |                   |     | F04 | NOT RECOMMENDED HEATING SPEED |    |      |    |      |    |      |    |      |    |      |      |      |  |  |
|              |                   |     | F05 | 1248                          | 43 | 1204 | 44 | 1159 | 46 | 1113 | 48 | 1071 | 50 | 1028 | 983  | 943  |  |  |
| *D9T960803BN | W/W1<br>(LO FIRE) | F01 | F01 | 1167                          | 43 | 1124 | 44 | 1087 | 46 | 1040 | 48 | 995  | 50 | 954  | 916  | 869  |  |  |
|              |                   |     | F03 | NOT RECOMMENDED HEATING SPEED |    |      |    |      |    |      |    |      |    |      |      |      |  |  |
|              |                   |     | F04 | 1217                          | 41 | 1174 | 42 | 1130 | 44 | 1086 | 46 | 1045 | 48 | 1003 | 962  | 925  |  |  |
|              | W2<br>(HI FIRE)   | F02 | F02 | 1317                          | 54 | 1277 | 56 | 1240 | 57 | 1201 | 59 | 1161 | 61 | 1122 | 1081 | 1045 |  |  |
|              |                   |     | F04 | NOT RECOMMENDED HEATING SPEED |    |      |    |      |    |      |    |      |    |      |      |      |  |  |
|              |                   |     | F05 | 1300                          | 55 | 1263 | 56 | 1225 | 58 | 1186 | 60 | 1142 | 62 | 1099 | 1062 | 1023 |  |  |
| *D9T961005CN | W/W1<br>(LO FIRE) | F01 | F01 | 1366                          | 46 | 1307 | 48 | 1248 | 50 | 1188 | 52 | 1130 | 55 | 1069 | 1007 | 938  |  |  |
|              |                   |     | F03 | 1295                          | 48 | 1230 | 51 | 1168 | 53 | 1105 | 56 | 1044 | 58 | 981  | 911  | 843  |  |  |
|              |                   |     | F04 | NOT RECOMMENDED HEATING SPEED |    |      |    |      |    |      |    |      |    |      |      |      |  |  |
|              | W2<br>(HI FIRE)   | F02 | F02 | 1833                          | 48 | 1785 | 50 | 1736 | 51 | 1688 | 53 | 1640 | 54 | 1593 | 1543 | 1497 |  |  |
|              |                   |     | F04 | 1634                          | 54 | 1578 | 56 | 1525 | 58 | 1471 | 60 | 1416 | 62 | 1363 | 1311 | 1265 |  |  |
|              |                   |     | F05 | 2028                          | 44 | 1994 | 45 | 1937 | 46 | 1899 | 47 | 1863 | 48 | 1814 | 1769 | 1724 |  |  |

### NOTE:

1. DEFAULT LOW FIRE HEATING SPEED IS F01
2. DEFAULT HIGH FIRE HEATING SPEED IS F02
3. DUCT WORK MUST BE SIZED FOR HIGHEST AIRFLOW.  
IF FURNACE IS PAIRED TO LOW TON OUTDOOR, THE  
DUCTWORK SHOULD BE SIZED FOR HIGHER HEATING  
AIRFLOW.

## AIRFLOW TABLE \*D9T96

| MODEL        | THERMOSTAT<br>CALL | TAP # | FAN & COOLING AIFLOW                           |      |      |      |      |       |      |       |      |       |      |       |
|--------------|--------------------|-------|--|------|------|------|------|-------|------|-------|------|-------|------|-------|
|              |                    |       | EXTERNAL STATIC PRESSURE (INCHES WATER COLUMN) |      |      |      |      |       |      |       |      |       |      |       |
|              |                    |       | 0.10 0.20 0.30 0.40                            |      |      |      | 0.50 |       | 0.60 |       | 0.70 |       | 0.80 |       |
|              |                    |       | CFM  | CFM  | CFM  | CFM  | CFM  | Watts | CFM  | Watts | CFM  | Watts | CFM  | Watts |
| *R9T960303AN | Y/Y1, Y2, G        | F01   | 753  | 708  | 663  | 616  | 568  | 118   | 513  | 125   | 470  | 131   | 423  | 136   |
|              |                    | F02   | 915  | 883  | 845  | 809  | 773  | 177   | 730  | 182   | 690  | 189   | 650  | 196   |
|              |                    | F03   | 529  | 518  | 461  | 394  | 343  | 75    | 288  | 81    | 223  | 86    | N/A  | N/A   |
|              |                    | F04   | 880  | 843  | 807  | 768  | 723  | 161   | 683  | 168   | 643  | 175   | 590  | 181   |
|              |                    | F05   | 1055   | 1022 | 990  | 959  | 930  | 241   | 891  | 249   | 858  | 256   | 825  | 263   |
|              |                    | F06   | 1101   | 1072 | 1040 | 1010 | 980  | 269   | 949  | 275   | 918  | 283   | 881  | 290   |
|              |                    | F07   | 1190   | 1162 | 1134 | 1104 | 1077 | 322   | 1042 | 328   | 1013 | 336   | 982  | 345   |
|              |                    | F08   | 1183   | 1157 | 1130 | 1103 | 1077 | 322   | 1047 | 331   | 1018 | 338   | 988  | 347   |
|              |                    | F09   | 1229   | 1206 | 1178 | 1153 | 1128 | 359   | 1100 | 365   | 1070 | 372   | 1042 | 328   |
| *R9T960403AN | Y/Y1, Y2, G        | F01   | 733  | 691  | 650  | 602  | 553  | 111   | 498  | 117   | 448  | 124   | 402  | 130   |
|              |                    | F02   | 1051   | 1024 | 996  | 966  | 935  | 240   | 907  | 248   | 868  | 254   | 836  | 262   |
|              |                    | F03   | 665  | 620  | 570  | 517  | 462  | 93    | 407  | 100   | 359  | 104   | 309  | 109   |
|              |                    | F04   | 915  | 881  | 846  | 814  | 780  | 174   | 737  | 180   | 695  | 186   | 652  | 193   |
|              |                    | F05   | 1138   | 1114 | 1092 | 1064 | 1035 | 288   | 1006 | 298   | 977  | 307   | 947  | 313   |
|              |                    | F06   | 887  | 855  | 823  | 790  | 751  | 164   | 705  | 170   | 666  | 176   | 608  | 183   |
|              |                    | F07   | 1189   | 1163 | 1138 | 1111 | 1085 | 321   | 1059 | 331   | 1032 | 341   | 1001 | 349   |
|              |                    | F08   | 1266   | 1243 | 1218 | 1197 | 1172 | 372   | 1148 | 383   | 1123 | 394   | 1099 | 400   |
|              |                    | F09   | 1342   | 1324 | 1305 | 1280 | 1263 | 440   | 1239 | 452   | 1216 | 463   | 1193 | 473   |
| *R9T960603AN | Y/Y1, Y2, G        | F01   | 900  | 867  | 830  | 798  | 758  | 175   | 718  | 182   | 682  | 189   | 645  | 196   |
|              |                    | F02   | 1292   | 1272 | 1248 | 1227 | 1206 | 429   | 1184 | 438   | 1162 | 447   | 1137 | 456   |
|              |                    | F03   | 688  | 649  | 603  | 551  | 499  | 104   | 447  | 110   | 405  | 115   | 359  | 120   |
|              |                    | F04   | 866  | 830  | 797  | 759  | 717  | 161   | 675  | 168   | 634  | 175   | 591  | 181   |
|              |                    | F05   | 1223   | 1195 | 1176 | 1149 | 1124 | 370   | 1101 | 381   | 1074 | 388   | 1047 | 398   |
|              |                    | F06   | 1037   | 1004 | 975  | 950  | 921  | 243   | 886  | 251   | 853  | 258   | 823  | 266   |
|              |                    | F07   | 1079   | 1053 | 1025 | 1000 | 970  | 271   | 941  | 278   | 911  | 285   | 873  | 292   |
|              |                    | F08   | 1128   | 1099 | 1075 | 1050 | 1022 | 300   | 993  | 310   | 965  | 319   | 937  | 326   |
|              |                    | F09   | 1171   | 1148 | 1124 | 1096 | 1070 | 330   | 1045 | 339   | 1017 | 348   | 988  | 355   |
| *R9T960603BN | Y/Y1, Y2, G        | F01   | 914  | 864  | 815  | 762  | 704  | 150   | 654  | 155   | 604  | 162   | 560  | 168   |
|              |                    | F02   | 1121   | 1083 | 1041 | 996  | 953  | 230   | 906  | 236   | 861  | 245   | 818  | 252   |
|              |                    | F03   | 758  | 696  | 636  | 572  | 512  | 104   | 460  | 110   | 412  | 115   | N/A  | N/A   |
|              |                    | F04   | 960  | 917  | 864  | 812  | 764  | 164   | 708  | 171   | 661  | 179   | 614  | 184   |
|              |                    | F05   | 1164   | 1123 | 1084 | 1042 | 1003 | 249   | 960  | 258   | 920  | 268   | 871  | 276   |
|              |                    | F06   | 1219   | 1180 | 1141 | 1102 | 1062 | 277   | 1020 | 286   | 978  | 294   | 940  | 303   |
|              |                    | F07   | 1273   | 1240 | 1207 | 1171 | 1128 | 309   | 1089 | 318   | 1051 | 327   | 1012 | 336   |
|              |                    | F08   | 1307   | 1270 | 1235 | 1198 | 1160 | 329   | 1122 | 336   | 1083 | 346   | 1043 | 354   |
|              |                    | F09   | 1427   | 1390 | 1362 | 1327 | 1297 | 408   | 1260 | 414   | 1224 | 423   | 1193 | 434   |
| *R9T960803BN | Y/Y1, Y2, G        | F01   | 1205   | 1169 | 1131 | 1091 | 1053 | 261   | 1014 | 270   | 974  | 279   | 934  | 289   |
|              |                    | F02   | 1415   | 1385 | 1355 | 1322 | 1291 | 394   | 1255 | 403   | 1219 | 407   | 1186 | 417   |
|              |                    | F03   | 696  | 635  | 568  | 500  | 442  | 91    | 390  | 96    | 336  | 101   | 255  | 104   |
|              |                    | F04   | 1152   | 1112 | 1076 | 1035 | 996  | 239   | 954  | 248   | 916  | 258   | 868  | 267   |
|              |                    | F05   | 1321   | 1287 | 1251 | 1217 | 1181 | 328   | 1146 | 336   | 1112 | 345   | 1072 | 355   |
|              |                    | F06   | 901  | 851  | 801  | 746  | 690  | 142   | 638  | 149   | 587  | 154   | 543  | 160   |
|              |                    | F07   | 1112   | 1076 | 1032 | 992  | 949  | 219   | 905  | 228   | 858  | 236   | 819  | 246   |
|              |                    | F08   | 1290   | 1252 | 1215 | 1182 | 1143 | 311   | 1107 | 319   | 1071 | 329   | 1032 | 337   |
|              |                    | F09   | 1471   | 1440 | 1409 | 1377 | 1347 | 427   | 1314 | 436   | 1283 | 446   | 1247 | 456   |
| *R9T960804CN | Y/Y1, Y2, G        | F01   | 1289   | 1234 | 1180 | 1122 | 1058 | 217   | 991  | 226   | 917  | 234   | 840  | 242   |
|              |                    | F02   | 1836   | 1784 | 1741 | 1703 | 1664 | 496   | 1628 | 515   | 1585 | 528   | 1537 | 540   |
|              |                    | F03   | 1297   | 1246 | 1199 | 1142 | 1083 | 224   | 1020 | 233   | 949  | 242   | 872  | 250   |
|              |                    | F04   | 1194   | 1137 | 1079 | 1014 | 948  | 188   | 873  | 197   | 792  | 205   | 712  | 212   |
|              |                    | F05   | 1748   | 1696 | 1650 | 1612 | 1574 | 438   | 1526 | 450   | 1478 | 462   | 1428 | 474   |
|              |                    | F06   | 1451   | 1399 | 1354 | 1309 | 1256 | 288   | 1200 | 298   | 1142 | 306   | 1077 | 316   |
|              |                    | F07   | 1587   | 1534 | 1489 | 1445 | 1406 | 352   | 1354 | 362   | 1298 | 372   | 1244 | 383   |
|              |                    | F08   | 1683   | 1633 | 1589 | 1546 | 1502 | 405   | 1460 | 416   | 1406 | 428   | 1355 | 440   |
|              |                    | F09   | 1919   | 1890 | 1846 | 1807 | 1771 | 566   | 1735 | 585   | 1694 | 600   | 1650 | 613   |

### NOTE:

1. **DEFAULT SPEED FOR FAN IS F03**
2. **DEFAULT SPEED FOR LOW COOLING (Y1) / 1 STAGE (Y) IS F04**
3. **DEFAULT SPEED FOR 2ND STAGE (Y2) COOLING IS F05**
4. **AIFLOW & WATTAGE DATA IS FUNACE ONLY. WATTS MAY INCREASE IF UNDERSIZED DUCTING IS USED.**
5. **AIRFLOWS OVER 1600 CFM REQUIRE 2 SIDE RETURN OR SIDE & BOTTOM RETURN. A MINIMM 20x25 SIZE FILTER IS REQUIRED.**

## AIRFLOW TABLE \*D9T96

|              |             |     |      |      |      |      |      |     |      |     |      |     |      |     |
|--------------|-------------|-----|------|------|------|------|------|-----|------|-----|------|-----|------|-----|
|              |             | F01 | 1475 | 1421 | 1369 | 1314 | 1260 | 307 | 1207 | 317 | 1152 | 326 | 1097 | 337 |
|              |             | F02 | 1791 | 1741 | 1699 | 1652 | 1609 | 482 | 1561 | 493 | 1513 | 504 | 1465 | 516 |
|              |             | F03 | 924  | 846  | 767  | 684  | 606  | 124 | 529  | 130 | 463  | 136 | 398  | 142 |
|              |             | F04 | 1259 | 1197 | 1138 | 1074 | 1015 | 218 | 947  | 226 | 885  | 236 | 821  | 244 |
| *R9T961004CN | Y/Y1, Y2, G | F05 | 1710 | 1660 | 1613 | 1583 | 1517 | 427 | 1470 | 440 | 1421 | 451 | 1374 | 462 |
|              |             | F06 | 1592 | 1536 | 1486 | 1436 | 1383 | 363 | 1331 | 373 | 1281 | 383 | 1233 | 393 |
|              |             | F07 | 1627 | 1574 | 1524 | 1474 | 1423 | 382 | 1370 | 392 | 1320 | 403 | 1271 | 414 |
|              |             | F08 | 1921 | 1879 | 1840 | 1791 | 1751 | 577 | 1705 | 588 | 1656 | 604 | 1610 | 617 |
|              |             | F09 | 2026 | 1981 | 1929 | 1901 | 1858 | 659 | 1819 | 677 | 1773 | 685 | 1733 | 701 |
|              |             | F01 | 1259 | 1197 | 1138 | 1074 | 1015 | 218 | 947  | 226 | 885  | 236 | 821  | 244 |
|              |             | F02 | 1791 | 1741 | 1699 | 1652 | 1609 | 482 | 1561 | 493 | 1513 | 504 | 1465 | 516 |
| *R9T961005CN | Y/Y1, Y2, G | F03 | 1176 | 1108 | 1044 | 980  | 913  | 188 | 845  | 197 | 779  | 206 | 718  | 213 |
|              |             | F04 | 1347 | 1286 | 1231 | 1172 | 1115 | 247 | 1055 | 256 | 995  | 265 | 933  | 275 |
|              |             | F05 | 1921 | 1879 | 1840 | 1791 | 1751 | 577 | 1705 | 588 | 1656 | 604 | 1610 | 617 |
|              |             | F06 | 1446 | 1404 | 1335 | 1280 | 1226 | 291 | 1171 | 300 | 1117 | 309 | 1062 | 319 |
|              |             | F07 | 1618 | 1567 | 1510 | 1460 | 1413 | 379 | 1364 | 390 | 1312 | 401 | 1262 | 411 |
|              |             | F08 | 2009 | 1964 | 1918 | 1886 | 1852 | 656 | 1811 | 671 | 1759 | 676 | 1722 | 693 |
|              |             | F09 | 2161 | 2122 | 2084 | 2048 | 2010 | 739 | 1973 | 755 | 1940 | 776 | 1914 | 796 |
| *R9T961205DN | Y/Y1, Y2, G | F01 | 1766 | 1712 | 1666 | 1612 | 1558 | 387 | 1506 | 401 | 1450 | 412 | 1395 | 425 |
|              |             | F02 | 2205 | 2157 | 2110 | 2064 | 2021 | 679 | 1974 | 694 | 1925 | 709 | 1879 | 726 |
|              |             | F03 | 1118 | 1035 | 952  | 860  | 750  | 149 | 663  | 156 | 590  | 165 | 519  | 171 |
|              |             | F04 | 1684 | 1620 | 1561 | 1499 | 1438 | 345 | 1378 | 358 | 1318 | 371 | 1259 | 383 |
|              |             | F05 | 2031 | 1981 | 1933 | 1901 | 1850 | 541 | 1799 | 556 | 1750 | 570 | 1702 | 585 |
|              |             | F06 | 1220 | 1145 | 1070 | 995  | 907  | 177 | 811  | 187 | 725  | 194 | 651  | 201 |
|              |             | F07 | 1357 | 1311 | 1243 | 1175 | 1107 | 223 | 1021 | 233 | 932  | 243 | 861  | 254 |
|              |             | F08 | 1906 | 1877 | 1828 | 1778 | 1726 | 474 | 1674 | 487 | 1622 | 501 | 1568 | 515 |
|              |             | F09 | 2454 | 2396 | 2347 | 2296 | 2250 | 889 | 2202 | 905 | 2157 | 922 | 2113 | 941 |
| *D9T960403BN | Y/Y1, Y2, G | F01 | 727  | 677  | 623  | 565  | 510  | 101 | 455  | 106 | 403  | 111 | 351  | 116 |
|              |             | F02 | 923  | 882  | 841  | 798  | 752  | 159 | 704  | 165 | 660  | 172 | 614  | 177 |
|              |             | F03 | 632  | 574  | 510  | 448  | 388  | 80  | 332  | 85  | 277  | 89  | 234  | 93  |
|              |             | F04 | 878  | 839  | 797  | 751  | 701  | 146 | 653  | 151 | 607  | 157 | 561  | 162 |
|              |             | F05 | 1106 | 1076 | 1044 | 1010 | 974  | 243 | 939  | 250 | 899  | 256 | 860  | 263 |
|              |             | F06 | 1188 | 1156 | 1123 | 1091 | 1062 | 290 | 1029 | 296 | 998  | 302 | 964  | 309 |
|              |             | F07 | 1237 | 1205 | 1174 | 1145 | 1115 | 317 | 1081 | 324 | 1050 | 332 | 1016 | 341 |
|              |             | F08 | 1281 | 1252 | 1222 | 1195 | 1163 | 347 | 1134 | 357 | 1104 | 362 | 1071 | 369 |
|              |             | F09 | 1382 | 1354 | 1327 | 1302 | 1276 | 418 | 1246 | 424 | 1219 | 432 | 1190 | 439 |
| *D9T960603BN | Y/Y1, Y2, G | F01 | 1167 | 1118 | 1069 | 1022 | 974  | 237 | 928  | 246 | 877  | 252 | 833  | 259 |
|              |             | F02 | 1332 | 1289 | 1245 | 1200 | 1160 | 327 | 1120 | 335 | 1081 | 343 | 1036 | 353 |
|              |             | F03 | 680  | 609  | 532  | 460  | 397  | 85  | 337  | 90  | 252  | 94  | 201  | 97  |
|              |             | F04 | 903  | 839  | 783  | 719  | 661  | 139 | 601  | 144 | 546  | 150 | 497  | 155 |
|              |             | F05 | 1248 | 1204 | 1159 | 1113 | 1071 | 280 | 1028 | 290 | 983  | 299 | 943  | 306 |
|              |             | F06 | 963  | 907  | 852  | 803  | 745  | 160 | 689  | 166 | 639  | 173 | 587  | 179 |
|              |             | F07 | 1393 | 1348 | 1309 | 1267 | 1230 | 368 | 1189 | 375 | 1152 | 383 | 1116 | 391 |
|              |             | F08 | 1450 | 1407 | 1366 | 1330 | 1290 | 409 | 1251 | 412 | 1221 | 421 | 1186 | 430 |
|              |             | F09 | 1468 | 1436 | 1393 | 1359 | 1323 | 418 | 1285 | 427 | 1248 | 436 | 1210 | 445 |
| *D9T960803BN | Y/Y1, Y2, G | F01 | 1167 | 1124 | 1087 | 1040 | 995  | 250 | 954  | 258 | 916  | 264 | 869  | 272 |
|              |             | F02 | 1317 | 1277 | 1240 | 1201 | 1161 | 336 | 1122 | 344 | 1081 | 350 | 1045 | 360 |
|              |             | F03 | 733  | 669  | 606  | 543  | 482  | 99  | 424  | 104 | 372  | 109 | 300  | 115 |
|              |             | F04 | 1217 | 1174 | 1130 | 1086 | 1045 | 274 | 1003 | 282 | 962  | 289 | 925  | 297 |
|              |             | F05 | 1300 | 1263 | 1225 | 1186 | 1142 | 322 | 1099 | 331 | 1062 | 339 | 1023 | 348 |
|              |             | F06 | 919  | 872  | 820  | 764  | 711  | 149 | 658  | 156 | 605  | 162 | 553  | 168 |
|              |             | F07 | 1126 | 1085 | 1042 | 998  | 953  | 234 | 910  | 241 | 866  | 249 | 824  | 255 |
|              |             | F08 | 1375 | 1341 | 1301 | 1264 | 1226 | 375 | 1189 | 382 | 1154 | 391 | 1118 | 402 |
|              |             | F09 | 1440 | 1402 | 1366 | 1330 | 1295 | 414 | 1260 | 423 | 1224 | 430 | 1187 | 439 |
| *D9T961005CN | Y/Y1, Y2, G | F01 | 1366 | 1307 | 1248 | 1188 | 1130 | 255 | 1069 | 264 | 1007 | 273 | 938  | 282 |
|              |             | F02 | 1833 | 1785 | 1736 | 1688 | 1640 | 509 | 1593 | 519 | 1543 | 529 | 1497 | 540 |
|              |             | F03 | 1295 | 1230 | 1168 | 1105 | 1044 | 227 | 981  | 236 | 911  | 244 | 843  | 252 |
|              |             | F04 | 1634 | 1578 | 1525 | 1471 | 1416 | 382 | 1363 | 391 | 1311 | 400 | 1265 | 411 |
|              |             | F05 | 2028 | 1994 | 1937 | 1899 | 1863 | 683 | 1814 | 690 | 1769 | 702 | 1724 | 713 |
|              |             | F06 | 1773 | 1721 | 1671 | 1621 | 1571 | 465 | 1521 | 474 | 1470 | 485 | 1421 | 495 |
|              |             | F07 | 1908 | 1860 | 1813 | 1766 | 1720 | 569 | 1672 | 581 | 1624 | 591 | 1578 | 602 |
|              |             | F08 | 1965 | 1919 | 1873 | 1829 | 1783 | 617 | 1736 | 627 | 1688 | 637 | 1643 | 648 |
|              |             | F09 | 2096 | 2053 | 2014 | 1973 | 1931 | 726 | 1890 | 736 | 1849 | 752 | 1803 | 758 |

### NOTE:

1. **DEFAULT SPEED FOR FAN IS F03**
2. **DEFAULT SPEED FOR LOW COOLING (Y1) / 1 STAGE (Y) IS F04**
3. **DEFAULT SPEED FOR 2ND STAGE (Y2) COOLING IS F05**
4. **AIRFLOW & WATTAGE DATA IS FUNACE ONLY. WATTS MAY INCREASE IF UNDERSIZED DUCTING IS USED.**
5. **AIRFLOWS OVER 1600 CFM REQUIRE 2 SIDE RETURN OR SIDE & BOTTOM RETURN. A MINIMUM 20x25 SIZE FILTER IS REQUIRED.**

## NORMAL SEQUENCE OF OPERATION

### POWER UP

Upon being powered up, the control board will perform internal and polarity checks. The control will display I d L, idle mode until a call from the thermostat is received.

### CONTINUOUS FAN MODE SPEED SELECTION

When a 24 vac signal is present on the G terminal, the blower motor will operate on selected continuous blower speed. The EAC-H will also be energized as long as the blower motor is energized.

When the R to G circuit is opened, the blower motor will shut down if no other function requires blower motor operation.

To change the main blower speed in circulation mode, follow the following steps:

1. Press left or right switch until LED displays "F S d ". Press center switch and the LED will display the selected speed number as Fxx (xx: Blower speed number from 01 to 09). SP3 is default speed for circulation.
2. The control will display an available speed number every time Left/Right switches are pressed. All 9 speeds are available for circulation.
3. Press the center button to select the desired speed. The control will immediately apply that speed setting.

| THERMOSTAT CALL | AVAILABLE SPEEDS |
|-----------------|------------------|
| G               | F01              |
|                 | F02              |
|                 | F03 (DEFAULT)    |
|                 | F04              |
|                 | F05              |
|                 | F06              |
|                 | F07              |
|                 | F08              |
|                 | F09              |

### HEATING MODE SPEED SELECTION

To change the main blower speed in HEATING mode, follow the following steps:

1. Press left or right button till LED displays "gA1 " (for single stage HEATING) or "gA2 " (for Two stage HEATING). Press center button and LED will display the selected speed number as Fxx (xx: Blower speed number).
2. The control shall rotate available speed number every time Left/Right switches are pressed. Table below shows the available speeds for Low & High heat mode.
3. When the center switch is pressed, the current displayed

speed shall be selected, and control shall apply the newly selected speed in next heating call.

**Note:** Always refer to the Heating Chart to choose from available heating speeds.

| THERMOSTAT CALL | AVAILABLE SPEEDS |
|-----------------|------------------|
| W/W1            | F01 (DEFAULT)    |
|                 | F03              |
|                 | F04              |
| W2              | F02 (DEFAULT)    |
|                 | F04              |
|                 | F05              |

### HEATING MODE

#### Call for 1st Stage Heat

- On a call for heat, the thermostat contacts close & the control board receives 24 vac on the W1 terminal.
- The control board microcomputer runs its self-check routine.
- The control verifies the limit switch is closed (24 vac on Pin 8 of the 12 Pin connector).
- The control verifies that pressure switch circuit is open (0 vac on Pin 5).
- The control module performs a gas valve circuitry check to verify gas valve relay state and presence of no voltage at the valve.
- The system will energize the Induced draft blower.
- The pre-purge period begins once the low fire pressure switch is detected closed. (24 vac on Pin 5).
- After the completion of pre-purge, the control will energize the igniter.
- After completion of the igniter warm-up period:
- The gas valve is energized.
- The igniter is de-energized as soon as flame is sensed.
- After 30 seconds the indoor blower is energized on heating speed.
- When using a single-stage heating thermostat the furnace will transition to 2nd stage gas heat by either a fixed time or auto mode, depending on menu selections made by the installer.
- The inducer motor is enabled at high speed.
- Closure of the second stage pressure switch will energize the high fire stage of the gas valve.
- The 2nd stage gas heat speed of the indoor blower is energized

-When the thermostat is satisfied;

- The gas valve is de-energized.
- The inducer remains energized for the post purge period (15 seconds).
- The indoor blower runs for the selected off delay period (90 seconds by default, adjustable from 30 – 180 seconds).

#### Call for 2nd Stage Heat During 1st Stage Heat Operation

- The control board receives a 24 vac signal on the W2 terminal.
- The inducer motor is enabled at high speed.
- Closure of the second stage pressure switch will energize the high fire stage of the gas valve.
- The 2nd stage gas heat speed of the indoor blower is energized.

Note: A call for second stage without a call for first stage will be ignored.

#### **COOLING MODE SPEED SELECTION**

To change the main blower speed in COOLING mode, follow the following steps:

1. Press left or right button till LED displays “AC1” (for single stage COOLING) or “AC2” (for Two stage COOLING). Press center button and LED will display the selected speed number as Fxx (xx: Blower speed number from 1 to 9).
2. The control shall rotate available speed number every time Left/Right switches are pressed. All 9 speeds are available for both Single and Two Stage cooling.
3. When the center switch is pressed, the current displayed speed shall be selected, and control shall apply the newly selected speed in next cooling call.

| <b>THERMOSTAT CALL</b> | <b>AVAILABLE SPEEDS</b> |
|------------------------|-------------------------|
| Y/Y1                   | F01                     |
|                        | F02                     |
|                        | F03                     |
|                        | F04 (DEFAULT)           |
|                        | F05                     |
|                        | F06                     |
|                        | F07                     |
|                        | F08                     |
|                        | F09                     |

#### **SINGLE STAGE COOLING SPEED TABLE FOR 2 STAGE IFC**

| <b>THERMOSTAT CALL</b> | <b>AVAILABLE SPEEDS</b> |
|------------------------|-------------------------|
| Y2                     | F01                     |
|                        | F02                     |
|                        | F03                     |
|                        | F04                     |
|                        | F05 (DEFAULT)           |
|                        | F06                     |
|                        | F07                     |
|                        | F08                     |
|                        | F09                     |

#### **TWO STAGE COOLING SPEED TABLE FOR 2 STAGE IFC**

#### **COOLING MODE**

Low Stage Cooling Mode Sequence:

On a call for low stage cooling, the Y/Y1 or Y/Y1 and G thermostat contacts close signaling the furnace control board with 24 vac. on Y/Y1 or Y/Y1 and G terminals.

- The 7-Segment will display the cool mode; 1 A C
- The compressor and condenser fan are energized.
- The circulator fan is energized at low cool speed after a cool on delay. The electronic air cleaner will also be energized. After the thermostat is satisfied, the compressor and condenser fan are de-energized and the Cool Mode Fan Off Delay period begins.
- Following the Cool Mode Fan Off Delay period, the cool circulator and air cleaner relay are de-energized.

2nd Stage Cooling Mode Sequence:

On a call for 2nd stage cooling, the Y2 or Y2 and G thermostat contacts close signaling the furnace control board with 24 vac. on Y2 or Y2 and G terminals.

- The 7-Segment will display the cool mode; 2 A C
- The compressor and condenser fan are energized.
- The circulator fan is energized at cool speed after a cool on delay. The electronic air cleaner will also be energized.
- After the thermostat is satisfied, the compressor and condenser fan are de-energized and the Cool Mode Fan Off Delay period begins.
- Following the Cool Mode Fan Off Delay period, the cool circulator and air cleaner relay are de-energized.

## OPERATIONAL CHECKS

The burner flames should be inspected with the burner compartment door installed. Flames should be stable, quiet, soft, and blue (dust may cause orange tips but they must not be yellow). Flames should extend directly outward from the burners without curling, floating, or lifting off. Flames must not impinge on the sides of the heat exchanger firing tubes.

## SAFETY CIRCUIT DESCRIPTION



### WARNING

DO NOT BYPASS SAFETY DEVICES.

A number of safety circuits are employed to ensure safe and proper furnace operation. These circuits serve to control any potential safety hazards and serve as inputs in the monitoring and diagnosis of abnormal function. These circuits are continuously monitored during furnace operation by the integrated control module.

### INTEGRATED CONTROL MODULE

The integrated control module will display furnace status including faults, mode of operation and air flow, on three seven segment displays.

### PRIMARY LIMIT

The primary limit control is located on the partition panel and monitors heat exchanger compartment temperatures. It is a normally-closed (electrically), automatic reset, temperature-activated sensor. The limit guards against overheating as a result of insufficient conditioned air passing over the heat exchanger.

### AUXILIARY LIMIT

The auxiliary limit controls are located on or near the circulator blower and monitors blower compartment temperatures. They are a normally-closed (electrically), automatic reset, temperature-activated sensor. These limits guard against overheating as a result of insufficient conditioned air passing over the heat exchanger.

### ROLLOUT LIMIT

The rollout limit controls are mounted on the burner/manifold assembly and monitor the burner flame. They are normally-closed (electrically), manual-reset sensors. These limits guard against burner flames not being properly drawn into the heat exchanger.

### PRESSURE SWITCHES

The pressure switches are normally-open (closed during operation) negative air pressure-activated switches. They monitor the airflow (combustion air and flue products) through the heat exchanger via pressure taps located on the induced draft blower and the coil front cover. These switches guard against insufficient airflow (combustion air and flue products) through the heat exchanger and/or blocked condensate drain conditions.

## FLAME SENSOR

The flame sensor is a probe mounted to the burner/manifold assembly which uses the principle of flame rectification to determine the presence or absence of flame.

## TROUBLESHOOTING

### ELECTROSTATIC DISCHARGE (ESD)

#### PRECAUTIONS

Use the following precautions during furnace installation and servicing to protect the integrated control module from damage. By putting the furnace, the control, and the person at the same electrostatic potential, these steps will help avoid exposing the integrated control module to electrostatic discharge. This procedure is applicable to both installed and uninstalled (ungrounded) furnaces.

1. Disconnect all power to the furnace. Do not touch the integrated control module or any wire connected to the control prior to discharging your body's electrostatic charge to ground.
2. Firmly touch a clean, unpainted, metal surface of the furnace away from the control. Any tools held in a person's hand during grounding will be discharged.
3. Service integrated control module or connecting wiring following the discharge process in step 2. Use caution not to recharge your body with static electricity; (i.e., do not move or shuffle your feet, do not touch ungrounded objects, etc.). If you come in contact with an ungrounded object, repeat step 2 before touching control or wires.
4. Discharge your body to ground before removing a new control from its container. Follow steps 1 through 3 if installing the control on a furnace. Return any old or new controls to their containers before touching any ungrounded object.

## DIAGNOSTIC CHART

Refer to the *Troubleshooting Chart* in the back of this manual for assistance in determining the source of unit operational problems.

#### External Lockout

- A control lockout resulting from an external fault sensed by the control, such as an unsuccessful recycle or retry period, or a limit trip. Once in External Lockout, the control will shut down for a period of one hour before attempting another trial for ignition.

#### Internal Lockout

- A failure internal to the control board.

## FAULT RECALL

### Retrieving Fault Codes

## RESETTING FROM LOCKOUT

Furnace lockout results when a furnace is unable to achieve ignition after three attempts during a single call for heat. It is characterized by a non-functioning furnace and a one flash diagnostic LED code. If the furnace is in "lockout", it can be reset in any of the following ways.

1. Automatic reset. The integrated control module will automatically reset itself and attempt to resume normal operations following a one hour lockout period.
2. Manual power interruption. Interrupt 115 volt power to the furnace for 1 - 20 seconds.
3. Manual thermostat cycle. Lower the thermostat so that there is no longer a call for heat then reset to previous setting. Interrupt thermostat signal to the furnace for 1 - 20 seconds.

**NOTE:** If the condition which originally caused the lockout still exists, the control will return to lockout. Refer to the *Troubleshooting Chart* for aid in determining the cause.

## MAINTENANCE



### WARNING

#### HIGH VOLTAGE

TO AVOID PERSONAL INJURY OR DEATH DUE TO ELECTRICAL SHOCK, DISCONNECT ELECTRICAL POWER BEFORE PERFORMING ANY SERVICE OR MAINTENANCE.



### WARNING

#### HIGH VOLTAGE

TO AVOID ELECTRICAL SHOCK, INJURY OR DEATH, DISCONNECT ELECTRICAL POWER BEFORE PERFORMING ANY MAINTENANCE. IF YOU MUST HANDLE THE IGNITER, HANDLE WITH CARE. TOUCHING THE IGNITER ELEMENT WITH BARE FINGERS, ROUGH HANDLING OR VIBRATION COULD DAMAGE THE IGNITER RESULTING IN PREMATURE FAILURE. ONLY A QUALIFIED SERVICER SHOULD EVER HANDLE THE IGNITER.



## FILTERS

### FILTER MAINTENANCE

Improper filter maintenance is the most common cause of inadequate heating or cooling performance. Filters should be cleaned (permanent) or replaced (disposable) every two months or as required. When replacing a filter, it must be replaced with a filter of the same type and size.



### CAUTION

TO ENSURE PROPER UNIT PERFORMANCE, ADHERE TO THE FILTER SIZES GIVEN IN THE RECOMMENDED MINIMUM FILTER SIZE TABLE OR SPECIFICATION SHEET APPLICABLE TO YOUR MODEL.

### FILTER REMOVAL

Depending on the installation, differing filter arrangements can be applied. Filters can be installed in either the central return register or a side panel external filter rack (upflow only). A media air filter or electronic air cleaner can be used as an alternate filter. Follow the filter sizes given in the Recommended Minimum Filter size table to ensure proper unit performance.

To remove filters from an external filter rack in an upright upflow installation, follow the directions provided with external filter rack kit.

### HORIZONTAL UNIT FILTER REMOVAL


Filters in horizontal installations are located in the central return register or the ductwork near the furnace.

To remove:

1. Turn OFF electrical power to furnace.
2. Remove filter(s) from the central return register or ductwork.
3. Replace filter(s) by reversing the procedure for removal.
4. Turn ON electrical power to furnace.

### MEDIA AIR FILTER OR ELECTRONIC AIR CLEANER REMOVAL

Follow the manufacturer's directions for service.

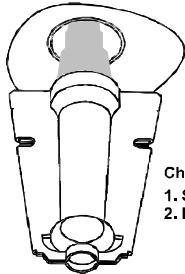

Check the burner flames for:

1. Stable, soft and blue
2. Not curling, floating, or lifting off.

**Burner Flame**  
**Figure 49**

## **BURNERS**

Visually inspect the burner flames periodically during the heating season. Turn on the furnace at the thermostat and allow several minutes for flames to stabilize, since any dislodged dust will alter the flames normal appearance. Flames should be stable, quiet, soft, and blue (dust may cause orange tips but they must not be yellow). They should extend directly outward from the burners without curling, floating, or lifting off. Flames must not impinge on the sides of the heat exchanger firing tubes.

## **INDUCED DRAFT AND CIRCULATOR BLOWERS**

The bearings in the induced draft blower and circulator blower motors are permanently lubricated by the manufacturer. No further lubrication is required. Check motor windings for accumulation of dust which may cause overheating. Clean as necessary.

## **CONDENSATE TRAP AND DRAIN SYSTEM (QUALIFIED SERVICER ONLY)**

Annually inspect the drain tubes, drain trap, and field-supplied drain line for proper condensate drainage. Check drain system for hose connection tightness, blockage, and leaks. Clean or repair as necessary.

## **FLAME SENSOR (QUALIFIED SERVICER ONLY)**

Under some conditions, the fuel or air supply can create a nearly invisible coating on the flame sensor. This coating acts as an insulator causing a drop in the flame sense signal. If the flame sense signal drops too low the furnace will not sense flame and will lock out. The flame sensor should be carefully cleaned by a qualified servicer using steel wool.

## **BEFORE LEAVING AN INSTALLATION**

- Cycle the heating, cooling and fan only operations to verify each operation is working properly.
- Review the Owner's Manual with the homeowner and discuss proper furnace operation and maintenance.
- Leave literature packet near furnace.

## **REPAIR AND REPLACEMENT PARTS**

- When ordering any of the listed functional parts, be sure to provide the furnace model, manufacturing, and serial numbers with the order.
- Although only functional parts are shown in the parts list, all sheet metal parts, doors, etc. may be ordered by description.
- Parts are available from your distributor.

### Functional Parts List:

Auxiliary Limit Switch  
Blower Cutoff  
Blower Housing  
Blower Motor  
Blower Mounting Bracket  
Blower Wheel  
Door Switch  
Flame Sensor  
Gas Manifold  
Gas Valve  
Heat Exchanger  
Igniter  
Induced Draft Blower  
Integrated Control Module  
Natural Gas Orifice  
Pressure Switch  
Primary Limit Switch  
Propane Gas Orifice  
Rollout Limit Switch  
Transformer

## 2 STAGE STATUS CODES

| Menu Description                               | LED Display |                         | Notes   |
|--|-------------|-------------------------|---|
|  | Main Menu   | Option Menu             |   |
| Active Alarm menu                              | <b>Er r</b> | <b>Exx</b>              | ( xx: code numbers )  |
| Last 10 Faults                                 | <b>F10</b>  | <b>Exx</b>              | ( xx: code numbers )  |
| Code Release Number                            | <b>Cr</b>   | CR Number               |   |
| Reset to Factory Default                       | <b>r Fd</b> | <b>yes, no</b>          |   |
| Blower Speed for Continuous Fan Mode           | <b>FSd</b>  | <b>Fxx</b>              | ( xx: Blower Speed Number F01, F02.. )  |
| Blower Speed for 1st Stage Compressor Mode     | <b>AC1</b>  | <b>Fxx</b>              | ( xx: Blower Speed Number F01, F02.. )  |
| Blower Speed for 2nd Stage Compressor Mode     | <b>AC2</b>  | <b>Fxx</b>              | ( xx: Blower Speed Number F01, F02.. )  |
| Cool On Delay                                  | <b>Cnd</b>  | Delay, Seconds          | Default set at 7 Secs, Adjustments can be made in 7 Secs increments from 0 to 35 Secs     |
| Cool Off Delay                                 | <b>Cf d</b> | Delay, Seconds          | Default set at 65 Secs, Adjustments can be made in 5 Secs increments from 0 to 120 Secs   |
| Fan Speed for Low-Stage Gas Heat Mode          | <b>gA1</b>  | <b>Fxx</b>              | ( xx: Blower Speed Number F01, F02.. )  |
| Fan Speed for High-Stage Gas Heat Mode         | <b>gA2</b>  | <b>Fxx</b>              | ( xx: Blower Speed Number F01, F02.. )  |
| Gas Heat On Delay                              | <b>gnd</b>  | Delay, Seconds          | Default set at 30 Secs, Adjustments can be made in 5 Secs increments from 5 to 30 Secs    |
| Gas heat Off Delay                             | <b>gFd</b>  | Delay, Seconds          | Default set at 90 Secs, Adjustments can be made in 30 Secs increments from 30 to 180 Secs |
| Automatic Heat Staging - For Two Stage Control | <b>AHS</b>  | no, 10, 20, 30, 60, AUt | Refer to Section " CHANGING HEATING MODE SETTING"   |
| A2L Function Verification                      | <b>A2u</b>  | <b>yes, no</b>          | Refer to the R-32 Information Section   |
| A2L Function Enabled                           | <b>A2E</b>  | <b>yes, no</b>          | Refer to the R-32 Information Section   |

| Mode                           | Main<br>Menu |
|--------------------------------|--------------|
| Idle                           | <b>I dL</b>  |
| Continuous Fan                 | <b>FAn</b>   |
| Compressor Cooling, Low Stage  | <b>1AC</b>   |
| Compressor Cooling, High Stage | <b>2AC</b>   |
| Gas Heat, Low Stage            | <b>gH1</b>   |
| Gas Heat, High Stage           | <b>gH2</b>   |
| OEM test Mode                  | <b>EOL</b>   |

## TROUBLESHOOTING CHART

| Symptom  | LED Status | Fault Description  | Corrective Actions  |
|--|------------|--|---|
| Normal operation   | I dL       | Normal operation   | None  |
| Furnace fails to operate   | EE0        | Furnace lockout due to an excessive number of ignition "retries" (3 total)<br>Failure to establish flame<br>Loss of flame after establishment  | Locate and correct gas interruption<br>Check front cover pressure switch operation and verify proper drainage (hose, wiring, contact operation), correct if necessary<br>Replace or realign igniter<br>Check flame sense signal, clean sensor if coated or oxidized<br>Check flue piping for blockage, proper length, elbows, and termination<br>Verify proper induced draft blower performance |
| Furnace fails to operate   | EE1        | Pressure switch circuit is closed at start of heating cycle<br>Pressure switch contacts sticking<br>Short in pressure switch circuit wiring  | Replace low stage pressure switch<br>Repair short in wiring   |
| Induced draft blower runs continuously with no furnace operation | EE2        | Pressure switch circuit is not closed<br>Pressure switch hose blocked pinched, or connected improperly<br>Blocked flue and/or inlet air pipe, blocked drain system or weak induced draft blower<br>Incorrect pressure switch set point or malfunctioning switch contacts<br>Loose or improperly connected wiring | Inspect pressure switch hose, repair/replace if necessary<br>Inspect flue and/or inlet air piping for blockage, proper length, elbows, and termination<br>Check drain system, correct as necessary<br>Check induced draft blower performance, correct as necessary<br>Check pressure switch operation, replace as needed<br>Tighten or correct wiring connection                                |
| Circulator blower runs continuously<br>No furnace operation      | EE3        | Primary limit circuit is open<br>Insufficient conditioned air over the heat exchanger<br>Blocked filters, restrictive ductwork, improper circulator blower speed, or failed circulator blower motor<br>Loose or improperly connected wiring in high limit circuit  | Check filters and ductwork for blockage<br>Clean filters or remove obstruction<br>Check circulator blower speed and performance<br>Correct speed or replace blower motor if necessary<br>Tighten or correct wiring connection   |

### TO VIEW & CLEAR FAULT CODES

Press either the Left or Right switch until F10 is displayed.

Press the center switch to view stored faults.

Press and hold the center switch for 5 to 30 seconds.

All stored faults will be erased, and the display will flash - - - three times and return to F10.


## TROUBLESHOOTING CHART

| Symptom  | LED Status | Fault Description   | Corrective Actions   |
|--|------------|---|--|
| Induced draft blower and circulator blower runs continuously<br>No furnace operation                             | EE4        | Flame sensed with no call for heat<br>Short to ground in flame sense circuit<br>Lingering burner flame Slow closing gas valve   | Correct short at flame sensor or in flame sensor wiring<br>Check for lingering or lazy flame Verify proper operation of gas valve  |
| No furnace operation   | EE5        | Open fuse<br>Short in low voltage wiring  | Replace fuse<br>Locate and correct short in low voltage wiring   |
| Normal furnace operation   | EE6        | Flame sense micro amp signal is minimal<br>Flame sensor is coated/oxidized<br>Flame sensor incorrectly positioned in burner flame<br>Lazy burner flame due to improper gas pressure or combustion air | Clean flame sensor if coated or oxidized Inspect for proper flame sensor alignment<br><br>Check inlet air piping for blockage, proper length, elbows, and termination<br><br>Compare current gas pressure to rating plate and adjust as needed   |
| Furnace fails to operate   | EEL        | Problem with igniter circuit<br>Improperly connected or shorted igniter<br>Poor unit ground<br>Igniter relay fault on integrated control module   | Check and correct wiring from integrated control module to igniter<br><br>Diagnose and replace shorted igniter as needed Verify and correct unit ground wiring if needed<br><br>Check igniter output from control, replace if necessary  |
| Furnace fails to operate on high stage; furnace operates normally on low stage<br>Induced draft blower operating | EE8        | High stage pressure switch circuit is closed at start of heating cycle.<br>High stage pressure switch contacts sticking<br>Shorts in pressure switch circuit wiring                                   | Diagnose and replace high stage pressure switch if needed<br><br>Repair short in wiring  |
| Furnace fails to operate on high stage; furnace operates normally on low stage<br>Induced draft blower operating | EE9        | High stage pressure switch circuit is not closed  | Inspect pressure switch hose, repair/replace if necessary<br><br>Inspect flue and/or inlet air piping for blockage, proper length, elbows, and termination<br><br>Check drain system, correct as necessary<br>Check induced draft blower performance, correct as necessary<br>Tighten or correct wiring connection |
| Furnace fails to operate   | EEA        | Polarity of 115 volt AC is reversed<br>Poor unit ground   | Correct polarity, check and correct wiring if necessary<br><br>Verify proper ground, correct if necessary  |
| Furnace fails to operate   | EEb        | Gas valve is not energized when it should be<br>External Gas Valve Error  | Check wiring in gas valve circuit<br><br>Replace integrated control board  |

## TROUBLESHOOTING CHART

| Symptom   | LED Status | Fault Description   | Corrective Actions   |
|---|------------|---|--|
| Furnace fails to operate  | EEC        | Gas valve is energized when it should not be<br>Internal gas valve error  | Check wiring in gas valve circuit<br>Replace integrated control board  |
| Furnace fails to operate.<br>Integrated control module LED display provides no signal | None       | No 115 power to furnace or no 24 volt power to integrated control module.<br>Blown fuse or tripped circuit breaker<br>Integrated control module is non-functional | Restore high voltage power to furnace and integrated control module.<br>Correct condition which caused fuse to open, replace fuse<br>Replace non-functional integrated control module.   |
| Furnace fails to operate  | E10        | Grounding fault<br>Poor neutral connection  | Verify neutral wire connection to furnace & continuity to ground source  |
| Furnace fails to operate  | E11        | Open roll out switch  | Check for correct gas pressure<br>Check for correct burner alignment<br>Check for and correct burner restriction   |
| Furnace fails to operate  | EEn        | Ignitor Open  | Check for Ignitor wiring.<br>Replace Damaged Ignitor   |
| Furnace fails to operate  | EEJ        | Inducer relay Error   | Replace integrated control board   |
| Twining feature not working   | EEH        | TWIN Error  | Check for wiring connections.<br>Replace integrated control board  |
| Furnace fails to operate  | EEE        | Internal Faults or IRQ Loss in Control Board  | Replace integrated control board   |
| Furnace fails to operate and goes to hard lockout                                     | EbL        | Main blower motor is consuming very little current after heat on delay, below an expected value   | Check for loose motor wiring connections.<br>Verify if the blower motor voltage, amps and proper speed setting. If blower motor is not operating correctly, replace the motor.   |
| Furnace fails to operate and goes to hard lockout                                     | EbU        | Main blower motor is consuming too much current during inducer pre-purge, above an expected value.  | Verify wiring connections to and from motor are not loose.<br>Verify that line voltage wires to the control and the main blower motor are not reversed at the control.   |
| Furnace stops heating and only the fan is operating                                   | EAF        | Furnace has lost communication with the R-32 sensor and the furnace is in mitigation mode.  | Furnace may not be paired with an R-32 cooling unit. Refer to the R-32 Information Section.<br>Verify wire connection to R-32 sensor is not loose.<br>Verify that the R-32 sensor wire is not damaged.<br>Replace R-32 Sensor. |
| Furnace stops heating and only the fan is operating                                   | EAL        | R-32 sensor has detected a refrigerant leak and furnace is in mitigation mode.  | Investigate the indoor coil for a refrigerant leak.<br>Furnace will resume normal operation once a leak is not detected and the 5 minute delay period is over.   |
| Furnace stops heating and only the fan is operating                                   | EAS        | R-32 sensor has detected a fault and the furnace is in mitigation mode.   | Investigate the R-32 sensor.<br>Replace the R-32 sensor.   |
| Furnace stops heating and only the fan is operating                                   | Ear        | A2L relay in the furnace control board has detected a fault and the furnace is in mitigation mode.  | Investigate A2L relay.<br>Cycle power on the furnace.<br>Replace integrated control board.   |

# WIRING DIAGRAM

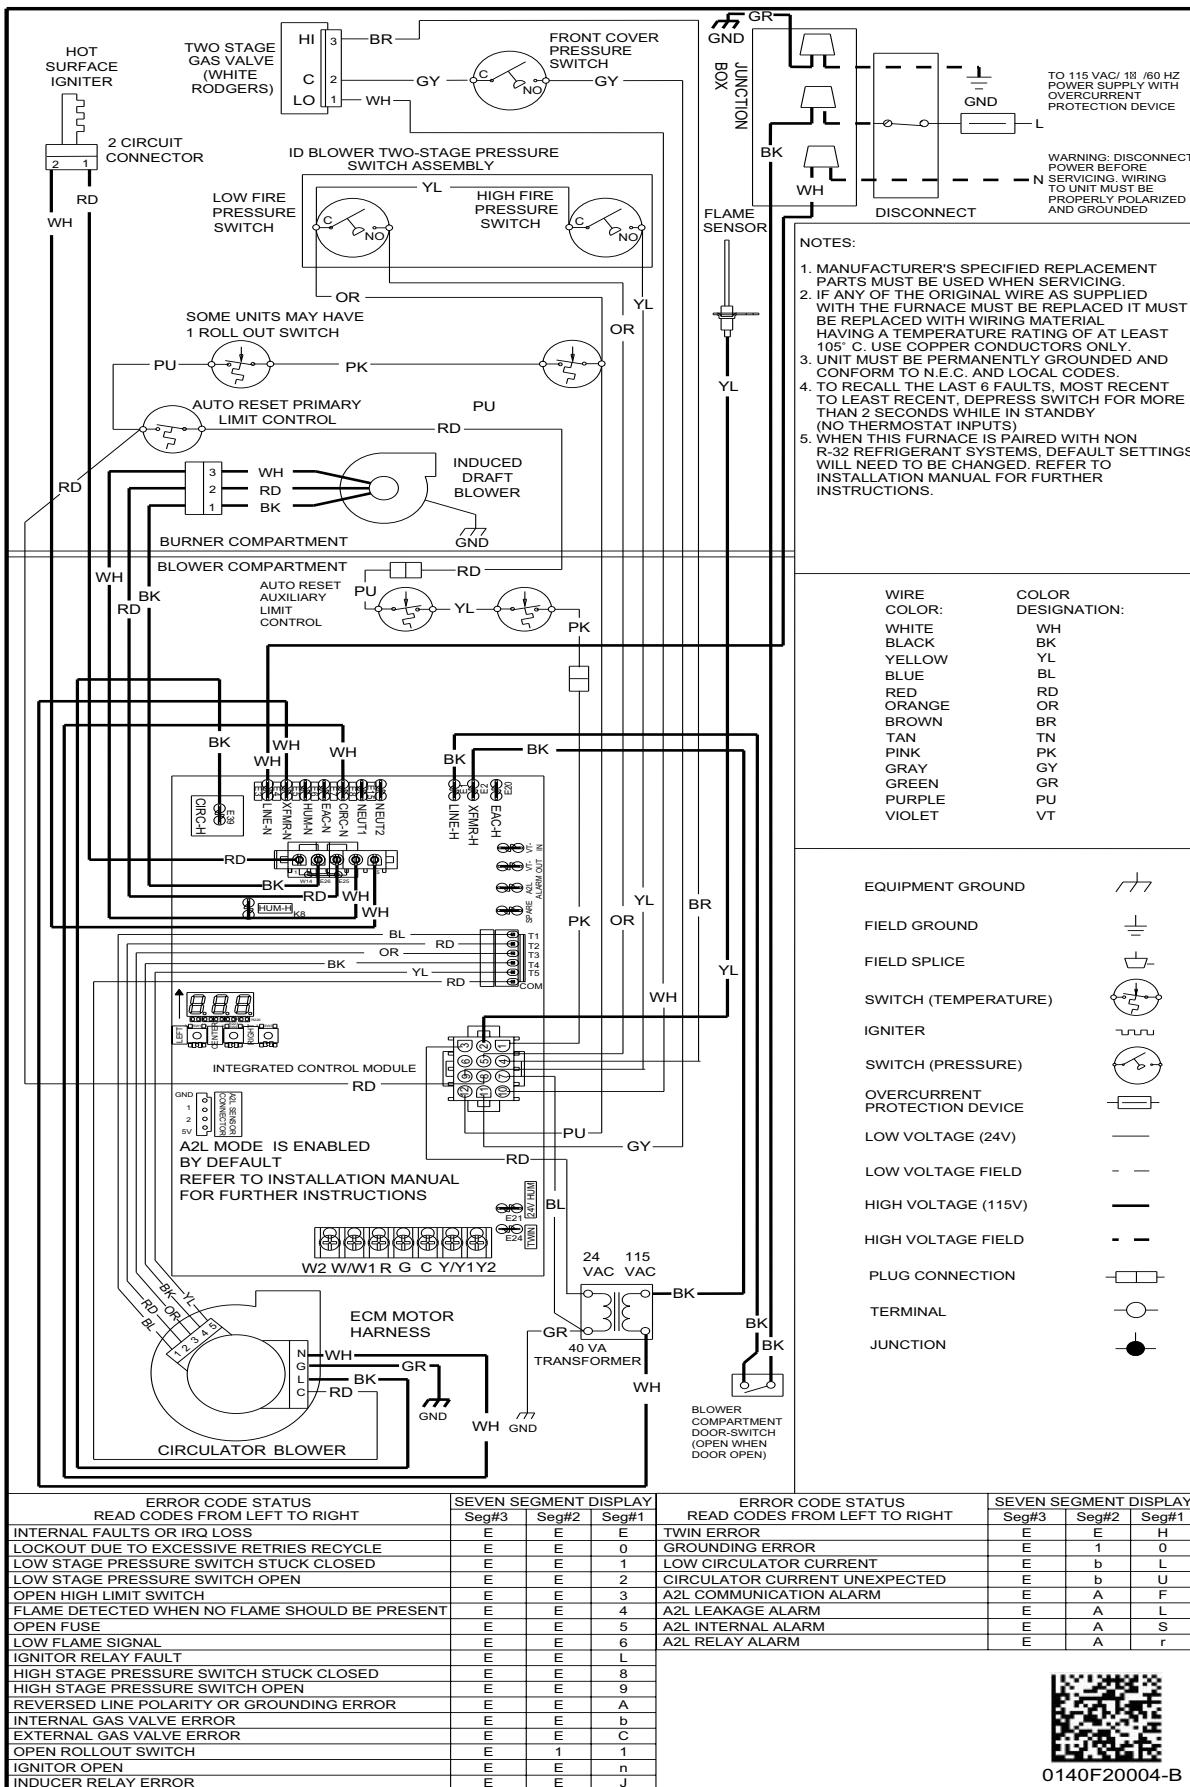

Wiring is subject to change. Always refer to the wiring diagram on the unit for the most up-to-date wiring.

## SPECIAL INSTRUCTIONS FOR PRODUCTS INSTALLED IN THE STATE OF MASSACHUSETTS

For all side wall horizontally vented gas fueled equipment installed in every dwelling, building or structure used in whole or in part for residential purposes, including those owned or operated by the Commonwealth and where the side wall exhaust vent termination is less than seven (7) feet above finished grade in the area of the venting, including but not limited to decks and porches, the following requirements shall be satisfied:

### 1. INSTALLATION OF CARBON MONOXIDE DETECTORS.

At the time of installation of the side wall horizontal vented gas fueled equipment, the installing plumber or gasfitter shall observe that a hard wired carbon monoxide detector with an alarm and battery back-up is installed on the floor level where the gas equipment is to be installed. In addition, the installing plumber or gasfitter shall observe that a battery operated or hard wired carbon monoxide detector with an alarm is installed on each additional level of the dwelling, building or structure served by the side wall horizontal vented gas fueled equipment. It shall be the responsibility of the property owner to secure the services of qualified licensed professionals for the installation of hard wired carbon monoxide detectors


- a. In the event that the side wall horizontally vented gas fueled equipment is installed in a crawl space or an attic, the hard wired carbon monoxide detector with alarm and battery back-up may be installed on the next adjacent floor level.
- b. In the event that the requirements of this subdivision can not be met at the time of completion of installation, the owner shall have a period of thirty (30) days to comply with the above requirements; provided, however, that during said thirty (30) day period, a battery operated carbon monoxide detector with an alarm shall be installed.
- 2. APPROVED CARBON MONOXIDE DETECTORS. Each carbon monoxide detector as required in accordance with the above provisions shall comply with NFPA 720 and be ANSI/UL 2034 listed and IAS certified.
- 3. SIGNAGE. A metal or plastic identification plate shall be permanently mounted to the exterior of the building at a minimum height of eight (8) feet above grade directly in line with the exhaust vent terminal for the horizontally vented gas fueled heating appliance or equipment. The sign shall read, in print size no less than one-half (1/2) inch in size, **"GAS VENT DIRECTLY BELOW. KEEP CLEAR OF ALL OBSTRUCTIONS".**
- 4. INSPECTION. The state or local gas inspector of the side wall horizontally vented gas fueled equipment shall not approve the installation unless, upon inspection, the inspector observes carbon monoxide detectors and signage installed in accordance with the provisions of 248 CMR 5.08(2)(a)1 through 4.

### EXEMPTIONS

The following equipment is exempt from 248 CMR 5.08(2)(a)1 through 4:

- 1. The equipment listed in Chapter 10 entitled "Equipment Not Required To Be Vented" in the most current edition of NFPA 54 as adopted by the Board; and

- 2. Product Approved side wall horizontally vented gas fueled equipment installed in a room or structure separate from the dwelling, building or structure used in whole or in part for residential purposes.

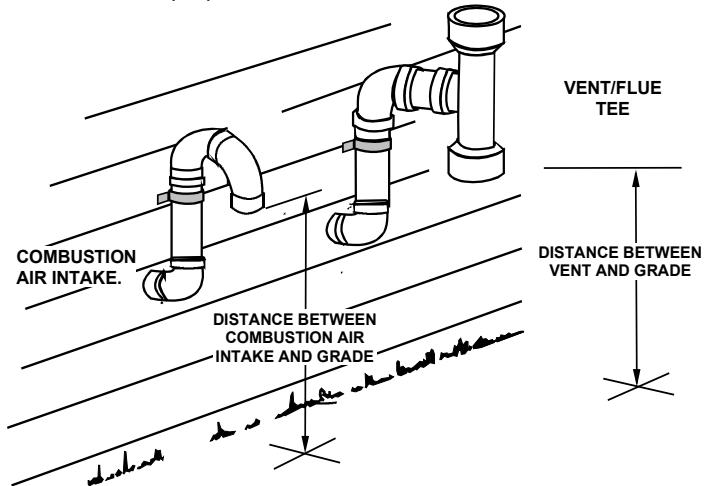

- (c) MANUFACTURER REQUIREMENTS - GAS EQUIPMENT VENTING SYSTEM PROVIDED. When the manufacturer of Product Approved side wall horizontally vented gas equipment provides a venting system design or venting system components with the equipment, the instructions provided by the manufacturer for installation of the equipment and the venting system shall include:
  - 3. Detailed instructions for the installation of the venting system design or the venting system components; and
  - 4. A complete parts list for the venting system design or venting system.
- (d) MANUFACTURER REQUIREMENTS - GAS EQUIPMENT VENTING SYSTEM NOT PROVIDED. When the manufacturer of a Product Approved side wall horizontally vented gas fueled equipment does not provide the parts for venting the flue gases, but identifies "special venting systems", the following requirements shall be satisfied by the manufacturer:
  - 5. The referenced "special venting system" instructions shall be included with the appliance or equipment installation instructions; and
  - 6. The "special venting systems" shall be Product Approved by the Board, and the instructions for that system shall include a parts list and detailed installation instructions.
- (e) A copy of all installation instructions for all Product Approved side wall horizontally vented gas fueled equipment, all venting instructions, all parts lists for venting instructions, and/or all venting design instructions shall remain with the appliance or equipment at the completion of the installation.

# START-UP CHECKLIST

## Furnace

|  |  |
|--|--|
| <b>ELECTRICAL</b>  |  |
| Line Voltage (Measure <b>L1 to N</b> and <b>N to Ground</b> Voltage)                 | Model Number _____                                 |
| Secondary Voltage (Measure Transformer Output Voltage)                               | Serial Number _____                                |
| Blower Amps  | L - N _____<br>N - G _____<br>R - C _____<br>_____ |
| <b>BLOWER EXTERNAL STATIC PRESSURE</b>   |  |
| Return Air Static Pressure   | IN. W.C. _____                                     |
| Supply Air Static Pressure   | IN. W.C. _____                                     |
| Total External Static Pressure (Ignoring +/- from the reading above, add total here) | IN. W.C. _____                                     |
| <b>TEMPERATURES</b>  |  |
| Return Air Temperature (Dry bulb / Wet bulb)   | DB °F _____ WB °F _____                            |
| Cooling Supply Air Temperature (Dry bulb / Wet bulb)                                 | DB °F _____ WB °F _____                            |
| Heating Supply Air Temperature   | DB °F _____  |
| Temperature Rise   | DB °F _____  |
| Delta T (Difference between Supply and Return Temperatures)                          | DB °F _____  |
| <b>GAS PRESSURES</b>   |  |
| Gas Inlet Pressure   | IN. W.C. _____                                     |
| Gas Manifold Pressure (Low Fire)   | IN. W.C. _____                                     |
| Gas Manifold Pressure (High Fire)  | IN. W.C. _____                                     |
| Gas Type (NG) = Natural Gas / (LP) = Liquid Propane                                  | _____  |
| <b>Additional Checks</b>   |  |
| Check wire routings for any rubbing  | _____  |
| Check for kinked pressure switch tubing.   | _____  |
| Check flue elbow for alignment and clamp tightness.                                  | _____  |
| Check screw tightness on blower wheel.   | _____  |
| Check factory wiring and wire connections.   | _____  |
| Check product for proper clearances as noted by installation instructions            | _____  |
| Check R-32 sensor wire is connected properly (if applicable)                         | _____  |

**°F to °C formula: (°F - 32) divided by 1.8 = °C**

**°C to °F formula: (°C multiplied by 1.8) + 32 = °F**

**THIS PAGE INTENTIONALLY LEFT BLANK**

**CUSTOMER FEEDBACK**

We are very interested in all product comments.

Please fill out the feedback form on one of the following links:

Goodman® Brand Products: (<http://www.goodmanmfg.com/about/contact-us>).

Amana® Brand Products: (<http://www.amana-hac.com/about-us/contact-us>).

You can also scan the QR code on the right for the product brand you purchased to be directed to the feedback page.



GOODMAN® BRAND



AMANA® BRAND

19001 Kermier Rd. Waller, TX 77484  
[www.goodmanmfg.com](http://www.goodmanmfg.com) • [www.amana-hac.com](http://www.amana-hac.com)  
© 2025 Daikin Comfort Technologies Manufacturing, Inc.

**Amana** is a registered trademark of Maytag Corporation or its related companies and is used under license. All rights reserved.